


SD 77J01C51-11E

 
Unit: mm

External Dimensions

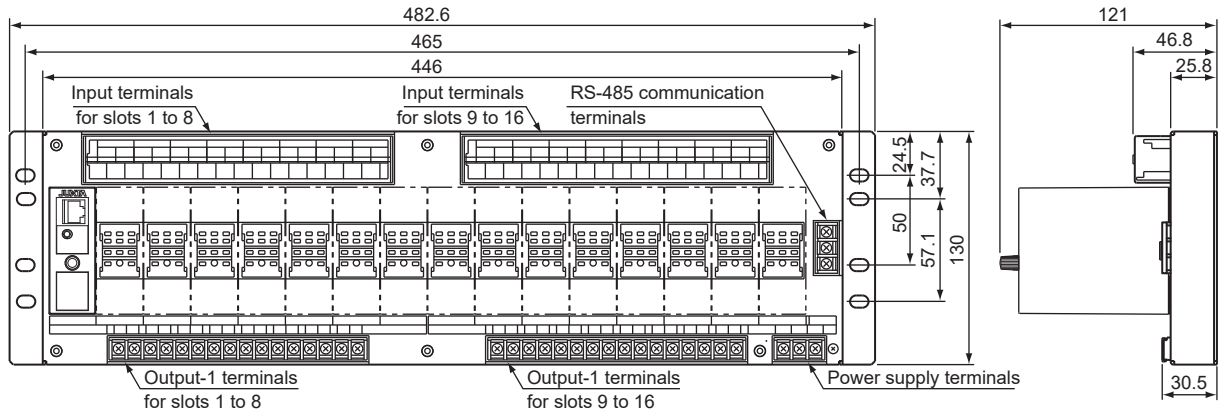

Normal Allowable Deviation= ± (Value of JIS B 0401-2016 tolerance grade IT18) / 2

Assignment of Power Supply Terminals



| Terminal Number | Signal Symbol |
|-----------------|---------------|
| ① | SUPPLY L (+) |
| ② | SUPPLY N (-) |
| ③ | GND \equiv |

Assignment of Input/Output Terminals


| Mountable Signal Conditioners | Input Terminal | | | Output-1 Terminal | |
|--|--|------------|------------|-------------------|------------|
| | 1 | 3 | 4 | 7 | 9 |
| VJH1, VJH7, VJHF, VJHR, VJQ0, VJQ7 VJXS, VJX7 | + | - | Do not use | + | - |
| VJH1/C, VJH1/HC | + | - | | | |
| VJC1 (*1) | Channel-1 | | | Channel-1 | |
| | + | - | Do not use | + | - |
| VJT6 VJU7 (TC or mV input) | + | - | Do not use | + | - |
| VJR6 VJU7 (RTD input) | A | B | B | + | - |
| VJS2, VJS7 | 100% | CENTER | 0% | + | - |
| VJA1 VJA5 VJA7 | PS+ | - | COM | + | - |
| | When using internal power supply | + | Do not use | | |
| | When using external power supply | Do not use | | | |
| When used as an isolator | Do not use | | | | |
| VJA4 (*1) | Channel-1 | | | Channel-1 | |
| | + | - | Do not use | + | - |
| VJB1 | A | ± | Do not use | + | - |
| VJG1 | V | ± | Do not use | + | - |
| VJB3 | A/V | ± | Do not use | + | - |
| VJD1 | V | ± | Do not use | + | - |
| VJP1 | Non-voltage contact / Voltage contact | Do not use | + | - | |
| VJP4 | Internally powered current pulse (two-wire system) | PS+ | + | - | + |
| VJP8 | | | | | |
| VJQ2 | Internally powered voltage pulse (three-wire system) | PS+ | + | - | + |
| VJQ8 | | | | | |
| VJF1 | Do not use | Do not use | Do not use | + | - |
| | Input through one-touch fitting Ø6 of the VJF1. | | | | |
| VJET (*3) | Do not use | Do not use | Do not use | Do not use | Do not use |

*1: Only 1-channel type is mountable.

*2: When receiving current input (current pulse), external shunt resistor (receiving resistor) is required.


*3: Only one VJET can be mounted in slot 16 of the base. Do not mount it in other slots.

*4: For VJR6 (style 3.0 or later) and VJU7, the wiring resistance of input terminals "1" and "3" must be the same.
For VJR6 (style 2.0 or earlier), the wiring resistance of input terminals "1" and "4" must be the same.

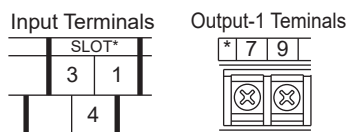

*** in the figure above denote a slot number. Slots are numbered from 1 to 16, beginning with the leftmost slot, when viewed from the VJCE front.

 Assignment of RS-485 communication terminals (Output-2 terminals)



| Terminal Number | Signal Symbol |
|-----------------|---------------|
| ① | RS-485 B (+) |
| ② | RS-485 A (-) |
| ③ | RS-485 COM |

* The terminal for output-2 is multidrop-connected to the output-2 of all slot.