

PGK Ex

Gas Cell for Use in
Potentially Explosive Atmospheres

Installation, Operation, Maintenance

SICK
Sensor Intelligence.



Described Product

Product name: PGK Ex

Manufacturer

SICK AG

Erwin-Sick-Str. 1 · D-79183 Waldkirch · Germany

Phone: +49 7641 469-0

Fax: +49 7641 469-1149

E-Mail: info.pa@sick.de

Place of Manufacture

SICK AG

Rengoldshauser Str. 17a · 88662 Überlingen · Germany

Legal information

This work is protected by copyright. All rights derived from the copyright shall be reserved for SICK AG. Reproduction of this document or parts of this document is only permissible within the limits of the legal determination of Copyright Law.


Any modification, shortening or translation of this document is prohibited without the express written permission of SICK AG.

The trademarks stated in this document are the property of their respective owner.

© SICK AG. All rights reserved.

Original document

This document is an original document of SICK AG.

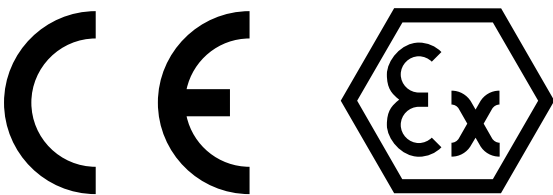



Contents

1	Important Information	5
1.1	Main hazards.....	5
1.2	Intended use	5
1.2.1	Product identification	5
1.2.2	Purpose of the cell.....	5
1.2.3	Limitations	5
1.3	Potentially explosive atmospheres and sample gases.....	6
1.4	Responsibility of user.....	6
2	Product Description.....	7
2.1	Important information on usage in Ex zones	7
2.2	Important information on using combustible sample gases.....	7
2.3	PGK Ex cell description	8
2.3.1	Materials used	8
2.3.2	Thermostatic control.....	8
3	Installation.....	9
3.1	Information on Ex zones and combustible gases	9
3.2	Installation.....	9
3.2.1	Connecting sample gas	10
3.2.1.1	Preparation work.....	10
3.2.1.2	Sample gas connection	11
3.2.1.3	Carrying out the leak test	12
3.2.2	Connecting purge gas.....	13
3.2.3	Electrical installation	14
3.2.3.1	Preparation work.....	14
3.2.3.2	Electrical connection.....	14
4	Commissioning / Operation.....	16
4.1	Commissioning.....	16
4.1.1	Safety information on commissioning	16
4.1.2	Commissioning procedure.....	16
4.2	Operation.....	17
5	Decommissioning.....	18
5.1	Decommissioning.....	18
5.2	Disposal	18

- 6 Maintenance..... 19**
 - 6.1 Information on working on the cell 19
 - 6.2 Maintenance plan..... 19
 - 6.3 Recommended spare parts for 2 years operation 20
 - 6.4 Removing the cell from the MCS300P 21
 - 6.5 Working on the Cell 21
 - 6.5.1 Removing the cell from the insulating housing 21
 - 6.5.2 Removing the cell with cell heating..... 22
 - 6.5.3 Working on the cell body..... 23
 - 6.5.3.1 Removing the flanges..... 23
 - 6.5.3.2 Removing the protective and cell windows and seals 24
 - 6.5.3.3 Fitting the protective and cell windows and seals 24
 - 6.5.3.4 Installing the flanges 25
 - 6.5.4 Inserting the cell in the cell heating 25
 - 6.5.5 Install the cell in the insulating housing. 25
 - 6.6 Fitting the cell on the MCS300P Ex 25
- 7 Clearing Malfunctions 26**
 - 7.1 Clearing malfunctions..... 26
- 8 Technical Specification 27**
 - 8.1 Compliance 27
 - 8.2 Approval for potentially explosive atmospheres 27
 - 8.3 Technical drawing (example, 75 cm cell) 28
 - 8.4 Technical data 29

1 Important Information

1.1 Main hazards

	<p>CAUTION: Noxious and irritating sample gases</p> <p>When the sample gas contains noxious or irritant substances:</p> <ul style="list-style-type: none"> ▶ Operate the PGK Ex in a safe manner (see “Safety information on commissioning”, page 16)
	<p>WARNING: Risk of explosions by severe mechanical stress</p> <p>The cell can become leaky when the mechanical stress is too severe.</p> <ul style="list-style-type: none"> ▶ Do not subject the PGK Ex to severe mechanical stress (e.g. dropping, jolts).

1.2 Intended use

1.2.1 Product identification

Manufacturer:	SICK AG Erwin-Sick-Str. 1 · D-79183 Waldkirch · Germany	
Place of manufacture:	SICK AG Rengoldshauser Str. 17a · 88662 Überlingen · Germany	
Cell	Material	Part No.
PGK10-Ex (10 cm) ^[1]	Stainless steel	2041807
PGK20-Ex (20 cm)	Stainless steel	2041808
PGK50-Ex (50 cm)	Stainless steel	2041809
PGK75-Ex (75 cm)	Stainless steel	2041810
PGK10-Ex (10 cm)	Hastelloy	2070997
PGK20-Ex (20 cm)	Hastelloy	2070998
PGK50-Ex (50 cm)	Hastelloy	2070999
PGK75-Ex (75 cm)	Hastelloy	2071000

[1] Optical path length

The type plate is located on the connection box (see “PGK view”, page 8).

1.2.2 Purpose of the cell


The PGK Ex cell is part of a measuring system for analyzing gas mixtures.

1.2.3 Limitations

- When used in potentially explosive atmospheres: The PGK Ex may only be used on an MCS300P Ex.
- ▶ Check whether the cell is suitable for the sample gas composition planned.
 - List with materials used in the cell: Refer to the Data Sheet delivered with the cell.
 - In case of doubt, contact your local SICK Sales Office.

1.3 Potentially explosive atmospheres and sample gases



- The PGK Ex corresponds to the ATEX category (according to ATEX Directive 2014/34/EU):
 II 2G Ex eb IIC Gb
 - PGK Ex corresponds to the IEC Ex category (according to IEC Directive 60079):
Ex II 2G Ex eb IIC Gb
 - The PGK Ex is suitable for measuring combustible and occasionally ignitable gases (in accordance with Zone 1) (see [“Important information on using combustible sample gases”](#), page 7).
-

1.4 Responsibility of user

Designated users

The PGK Ex cell may only be installed by skilled persons who, based on their technical training and knowledge as well as knowledge of the relevant regulations, can assess the tasks given and recognize the dangers involved.

Correct use

- ▶ Use the cell only as described in these Operating Instructions.
The manufacturer bears no responsibility for any other use.
- ▶ Have the prescribed maintenance work performed.
- ▶ Do not remove, add or modify any components in or on the cell. Otherwise:
 - The cell can become dangerous.
 - Any warranty by the manufacturer becomes void.

Special local conditions

- ▶ In addition to these Operating Instructions, observe all local laws, technical regulations and company-internal operating directives applicable at the installation location of the device.

Further documents

- Operating Instructions for the MCS300P Ex (for assembling the cell on an MCS300P Ex).

Keeping documents


These Operating Instructions:

- ▶ Must be available for reference.
- ▶ Must be passed on to new owners.

2 Product Description

2.1 Important information on usage in Ex zones



- The PGK Ex corresponds to the ATEX category (according to ATEX Directive 2014/34/EC):
 II 2G Ex eb IIC Gb
- PGK Ex corresponds to IEC Ex category (according to IEC Directive 60079):
 Ex II 2G Ex eb IIC Gb
- The Ex marking is on the type plate:
 SICK AG
 PGK10 Ex
 II 2G Ex eb IIC Gb
 BVS 10 ATEX ... (= number of ATEX Type Examination Certificate)
 BVS 17 ATEX ... (= number of IEC Type Examination Certificate)
- ▶ Only use the PGK Ex on an MCS300P Ex.
- ▶ Only use the PGK Ex with a fault current or isolation monitoring system.
- ▶ Do not remove, add or modify and components on or in the PGK Ex. Otherwise the approval for use in potentially explosive atmospheres becomes void.
- ▶ Adhere to the prescribed maintenance intervals (see [“Maintenance plan”, page 19](#)).
- ▶ Maximum surface temperature is 150 °C (300 °F)
 Cell temperature must not be set higher than 150 °C (300 °F) (external temperature limiter).

2.2 Important information on using combustible sample gases

The PGK Ex cell is suitable for measuring combustible and occasionally ignitable gases (in accordance with Zone 1).

There is no ignition source present in the part of the cell with sample gas contact.

- ▶ An inert purge gas must be used when feeding combustible or occasionally ignitable sample gas (in accordance with Zone 1) (see [“Connecting purge gas”, page 13](#)).


2.3 PGK Ex cell description

The sample gas is channeled through a sample compartment limited by a window on the side.

The measuring beam of a connected analyzer travels lengthwise through the cell and through the sample compartment. The measuring beam is attenuated by sample gas, depending on the sample gas, and the analyzer evaluates this attenuation.

Protective windows between the sample compartment windows and the flanges to the analyzer form a purge gas compartment. This can be purged via purge gas connections. This allows, for example, flushing out gas from leaks in the cell window and detecting such leaks.

Fig. 1: PGK view

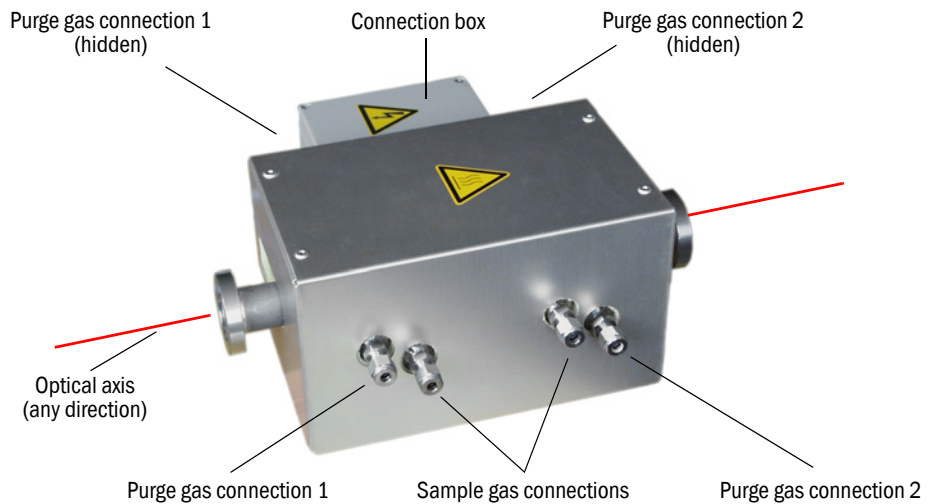

2.3.1 Materials used

Different materials are used for the windows and seals depending on the spectral range and application conditions.

- The cell can be used for reactive and corrosive gases depending on the materials used.
- The maximum operating pressure depends on the materials used.



► Refer to the Data Sheet delivered with the cell for the materials used.

2.3.2 Thermostatic control

The cell has integrated heating cartridges.

Two independent Pt sensors are fitted for cell temperature control.

- The temperature is controlled using one of the Pt 100 sensors using an external temperature controller for Pt 100 sensors.
- An external temperature limiter connected to the second temperature controller for Pt 100 sensors is required for monitoring the temperature controller. This limiter must switch the heating off definitely at a preset temperature (max. 150 °C (300 °F)). The heating must be not able to restart automatically.

(The temperature controllers are available as an option).

3 Installation

3.1 Information on Ex zones and combustible gases



For PGK Ex used in potentially explosive atmospheres or used with combustible or occasionally ignitable sample gases (in accordance with Zone 1):

- ▶ Check that the Ex identification is on the cell type plate (see “Important information on usage in Ex zones”, page 7).
- ▶ Installation, commissioning, maintenance and testing may be performed only by experienced persons who have knowledge of the rules and regulations for potentially explosive atmospheres, particularly:
 - Ignition protection types
 - Installation regulations
 - Zone classification
- ▶ Only use the PGK Ex with a fault current or isolation monitoring system.
- ▶ Applicable standards (examples):
 - IEC 60079-14, Annex F: Knowledge, skills and competencies of responsible persons, operatives and designers.
 - IEC 60079-17: Electrical installations inspection and maintenance
 - IEC 60079-19: Equipment repair, overhaul and reclamation



WARNING: Risk of explosions when the sample gas throughput is too high
When using combustible or occasionally ignitable sample gas (in accordance with Zone 1):

- ▶ Operator to limit sample gas throughput to 100 l/h



Maximum surface temperature is 150 °C (300 °F).


- ▶ Cell temperature must not be set higher than 140 °C (285 °F) (external temperature limiter).

3.2 Installation

The PGK Ex is normally installed on a SICK MCS300P Ex analyzer.

The location of the measurement beam inlet and outlet is arbitrary.

Fig. 2: PGK Ex cell on the MCS300P Ex

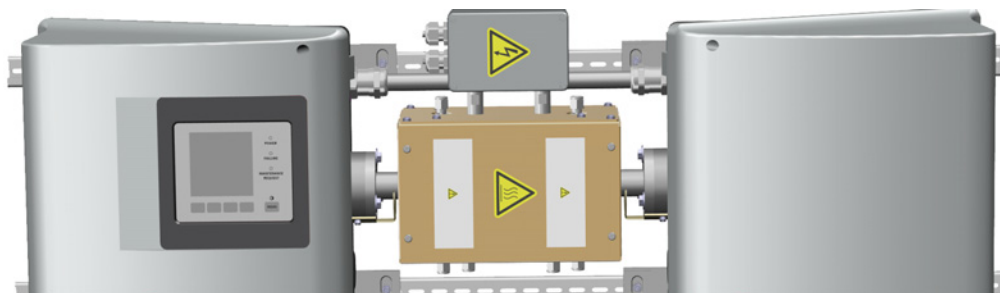

If you have to install the cell yourself: → Operating Instructions of the MCS300P Ex.

Final installation steps:

- 1 Connect sample gas, see “Connecting sample gas”, page 10.
- 2 Connect purge gas (option), see “Connecting purge gas”, page 13.
- 3 Electrical installation, see “Electrical installation”, page 14.

3.2.1 Connecting sample gas

Gas connections may only be performed by skilled persons who, based on their technical training and knowledge:

- Are familiar with handling pipes and pipe connections.
- Are capable of performing suitable leak tests.



CAUTION: Damage through condensate

Condensate can form on the sample gas outlet when using wet and hot sample gas.

- ▶ Keep the line opening free from any blockages.
- ▶ Always lay the line so that it runs downwards and no condensate can occur.
- ▶ Protect the sample gas outlet from frost.
- ▶ If necessary, provide a suitable condensate collecting device and adequate ventilation.

Check and empty the condensate collection container regularly.



CAUTION: Damage resulting from overpressure.

Blocked pipes can falsify measured values and possibly damage the cell.

- ▶ The sample gas outlet may not increase the working pressure.
 - ▶ Only use tubes and tube screw fittings that are adequate for the required pressure.
 - ▶ Do not bend or crimp the pipes.
-

3.2.1.1 Preparation work



WARNING: Danger to life/health risk by noxious gases

If noxious gases are applied to the cell, emerging gas can damage health.

- ▶ Lay the outlets of the cell into the open or into a suitable collecting channel.
- ▶ Pay attention to the information from the equipment operator.

A leak in the gas path can create acute danger for persons.

- ▶ Take suitable safety measures.
-




CAUTION: Possibly provide initial thermal stabilization for cold sample gas.

When cold sample gas is fed to a heated cell, it is possible that the measurement signal becomes unstable due to thermal turbulence.

- ▶ Plan suitable initial thermal stabilization when necessary.
-

3.2.1.2 Sample gas connection

Fig. 3: Sample gas connections

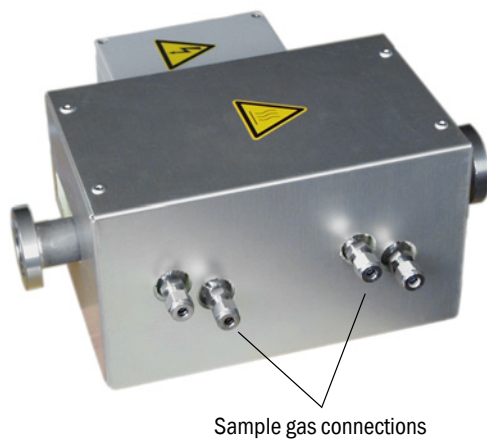


- ▶ Connect sample gas pipes gas-tight.
 - *Vertical assembly:* Sample gas inlet below, sample gas outlet above (recommended).
 - *Horizontal assembly:* Sample gas inlet and sample gas outlet arbitrary.

Information: Only use suitable pipes for the sample gas, e.g. PTFE pipes.

Information on plastic pipes: Use support sleeves.


Fig. 4: Clamping ring screw connection

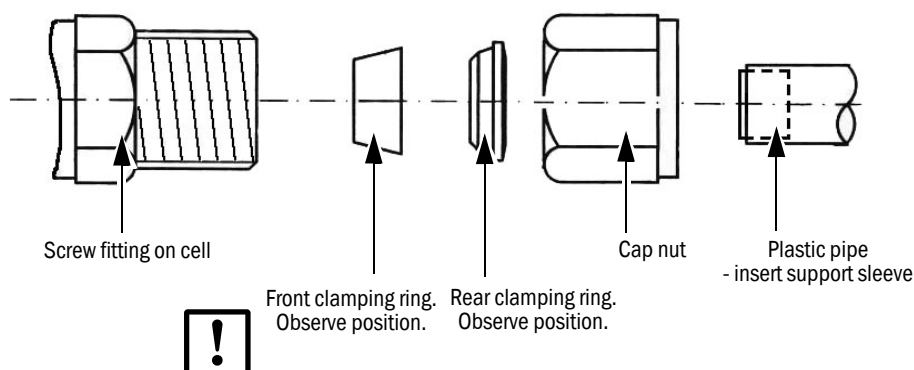

4 Carry out leak test.

3.2.1.3 Carrying out the leak test

Fig. 5: Leak test arrangement

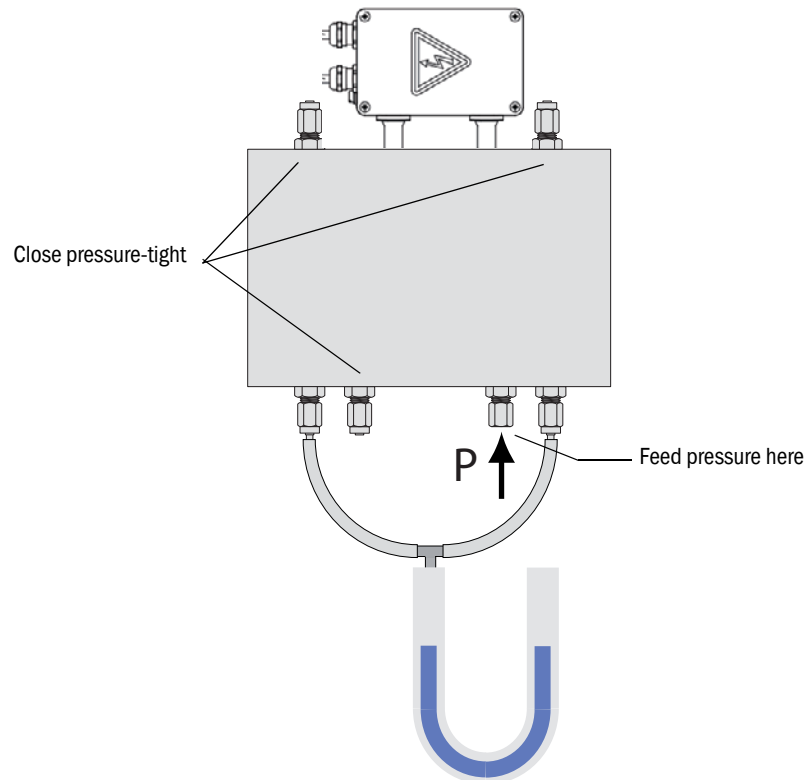

WARNING: Risk of bursting with high pressure

Glass splinters can escape from the pipes should a window break.

- ▶ Bring the cell to a safe place and cover the pipes.


- 1 Bring the cell up to operating temperature.
- 2 Slowly apply 1.5 times the operating pressure to the cell sample gas compartment.
- 3 Use a transparent plastic hose with 400 mm water column to monitor leak tightness. 1 mm water column corresponds to 0.1 mbar. The water column must not change for 1 minute after the pressure has been increased.

3.2.2 Connecting purge gas

Fig. 6: Purge gas connections

Purge gas connection 1
(hidden)

Purge gas connection 2
(hidden)

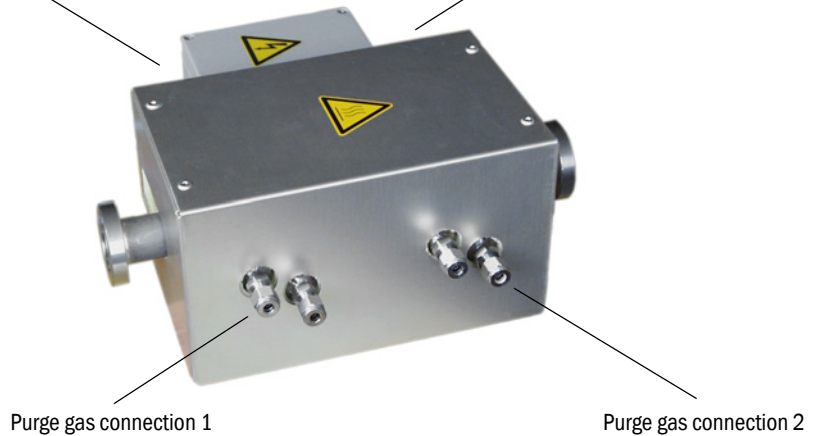

- An inert purge gas (e.g. nitrogen) must be used when measuring combustible or occasionally ignitable sample gas (in accordance with Zone 1).
- Feeding into the purge compartments must run via a return valve (provided by operator).
- Purge gas disposal must be made against atmospheric pressure and using lines with a larger cross-section than those for the purge gas pipes to the cell.
- The operator must ensure purge gas pressure and purge gas flow.
- Measuring medium may only be fed into the cell when purge gas flow is available.
- The operator must ensure safe disposal of the purge gas as well as any sample gas escaping after a malfunction.
- Purge gas conditions:
 - Flow rate: 2 ... 100 l/h (0.1 ... 35 cu.foot/h)
 - Primary pressure: Max. 3 bar (300 kPa)

Procedure

- ▶ Connect purge gas lines.

3.2.3 Electrical installation



When used in potentially explosive atmospheres:


- ▶ Observe information, see “Information on Ex zones and combustible gases”, page 9.

3.2.3.1 Preparation work

- Install a suitable power disconnecting device to be able to disconnect from the power supply and make all poles potential-free.
- Install a suitable power fuse for the cell heater.
 - 4 A for PGK10/PGK20/PGK50 (with 115 V and 230 V)
 - 8 A for PGK75 (with 115 V and 230 V)
- Install a temperature controller and limiter for Pt 100 sensors.

3.2.3.2 Electrical connection

Fig. 7: Connection box

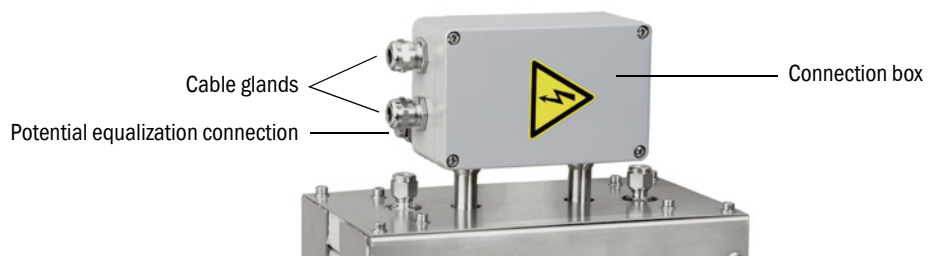


- 1 Loosen 4 screws on the connection box cover.
- 2 Take the cover off.



A wiring diagram is in the connection box cover.

Fig. 8: Connecting diagram

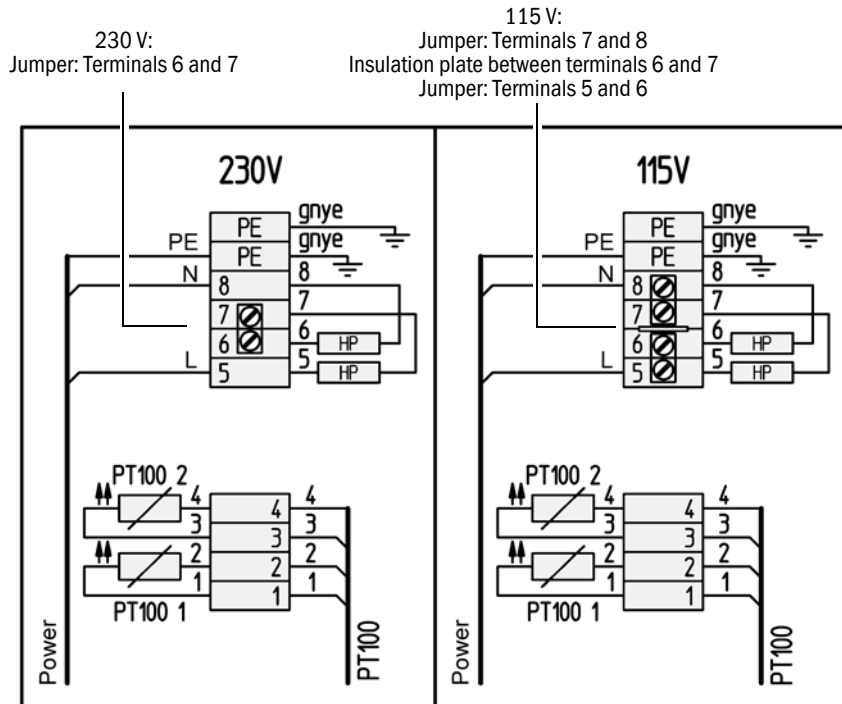

**NOTE:** Pay attention to jumpers

- ▶ Jumpers and insulation plate depend on the power voltage available. These are preconfigured.
- ▶ Changes to the power voltage setting (jumpers) may only be carried out by a qualified skilled person with knowledge of electrical circuits in Ex areas.

-
- 4 Lead connection lines for power voltage and Pt100 (specification, see [“Technical data”](#)) through the cable glands and connect in the connection box.
Pay attention to the cable glands (specification, see [“Technical data”](#)).
 - 5 Screw the cable glands tight.
 - 6 Position the connection box cover and screw tight.

**WARNING:** Risk of explosions. Check seal

- ▶ Make sure the cover seal is in perfect condition.
- ▶ Do not use the connection box anymore when the seal shows signs of damage. Contact SICK Customer Service.

-
- 7 Connect the potential equalization to the terminal for potential equalization (line: 2.5 mm²).
 - 8 Connect the cell to the external temperature control.

**WARNING:** Hazard when the temperature is too high

The cell heating must be switched off definitely should the temperature limiter trigger (the cell must not restart automatically).

4 Commissioning / Operation

4.1 Commissioning

4.1.1 Safety information on commissioning



WARNING: Risk of explosions by severe mechanical stress
The cell can become leaky when the mechanical stress is too severe.

- ▶ Check the PGK Ex visually for perfect condition.
- ▶ In case of doubt, carry out a leak test (see “Carrying out the leak test”, page 12).



WARNING: Mortal/health danger as a result of gas path leakage
When noxious gases are fed to the cell:
A leak in the gas path can create an acute danger for persons.

- ▶ When required, carry out a leak test (see “Carrying out the leak test”, page 12).

4.1.2 Commissioning procedure

- 1 Check sample gas feed for:
 - Damage
 - Leak tightness
 - Continuity
 - Functional capability of sample gas filter
 - Correct sample gas pressure setting
 - When heated: Functional capability of heater
- 2 Let the cell heat up.



There is a risk of condensation in the cell when gas is fed to a cold cell.

- ▶ Let the cell heat up.
- ▶ Then feed sample gas.

- a) When used under ambient temperature without heating:
 - Allow the cell to adapt to the gas temperature for approx. 5 h.
- b) When using the cell heating:
 - Check the setting of the temperature controller.



- ▶ Check that the temperature controller and limiter are not set higher than the allowable temperatures (→ Data Sheet) and observe the maximum temperature of 150 °C (300 °F).

Heating up time:

- From room temperature to approx. 50 °C (120 °F): Approx. 1 hour
- From room temperature to approx. 150 °C (300 °F): Approx. 4 hours

- 3 Set the purge gas flow rate.
Flow rate: 2 ... 100 l/h (0.1 ... 35 cu.foot/h)
- 4 Feed sample gas.

- Max. sample gas temperature: 150 °C (300 °F).

When the cell is operated with pressure: Apply pressure slowly.

- Max. pressure: → Data Sheet
- Set the sample gas flow rate:
- Recommended flow rate: 30 ... 1000 l/h



When measuring combustible or occasionally ignitable gases (in accordance with Zone 1): Limit sample gas flow rate to max. 100 l/h.

4.2 Operation



WARNING: Risk of burns on hot surface
Cell and gas connections can be very hot.
▶ Do not touch the surface.

The cell operates automatically.

In regular intervals:

- ▶ Check the cell and connected pipes for:
 - Damage
 - Leak tightness
 - Continuity
- ▶ If a condensate container is fitted: Check fill level regularly.

5 Decommissioning

5.1 Decommissioning



WARNING: Hazard resulting from substances remaining in the cell

Depending on the sample gas composition, toxic or corrosive gases can remain in the cell and connected pipes when the gas supply is switched off. If necessary:

- ▶ Purge the cell and connected pipes for at least 1 h with inert gas (e.g.: N₂).
 - ▶ Take suitable protective measures (e.g. work under a vent, wear suitable protective clothes).
 - ▶ Decontaminate the cell.
-

- 1 Switch off the sample gas feed and ensure that no more gas can flow into the cell.
 - 2 Depending on the sample gas composition, purge the cell and the connected pipes for at least 1 h with inert gas.
 - 3 Ensure that there is no pressure.
 - 4 Switch purge gas off when used.
 - 5 If heating is connected: Switch the heating off and disconnect where necessary.
 - 6 If the cell is to be put out of operation for a longer period: Close the gas inlets airtight.
-



WARNING: Risk of burns on hot surface

Cell and gas connections can be very hot.

- ▶ Allow the cell and gas connections to cool down before touching them.
-



WARNING: Danger when storing or dispatching

If the cell can contain deposits dangerous to health and the cell is to be stored or sent somewhere:

- ▶ Mark the cell *clearly*:
 - Which gases were in the cell.
 - Which hazards exist (e.g. when disassembling the cell).
 - How the cell was cleaned.
-

5.2 Disposal

- ▶ Observe local regulations.
- ▶ Dispose of electronic components (heating cartridges) as electronic waste.
- ▶ Dispose of metal parts as scrap metal.
- ▶ Dispose of windows and seals as residual waste.
- ▶ If the cell was used with toxic substances or substances harmful to the environment and there is a risk that deposits of these substances still cling to parts with media contact: Dispose of parts with media contact as hazardous waste.

6 Maintenance

6.1 Information on working on the cell



For cells used in potentially explosive atmospheres:

- ▶ Use original SICK spare parts only.
- ▶ Maintenance and inspection should only be carried out by experienced personnel with knowledge of the rules and regulations for potentially explosive atmospheres, especially:
 - Ignition protection types
 - Installation regulations
 - Zone classification
- ▶ Applicable standards (examples):
 - IEC 60079-14, Annex F: Knowledge, skills and competencies of responsible persons, operatives and designers.
 - IEC 60079-17: Electrical installations inspection and maintenance.
 - IEC 60079-19: Equipment repair, overhaul and reclamation.

6.2 Maintenance plan

Maintenance interval	Maintenance work
1 year	<ul style="list-style-type: none"> ▶ Disassemble and clean the cell. <p><i>Recommendation:</i></p> <ul style="list-style-type: none"> ▶ Renew O-rings with media contact. ▶ Renew the cell windows (could be severely damaged during disassembly).
2 years	<ul style="list-style-type: none"> ▶ Additionally: Renew O-rings and protective window in purge gas flange.



NOTE: Malfunction hazard

Maintenance work on the PGK Ex may only be carried out by skilled persons trained on the PGK Ex.

6.3 Recommended spare parts for 2 years operation



WARNING: Malfunction hazard
 ▶ Use original SICK spare parts only.



WARNING: Risk of leaks and bursting when incorrect seal or window materials are used
 The maximum operating pressure and therefore cell leak tightness depend on the window and seal materials used.
 ▶ Observe the maximum operating pressure: see “Technical data”, page 29 or Data Sheet.
 ▶ Only use window and seal materials specified in the Data Sheet.

Assembly kits ^[1]	Quantity ^[2]	Y ^[3]	2Y ^[4]	Part No.
Cell-side windows and seals - Isolast				
1 set quartz windows 32 x 5 with Isolast O-ring, washer and thrust ring	2	●		2024087
1 set CaF2 windows 32 x 5 with Isolast O-ring, washer and thrust ring	2	●		2024089
1 set BaF2 windows 32 x 5 with Isolast O-ring, washer and thrust ring	2	●		2024088
Cell-side windows and seals - Kalrez				
1 set quartz windows 32 x 5 with Kalrez O-ring, washer and thrust ring	2	●		2055958
1 set CaF2 windows 32 x 5 with Kalrez O-ring, washer and thrust ring	2	●		2055960
1 set BaF2 windows 32 x 5 with Kalrez O-ring, washer and thrust ring	2	●		2055959
Protective window and seals, purge flange				
1 set quartz protective windows 32 x 5 with Viton O-ring, washer and thrust ring	2		●	2023647
1 set CaF2 protective windows 32 x 5 with Viton O-ring, washer and thrust ring	2		●	2023649
1 set BaF2 protective windows 32 x 5 with Viton O-ring, washer and thrust ring	2		●	2023648

[1] see “Exploded view of the cell body”, page 23
 [2] Number of sets per maintenance
 [3] Recommendation: Renew yearly
 [4] Recommendation: Renew every 2 years

6.4 Removing the cell from the MCS300P




Cell disassembly from MCS300P Ex → Operating Instructions of the MCS300P Ex

6.5 Working on the Cell

6.5.1 Removing the cell from the insulating housing


Fig. 9: Removing the cell from the insulating housing

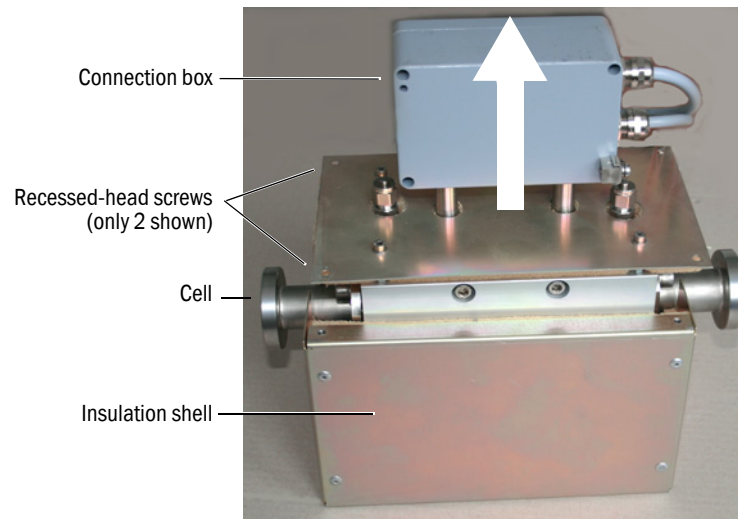

- 1 Insert the cell so that the connection box points upwards.
- 2 Unscrew 4 recessed-head screws on the top side of the enclosure.
- 3 Lift the cell with connection box out of the insulation shell.

6.5.2 Removing the cell with cell heating

Fig. 10: Take off the top heat conduction plate

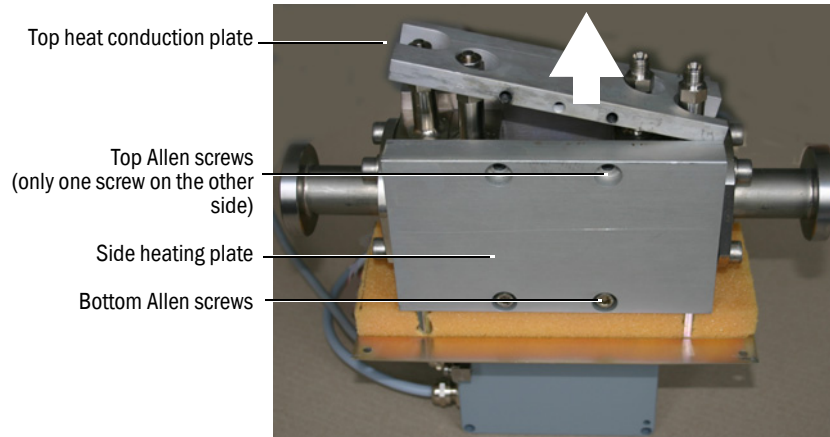

NOTE:


Do not damage connection lines for heating cartridges.



Mark position of the plates to be unscrewed (e.g. with a pencil line).

- 1 Position the cell on the connection box.
- 2 On the side heating plates:
 - Loosen the *bottom* 6 mm Allen screws slightly (1/2 turn at the most).
 - Unscrew the *top* 6 mm Allen screw(s) from the cell.
- 3 Pull the top heat conduction plate out upwards.
- 4 Mark position of the cell (e.g. with a pencil line).
- 5 Pull the cell out.

Fig. 11: Removing the cell with heating plates

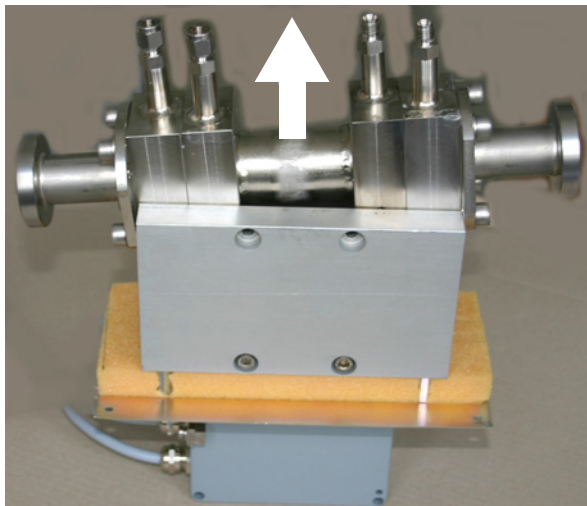

6.5.3 Working on the cell body





WARNING: Toxic and acidic deposits

Toxic, acidic or corrosive gases or deposits can be present in parts of the cell depending on the sample gas.

- ▶ Ensure adequate ventilation.
- ▶ As necessary, take suitable protective measures (e.g work under a vent, wear breathing protection, protective goggles or safety mask, protective gloves and acid-proof protective clothes).

Fig. 12: Exploded view of the cell body

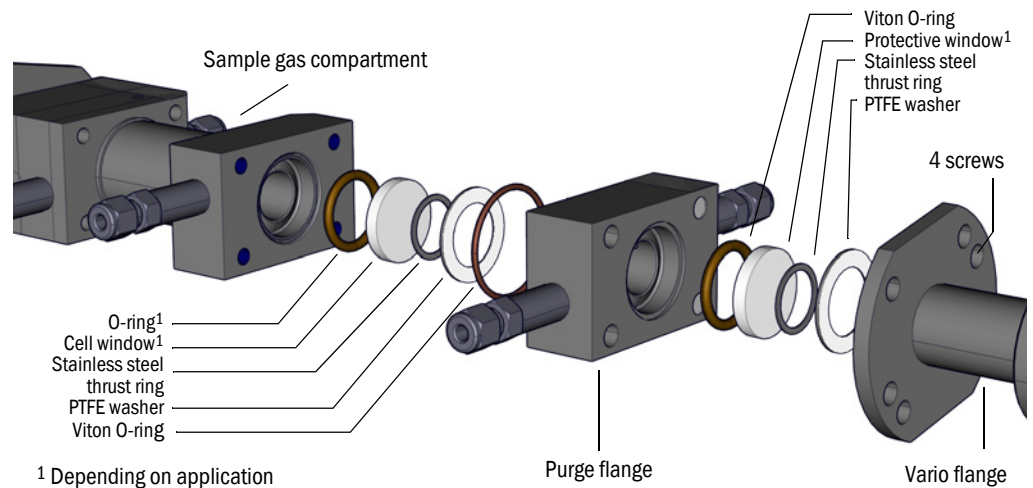

 Technical drawing, see ["Technical drawing \(example, 75 cm cell\)"](#), page 28

6.5.3.1 Removing the flanges



NOTE:

- ▶ Make sure the cell window does not fall out during removal.
- ▶ Protect windows from contamination and damage.

- 1 Position the cell so that the flange to be disassembled points upwards.
- 2 Unscrew 4 screws (Allen screw M8) on the cell face side.
- 3 Remove the vario flange (seals can stick).
The protective window can now be accessed
(Exchanging the windows → both following Sections).
- 4 Take off the purge flange (seals can stick).
The cell window can now be accessed
(Exchanging the window → both following Sections).

6.5.3.2 Removing the protective and cell windows and seals

Removal of the protective and cell windows is identical.

- 1 Take off the PTFE seal.
- 2 Take off the stainless steel thrust ring.



NOTE:

- ▶ Do not touch cell window with your fingers (wear gloves, if required) and do not contaminate the window.
-

- 3 Remove the window (e.g. using a suction cap).
Place the window in a clean and secure place.
- 4 Take out the O-ring (cell window-side, 2 O-rings).

6.5.3.3 Fitting the protective and cell windows and seals

Fitting the protective and cell windows is identical. Consider the additional O-ring for the cell window (see Fig. 12).

- 1 Carefully clean the sealing surfaces.
 - If necessary, use cotton swabs or wooden sticks for cleaning, and possibly acetone.
 - Use new O-rings.
Make sure O-rings are made of the correct material.
Do not mix up the O-rings.
 - 2 Insert O-rings carefully.
-



WARNING: Risk of bursting with scratched windows and high pressure

Windows can burst when scratched and with high operating pressure.

- ▶ Only use windows in perfect condition.
-



NOTE: Make sure the cell is clean

Sample gas and purge gas compartments must be clean before assembly.

Cleaning agent residues could affect measurement.

The windows must be clean.

- ▶ Do not touch the windows with your fingers.
-

- 3 If necessary, clean the window carefully with a soft cloth.
Suitable cleaning agent (depending on the sample gas):
 - Demineralized water
 - Isopropanol
 - AcetoneDo not use any other cleaning agents and no scouring cloths.
Carefully dry the window after cleaning (no marks should remain).
- 4 Check window for perfect condition and insert.
- 5 Lay PTFE sealing ring centered to opening.
- 6 Lay the stainless steel thrust ring in the PTFE sealing ring.

6.5.3.4 Installing the flanges



NOTE:

During flange assembly, make sure the windows do not fall out and get dirty.

- 1 Carefully clean the sealing surfaces.
- 2 Insert the cell window (see “Fitting the protective and cell windows and seals”, page 24).
- 3 Position the purge flange (according to markings made).
- 4 Insert the protective window (see “Fitting the protective and cell windows and seals”, page 24).
- 5 Position the Vario flange (according to markings made) on the purge flange (the flange is seated slightly tilted).
- 6 Tighten 4 screws slowly and evenly, then screw tight.
- 7 Perform a suitable leak test (see “Carrying out the leak test”, page 12).

6.5.4 Inserting the cell in the cell heating

Use the markings made during assembly.



WARNING: Hazard through leaky cell

- ▶ Check the cell with a suitable leak test before assembling (see “Carrying out the leak test”, page 12).

- 1 Push the cell with 2 gas connections down between the side heating plates (see Fig. 11).
- 2 Insert the top heat conduction plate.
- 3 Screw all screws of the side plates tight again.

6.5.5 Install the cell in the insulating housing.

- 1 Fit the cell in the insulating housing (see Fig. 10).
- 2 Screw the screws of the insulating housing tight.

6.6 Fitting the cell on the MCS300P Ex

The cell is normally operated on an MCS300P Ex.

The location of the measurement beam inlet and outlet is arbitrary.

Recommendation: Fit the cell in the same direction as beforehand.



Assembling the cell on an MCS300P Ex: → Operating Instructions of the MCS300P Ex.

7 Clearing Malfunctions

7.1 Clearing malfunctions

Malfunction	Possible cause	Information
Gas flow rate inadequate.	Sample gas path blocked.	Clean.
Leak.	Sample gas path leaky.	Seal.
	Cell window leaky.	Clean or renew window (see “Working on the Cell”, page 21).
Temperature limiter has triggered.	Temperature on temperature controller set too high.	Set temperature.
	Pt100 defective	Contact SICK Customer Service.
Temperature varies considerably.	Power connection incorrect.	Provide power connection.
	Temperature controller defective.	Have the temperature controller repaired or replaced.
Heating does not work.	No voltage supply.	Provide power connection.
	Heating defective.	Contact SICK Customer Service.
Condensate in the cell.	Temperature below dew point.	Check cell and clean as necessary. Check thermostatic control. Heat sample gas feed. Dry sample gas (e.g. gas cooler).
Not enough energy at the analyzer detector.	Cell window or mirror soiled.	Clean cell (see “Working on the Cell”, page 21).
Unstable measurement signal.	Temperature difference between cell and sample gas very high.	Adjust temperature.
	Cell window or mirror soiled.	Check cell temperature. Clean cell (see “Working on the Cell”, page 21).
	Temperature controller hysteresis too large	Reduce hysteresis.
Measured values incorrect	For heated cell: Sample or purge gas flow rate too high so that cell cools down.	Adjust gas flow rate or preheat gas.
	After cleaning: Cleaner in sample gas or purge gas compartment.	Clean cell thoroughly

8 Technical Specification

8.1 Compliance

The technical design of this device complies with the following EU directives and EN standards:

- EC Directive: EMC (Electromagnetic Compatibility)

Applied EN standards:

- EN 60079-0: Explosive atmospheres - Equipment - General requirements
- EN 60079-7: Explosive atmospheres - Equipment protection by increased safety “e”
- EN 61326, Electrical equipment for measurement technology, control technology and laboratory use - EMC requirements




8.2 Approval for potentially explosive atmospheres



- The PGK Ex corresponds to the ATEX category (according to ATEX Directive 2014/34/EC):
⊕ II 2G Ex eb IIC Gb
- PGK Ex corresponds to IEC Ex category (according to IEC Directive 60079):
Ex II 2G Ex eb IIC Gb
- EU Type Examination Certificate:
BVS 10 ATEX E 087 U

8.3 Technical drawing (example, 75 cm cell)

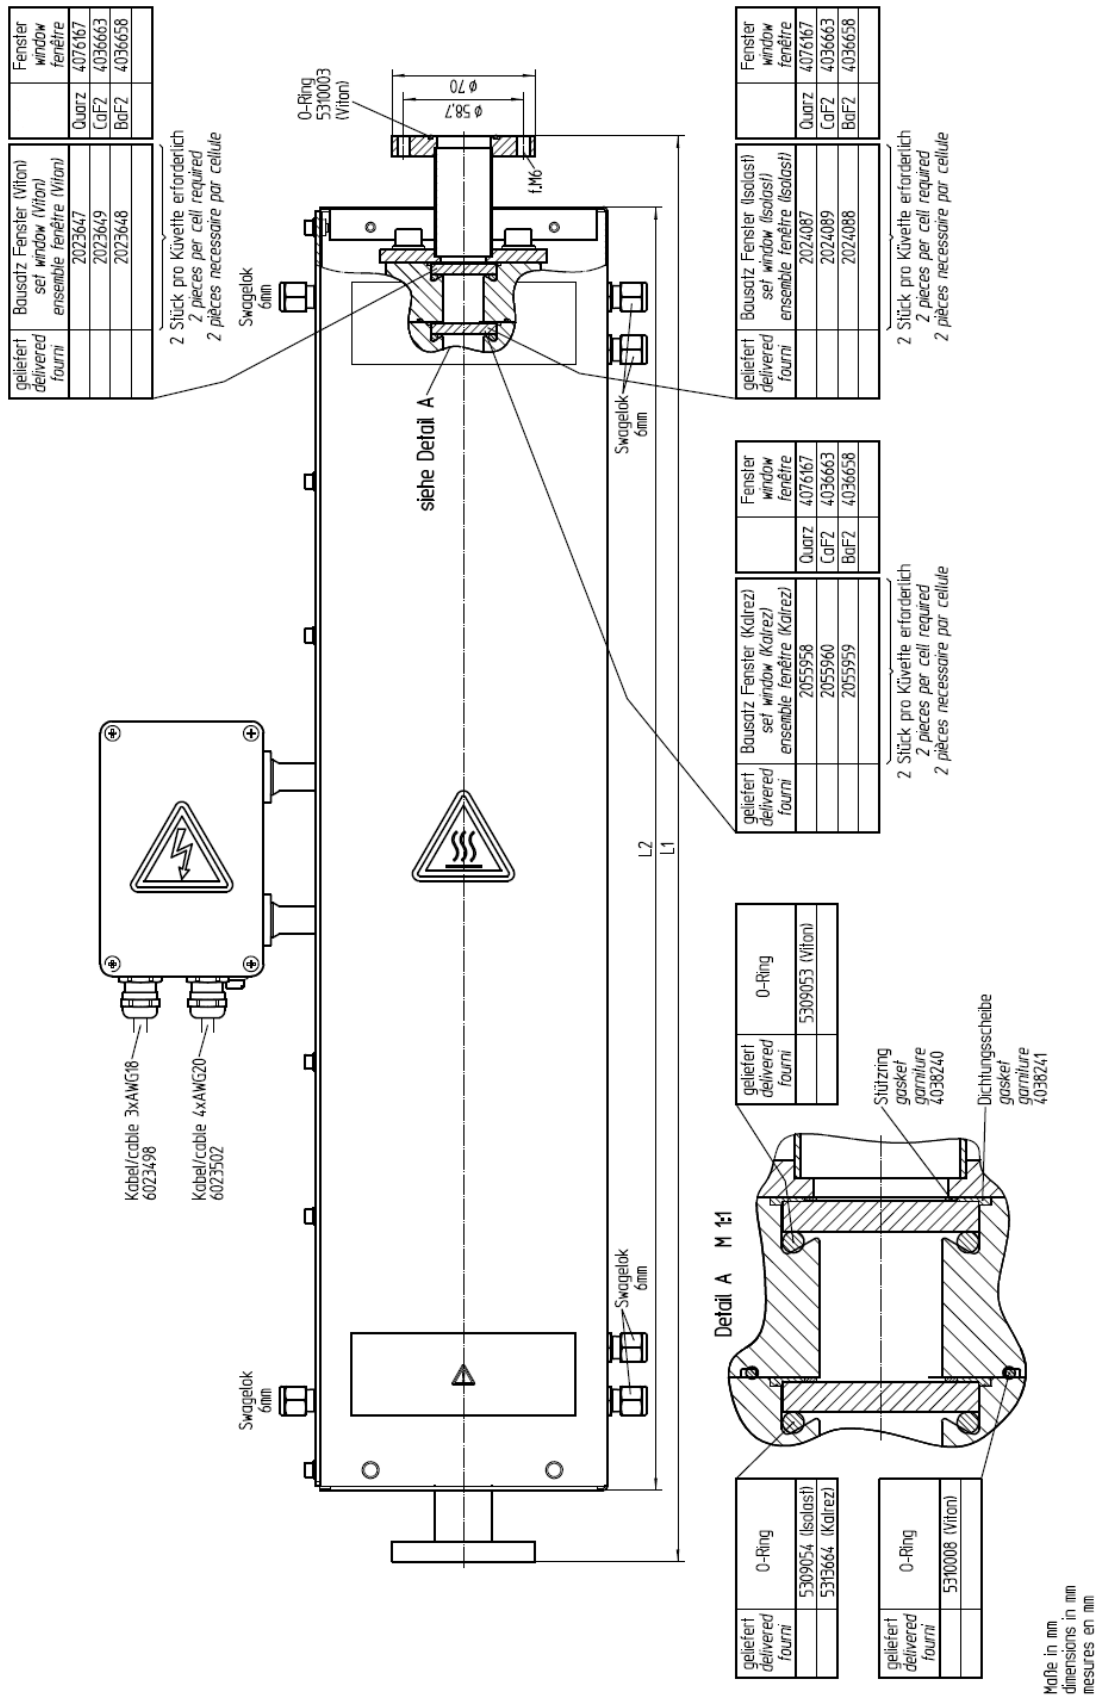


8.4 Technical data



Refer to the Data Sheet delivered with the cell for the materials used.

Cell characteristics	
Optical path length	PGK10: 10 cm (3.94 in.) PGK20: 20 cm (7.87 in.) PGK50: 50 cm (19.7 in.) PGK75: 75 cm (29.5 in.)
Materials with media contact: - Cell body - Window - O-rings	Stainless steel 1.4571 (SS316Ti) Hastelloy Quartz, CaF ₂ , BaF ₂ Isolast, Option: Viton, Kalrez
Weight	PGK10: Approx. 8 kg PGK20: Approx. 10 kg PGK50: Approx. 15 kg PGK75: Approx. 20 kg
Sample gas volume	PGK10: Approx. 80 cm ³ (4.9 cu.in.) PGK20: Approx. 150 cm ³ (9.2 cu.in.) PGK50: Approx. 360 cm ³ (22 cu.in.) PGK75: Approx. 540 cm ³ (33 cu.in.)
Operating conditions	
Ambient temperature	+5 ... +40 °C (+40 ... +100 °F)
Storage temperature	-20 ... +70 °C (0 ... +160 °F)
Relative humidity	Max. 80%
Degree of protection	IP54
Heating temperature Max. surface temperature Temperature controller (external)	Adjustable to max. 140 °C (285 °F) Due to material 150 °C (300 °F) Temperature controller for Pt 100
Temperature sensor	2 * Pt100
Heating up time	From room temperature to approx. +50 °C (+120 °F): Approx. 1 h From room temperature to approx. +150 °C (+300 °F): Approx. 4 h
Operating pressure, sample gas compartment	- Quartz, CaF ₂ : Max. 20 bar (2000 kPa) absolute - BaF ₂ : Max. 10 bar (1000 kPa) absolute (For T = +5 °C ... +150 °C (+40 ... +300 °F))
Operating pressure, purge gas compartment	Max. 3 bar (300 kPa)
Helium leak rate	10 ⁻⁸ mbar*L*sec ⁻¹ ; 5 minutes at max. 90 °C (He leak test)
Mechanical installation	
Fitting position	Any
Pipes: - Sample gas inlet and outlet - Purge gas inlet and outlet	Pipe screw fitting for outer pipe diameter: 6 mm 6 mm
Sample gas (requirements)	
Temperature	Thermostatically controlled to cell temperature
Flow rate	30 ... 1000 l/h (1 ... 35 cu.foot./h) For combustible and occasionally ignitable sample gas (according to Zone 1): Max. 100 l/h (3.5 cu.foot/h)
Cleanness	Free from dust and condensed components
Purge gas (expendable item)	
Consumption	2 ... 100 l/h (0.1 ... 35 cu.foot/h)
Primary pressure	Max. 3 bar (300 kPa)

Electrical installation	
Supply voltage	115 or 230 V +10% / -15%; 50...60 Hz
Power input	PGK10/PGK20/PGK50: Max. 275 VA PGK75: Max. 550 VA
Power fuse (external): - PGK10/PGK20/PGK50 - PGK75	Via temperature controller or external 4 A (for 115 V and 230 V) 8 A (for 115 V and 230 V)
Electrical connection lines: - Power supply - Pt100	3 * AWG 18 4 * AWG 20
Explosion protection	
Ex category (2014/34/EU)	 II 2G Ex eb IIC Gb
Ex category (IEC 60079)	Ex II 2G Ex eb IIC Gb

9 Index

A

Ambient conditions	29
Approval for potentially explosive atmospheres	27
ATEX category	7

C

Clearing malfunctions	26
Combustible gases (information)	7
Combustible sample gas	7
Compliance	27

D

Decommissioning	18
Disposal	18

E

Electrical installation	14
Ex category	7
Ex information	7

I

Ignitable gases (information)	7
Installation	9
Intended use	5

M

Maintenance	19, 21
-------------------	--------

O

Operation	17
-----------------	----

P

Potentially explosive atmospheres	
- Approval	27
Power connection	14
Product Description	7
Product identification	5
Purge gas connection	13

S

Safety temperature switch	27
Sample gas connection	10
Sample gas, combustible	7
Spare parts	20
Specifications	27

T

Technical data	29
Temperature switch	27
Thermostatic control	8
Troubleshooting	26
Type Examination Certificate	27
Type plate	5

Australia

Phone +61 3 9457 0600
1800 334 802 – tollfree
E-Mail sales@sick.com.au

Austria

Phone +43 22 36 62 28 8-0
E-Mail office@sick.at

Belgium/Luxembourg

Phone +32 2 466 55 66
E-Mail info@sick.be

Brazil

Phone +55 11 3215-4900
E-Mail marketing@sick.com.br

Canada

Phone +1 905 771 14 44
E-Mail information@sick.com

Czech Republic

Phone +420 2 57 91 18 50
E-Mail sick@sick.cz

Chile

Phone +56 2 2274 7430
E-Mail info@schadler.com

China

Phone +86 20 2882 3600
E-Mail info.china@sick.net.cn

Denmark

Phone +45 45 82 64 00
E-Mail sick@sick.dk

Finland

Phone +358-9-2515 800
E-Mail sick@sick.fi

France

Phone +33 1 64 62 35 00
E-Mail info@sick.fr

Germany

Phone +49 211 5301-301
E-Mail info@sick.de

Hong Kong

Phone +852 2153 6300
E-Mail ghk@sick.com.hk

Hungary

Phone +36 1 371 2680
E-Mail office@sick.hu

India

Phone +91 22 4033 8333
E-Mail info@sick-india.com

Israel

Phone +972 4 6881000
E-Mail info@sick-sensors.com

Italy

Phone +39 02 274341
E-Mail info@sick.it

Japan

Phone +81 3 5309 2112
E-Mail support@sick.jp

Malaysia

Phone +6 03 8080 7425
E-Mail enquiry.my@sick.com

Mexico

Phone +52 472 748 9451
E-Mail mario.garcia@sick.com

Netherlands

Phone +31 30 2044 000
E-Mail info@sick.nl

New Zealand

Phone +64 9 415 0459
0800 222 278 – tollfree
E-Mail sales@sick.co.nz

Norway

Phone +47 67 81 50 00
E-Mail sick@sick.no

Poland

Phone +48 22 539 41 00
E-Mail info@sick.pl

Romania

Phone +40 356 171 120
E-Mail office@sick.ro

Russia

Phone +7 495 775 05 30
E-Mail info@sick.ru

Singapore

Phone +65 6744 3732
E-Mail sales.gsg@sick.com

Slovakia

Phone +421 482 901201
E-Mail mail@sick-sk.sk

Slovenia

Phone +386 591 788 49
E-Mail office@sick.si

South Africa

Phone +27 11 472 3733
E-Mail info@sickautomation.co.za

South Korea

Phone +82 2 786 6321
E-Mail info@sickkorea.net

Spain

Phone +34 93 480 31 00
E-Mail info@sick.es

Sweden

Phone +46 10 110 10 00
E-Mail info@sick.se

Switzerland

Phone +41 41 619 29 39
E-Mail contact@sick.ch

Taiwan

Phone +886 2 2375-6288
E-Mail sales@sick.com.tw

Thailand

Phone +66 2645 0009
E-Mail Ronnie.Lim@sick.com

Turkey

Phone +90 216 528 50 00
E-Mail info@sick.com.tr

United Arab Emirates

Phone +971 4 88 65 878
E-Mail info@sick.ae

United Kingdom

Phone +44 1727 831121
E-Mail info@sick.co.uk

USA

Phone +1 800 325 7425
E-Mail info@sick.com

Vietnam

Phone +84 945452999
E-Mail Ngo.Duy.Linh@sick.com

Further locations at www.sick.com