


SD 77J01C51-03E


Unit: mm

External Dimensions

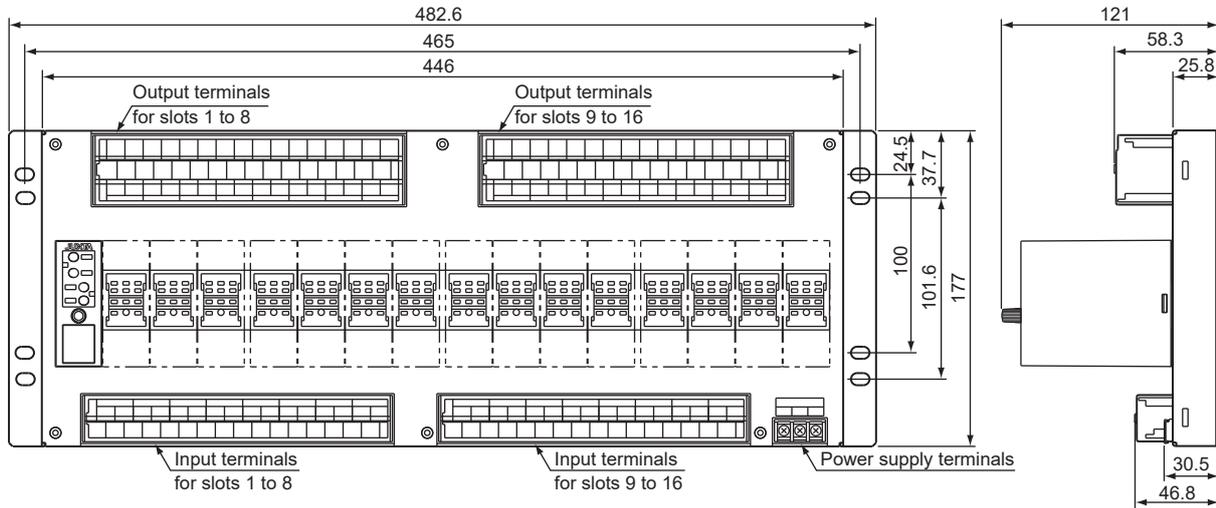

Normal Allowable Deviation= ± (Value of JIS B 0401-2016 tolerance grade IT18) / 2

Assignment of Power Supply Terminals

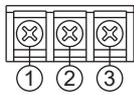


Terminal Number	Signal Symbol
①	SUPPLY L (+)
②	SUPPLY N (-)
③	GND \perp


Assignment of Input/Output Terminals

Mountable Signal Conditioners		Input Terminal			Output-1 Terminal		Output-2 Terminal		
		1	3	4	7	9	2	5	6
VJH1, VJH7, VJHF, VJHR, VJQ0, VJQ7 VJXS, VJX7, VJHK, VJUK-1		+	-	Do not use	+	-	+	-	Do not use
VJH1/C, VJH1/HC		+	-						
VJC1 (*1)		Channel-1			Channel-1		Do not use	Do not use	Do not use
VJT6 VJU7 (TC or mV input) VJTK, VJUK-3		+	-	Do not use	+	-	+	-	Do not use
VJR6 VJU7 (RTD input) VJRK, VJUK-3		A	B		B	+	-	+	-
VJS2 VJS7 VJSK		100%	CENTER	0%	+	-	+	-	Do not use
VJA1 VJA5 VJA7 VJAK VJUK-2		PS+	-	COM	+	-	+	-	Do not use
When using internal power supply		Do not use							
When using external power supply		Do not use							
When used as an isolator		Do not use							
VJA4 (*1)		Channel-1			Channel-1		Do not use	Do not use	Do not use
VJB1		A	±	Do not use	+	-	Do not use	Do not use	Do not use
VJG1		V	±	Do not use	+	-	Do not use	Do not use	Do not use
VJB3		A/V	±	Do not use	+	-	+	-	Do not use
VJD1		V	±	Do not use	+	-	+	-	Do not use
VJP1 VJP4, VJP8 VJQ2 (*2) VJQ8, VJQK		Non-voltage contact / Voltage contact	Do not use	+	+	-	+	-	Do not use
Internally powered current pulse (two-wire system)		PS+	+	-					
Internally powered voltage pulse (three-wire system)		PS+	+	-					
		Do not use	Do not use	Do not use					
VJF1		Input through one-touch fitting Ø6 of the VJF1.			+	-	Do not use	Do not use	Do not use
When output-2 is communication output.		Regarding input, refer to the above model by model.			+	-	B (+)	A (-)	COM
When output-2 is alarm output.							AL1	COM	AL2
VJAK, VJHK, VJMK, VJQK, VJRK VJSK, VJTK, VJUK							Do not use		

Output Terminals

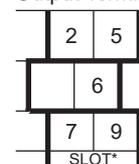

Input Terminals

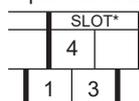

“*” in the figure above denote a slot number. Slots are numbered from 1 to 16, beginning with the leftmost slot, when viewed from the VJCE front.

*1: Only 1-channel type of VJC1 and VJA4 are mountable on VJCE base.

*2: VJQ2 is a single output type. Do not use the output-2 terminal.

*3: When receiving current input (current pulse), external shunt resistor (receiving resistor) is required.

*4: For VJR6 (style 3.0 or later) and VJU7, the wiring resistance of input terminals "1" and "3" must be the same. For VJR6 (style 2.0 or earlier), the wiring resistance of input terminals "1" and "4" must be the same.