

Day Timer with 20 Programmable Presets Installation and Operating Manual

Description

The DT20 is a compact electronic 24 hour/7 day time switch module, with heavy duty relay contacts for switching low or line voltage loads. Applicable for time of day control of pumps, fans, heaters, HVAC control circuits, lighting, machinery and many other types of commercial, industrial, and agricultural equipment. All models feature large keys with unique "circular programming" for easy programming, a large LCD display and battery backup.

Features

- □ 24 Hour (AM & PM), 7 Day Programming
- □ 3 Common Preset or Custom Timing Programs
- 20 Programs Provide Up To 10 ON & 10 OFF Events Per Day / Weekl
- Rechargeable Battery Backup With 100 Hour Carry-Over
- □ 16 Amp, SPDT Relay
- □ Manual Override Capability
- □ Several Mounting Styles Available
- Daylight Savings Key



Application

Time based control of lighting, ventilating, heating, cooling or other electrical loads in commercial and industrial applications. The DT20 time switches are programmable for 24-hour or 7-day schedules. Mounting options are available for surface or DIN rail mounting.. The control can be completely enclosed in a plastic housing with an optional terminal cover and sub-base for installation and hard wiring. They are also available with a din rail mount within an enclosure for stand-alone outdoor applications.





http://www.kep.com


Contents
Safety Precautions1
Program Structure1
Symbol Keys2
Setting The Timer2
Setting The Clock, Time & Day2
Preset Programs
Using / Selecting Preset Programs P01 - P03
Creating User Defined Programs4
Deleting Programs5
Summer/Winter Time (Daylight Saving Changes)5
Automatic Operation / Override Operation5
Mounting Options6
Warranty7
Decoding Part Number7
Additional Mounting Options - E200 Outdoor Enclosure7
Apendix-A: Program Schedules Worksheet8



Safety Precautions


Safety precautions

- The connection and installation of electrical devices may only be carried out by a qualified electrician.
- Interventions in and changes to the device result in the voiding of the warranty claim.
- Observe your national regulations and the respective safety provisions.
- Switch-off commands have priority over switch-on commands.

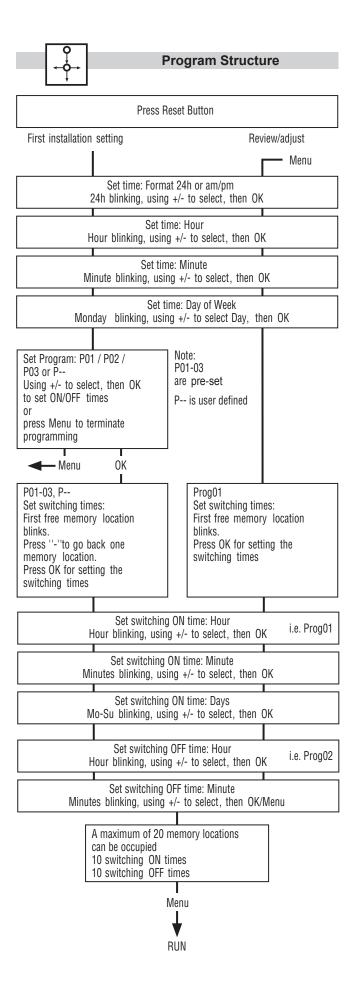

OK Symbol Keys reset

- Cverview of daily switching program
- 246RM : Setting of 24h or am/pm
- +1h : Summer/winter clock changes
- : Weekday display
- Switching status display ON/OFF
- : Pointer to Mode OVERRIDE/AUTO

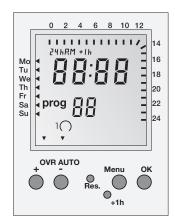

- +/- : Adjustment keys: By pressing the key longer than 2 sec. you can adjust the timer in steps of 5 units
- Res. : Reset
- Menu : By pressing the menu key programming is terminated and the system reverts to automatic operation
- OK : Confirmation of programming



_OVR_AU

Mode

Setting The Timer

Setting of this programmable timer is depending of the user preference to use pre-set programs or defining own programming.

Using Pre-set programs (first time installation)

	Using Reset key you following values:	can adjust the
JTO Menu OK Res.	24h or am/pm:	see pg 1
+1h	Time (hour and minutes):	see pg 1
	Week day:	see pg 1
	Pre-set programs P01 to P03:	see pg 1
programming by Menu mo	de	

User defined programming by Menu mode




10	de		
	Using Menu key you review the following		
	24h or am/pm:	see	pg 1
	Time (hour and minutes):	see	pg 1
	Week day:	see	pg 1
	Programs P:	see	pg 1




Setting The Clock, Time & Day


Sequence to follow after selecting programming by pre-set programs or Menu mode.

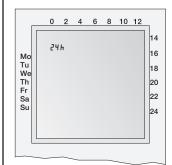

Set display format 24h or am/pm

 

Select 24h or am/pm $\,$ (+/-) and confirm with OK.

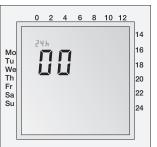

0 2 4 6 8 10 12

4 6 8 10 12

24 h

0 2

Мо

Tu We Th Fr Sa Su

Mo Tu We Th Fr Sa Su 14

16

18

20

22

24

 
14

16

18


20

22 24 Set hour




Select hour (+/-) and confirm with OK.

 Set minutes



Select minutes (+/-) and confirm with OK.

 Set week day



Select week day (+/-) and confirm with OK.



Prog.

Preset Programs

P01: Mo - Su, 1 x ON/OFF

_		ON		
Ó	6		22	24

P02: Mo - Su. 2 x ON/OFF

_	C)N			
Ó	7	12	14	20	24


P0	3: N	lo - S	iu, 3 x Ol	V/OFF	
_	C)N			
0	7	12	14 18	20 22	24

Programs P01-03 (If Used) The switching on and off times for programs P01 to P03 are preset (pre).


The user can change these programs.


Individual (custom) program, P--Under the menu option P-- you have the option of creating a user-defined program.

 This program can be changed at any time. There are up to 20 memory locations available for 10 OFF and 10 ON commands. You can allocate a corresponding weekday or week block to each memory location.




 
Sequence to follow after initially setting time in the Reset mode.

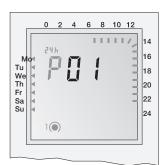



Select pre-set program (+/-).

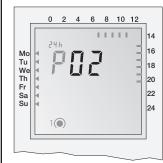

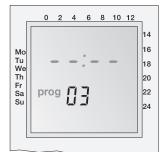

_OVR_AUTO ● Res Mode \bigcirc \bigcirc `●_{+1h}

Once selected the program desired there are following options:

Menu: terminate programming

OK: Going through pre-set programs to modify selection (any program ON or OFF can be modified by using "+" or "-" keys and confirming with OK) or accept it with OK key to go the next free memory location in order to add new user defined programs.

e.g. after selecting P02 you should also program: Sa-Su 22:30 ON (prog05) 23:00 OFF (prog06)




Sequence to follow after setting time and week day while running Menu mode or adding programs to the pre-set P01 to P03.

Select program ON


OVR AUTO

Menu

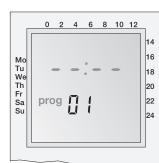






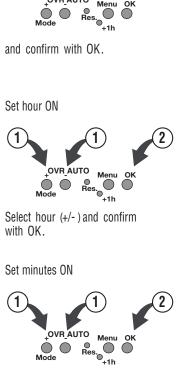

Select minutes (+/-) and confirm with OK.



 Set week day ON




Select week day (+/-) and confirm with OK.

Possible week blocks and individual days

	•	•	V	V	
1					
2					
3					
4					
5					
6					
7					




 Set hour OFF




Select hour (+/-) and confirm with OK.

 Set minutes OFF



Select minutes (+/-) and confirm with OK.

 Set week day OFF




Should the OFF command be the same day of ON command then select Menu to terminate program ming or select OK to go to a new program ON setting.

Special Case


Shift

Should the OFF command be the following day of ON command then select "+" key then select Menu or OK.

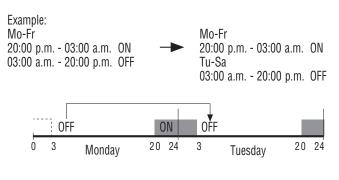

del

 
Deleting Programs




+1h

 Select Menu, then select OK key until getting onto the ON time of the program you want to delete.





Select '--'' with (+/-) key and confirm with OK .

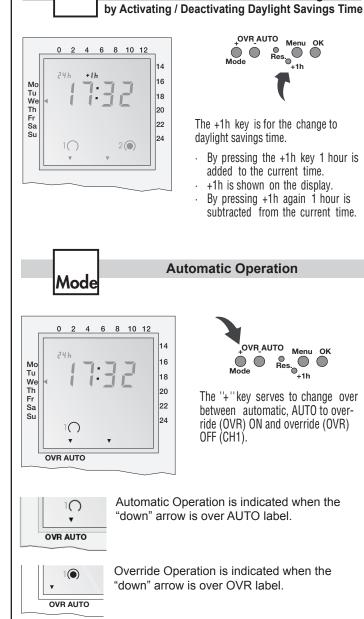

Summer/Winter Time Switching





Note:

Switching programmes are deleted in ON-OFF pairs. If you delete a single ON instruction, the correspond ing OFF instruction is also deleted.

OVR - Manual Override Operation






Mode

Press "Mode" to activate relay manually. The "down" arrow over OVR label will indicate Override is in force and indicates that the relay is active.

 NOTE: You can switch back to AUTO mode by pressing the "Mode" button. Automatic Operation is indicated when the "down" arrow is over AUTO label.

MOUNTING OPTIONS

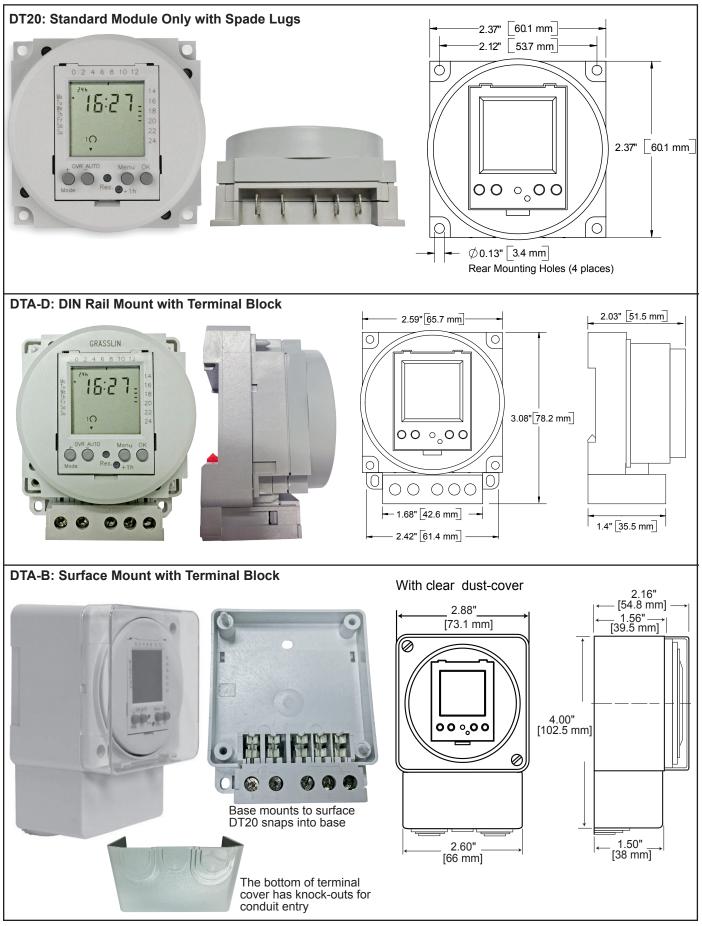

Warranty

This product is warranted against defects in materials and workmanship for a period of one (1) years from the date of shipment to Buyer.

The Warranty is limited to repair or replacement of the defective unit at the option of the manufacturer. This warranty is void if the product has been altered, misused, dismantled, or otherwise abused.

ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, ARE EXCLUDED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Decoding Part Number

DT20 Day Timer

How To Order:

Example: DT20 Series: ______ DT20 = Day Timer


Operating Voltage:

A= 110 VAC **B**= 220 VAC **C**= 24 V AC/DC

Mounting Accessories

DTA-D= DIN Rail Mount Housing DTA-B= Surface Mount Housing DTA-E200= Outdoor Enclosure

ADDITIONAL MOUNTING OPTIONS: E200 (Outdoor NEMA 3R Raintight Enclosure)

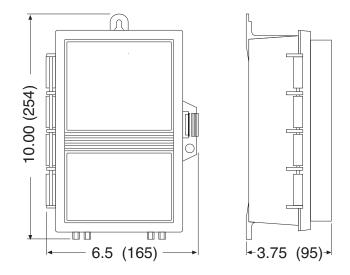

Prog	ON/OFF	h	m	 Day(s)
Ex	On	7 am	30	Mon., Tue., Wed., Thurs, Fri.
1				
2				
3				
4				
5				
2 3 4 5 6 7				
7				
8 9 10				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21 22				
22				
23 24				
24				
25 26				
26				
27 28				
28				
29				
29 30 31 32				
31				
22				
33				
33 34 35 36 37				
30				
37				
30				
38 39 40				
40				
41				
42				
42 43 44				
44				
45				
46				
47				
48				
40 49				
49 50				
50				