

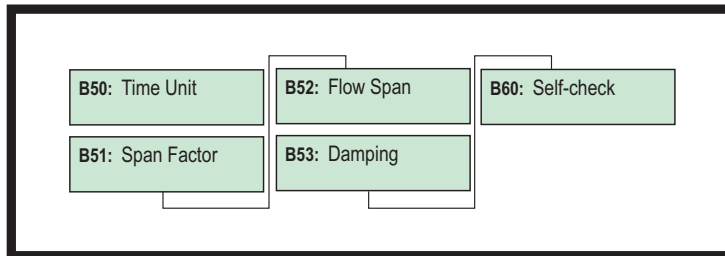


# YEWFLO "B" Menu Parameters

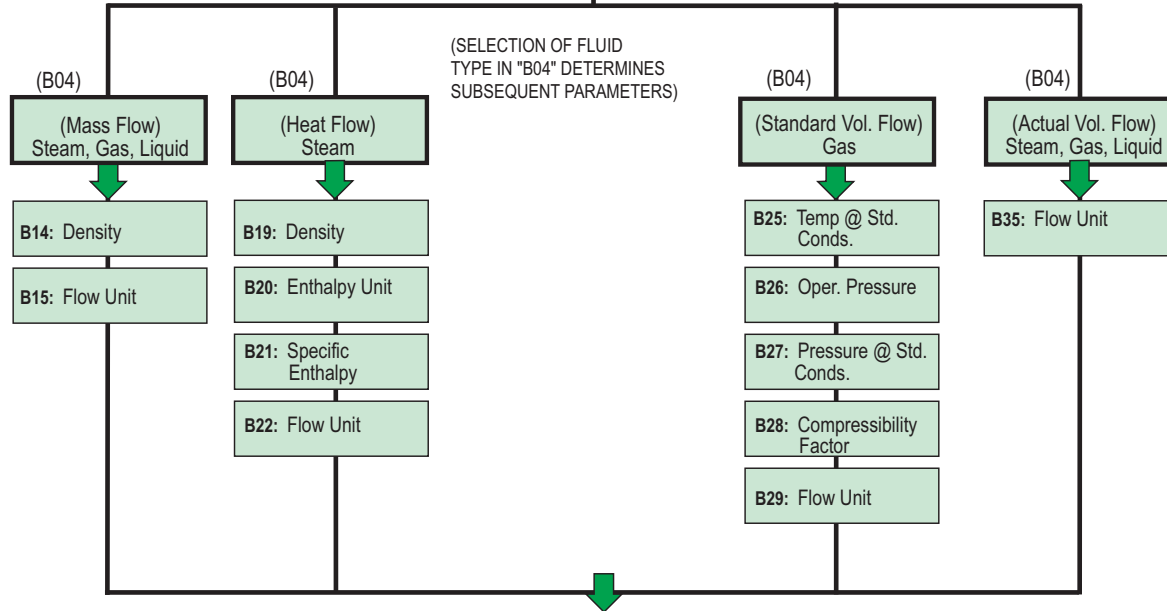

# YEWFLO

BRAIN™ Communicating  
Vortex Shedding Flowmeters

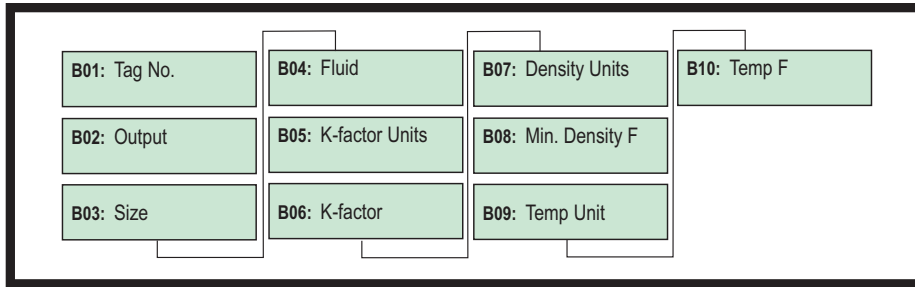


Basic Programming  
Pocket Reference Guide

# YOKOGAWA

Yokogawa Corporation of America  
2 Dart Road  
Newnan, GA 30265  
770.254.0400

# YEWFO Vortex Shedding Flowmeters BRAIN Communications

## Function Block Diagram

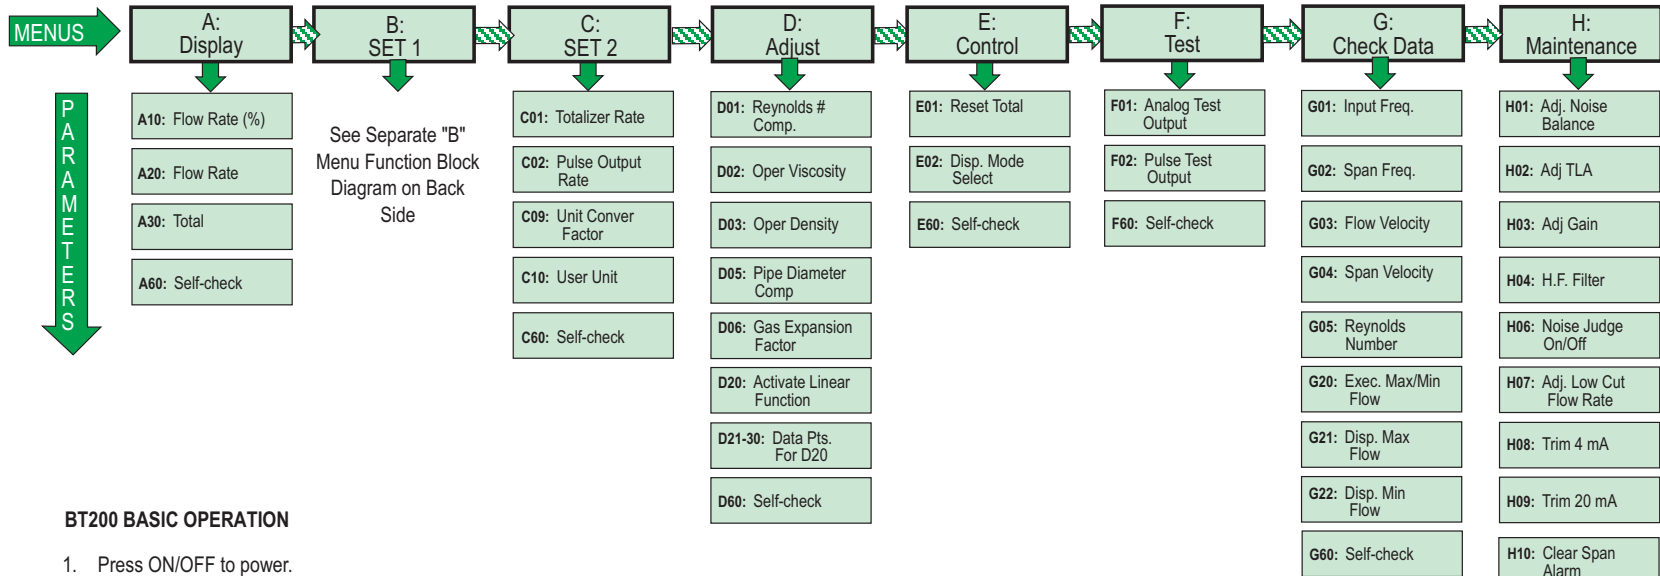

### BT200 BASIC OPERATION

1. Press ON/OFF to power.
2. Press ENTER key when prompted. Model No., Tag No., and Self-check will be displayed.
3. Press F4 to continue. The main menu list will be displayed next.
4. Highlight desired menu using up and down movement keys. Press ENTER to access.
5. Highlight desired parameter using up and down movement keys. Press ENTER to access.
6. Once a parameter has been selected either:
  - a. Use up/down movement keys to review options. Press ENTER twice to program selection.
 or
  - b. Where data modification is required, use the alpha/numeric keys to enter new data. Press ENTER twice to program selection.

