


# ***ES761-ST2***

## ***FLOW COMPUTER***

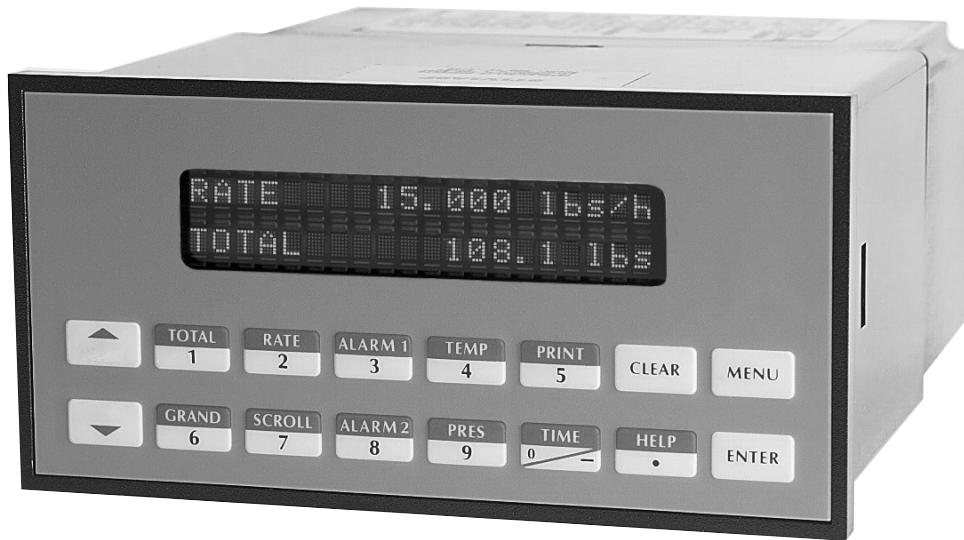



# CONTENTS

<b>SAFETY INSTRUCTIONS</b> .....	1
<b>1. INTRODUCTION</b>	
1.1 Unit Description .....	2
1.2 Specifications .....	3
<b>2. INSTALLATION</b>	
2.1 General Mounting Hints .....	10
2.2 Mounting Diagrams .....	10
<b>3. APPLICATIONS</b>	
3.1 Steam Mass .....	13
3.2 Steam Heat .....	14
3.3 Steam Net Heat .....	15
3.4 Steam Delta Heat .....	16
3.5 Corrected Gas Volume .....	17
3.6 Gas Mass .....	18
3.7 Gas Combustion Heat .....	19
3.8 Corrected Liquid Volume .....	20
3.9 Liquid Mass .....	21
3.10 Liquid Combustion Heat .....	22
3.11 Liquid Sensible Heat .....	23
3.12 Liquid Delta Heat .....	24
<b>4. WIRING</b>	
4.1 Terminal Designations .....	25
4.2 Typical Wiring Connections .....	26
4.2.1 Flow Input .....	26
4.2.2 Stacked DP Input .....	26
4.2.3 Pressure Input .....	26
4.2.4 Temperature Input .....	27
4.2.5 Temperature 2 Input .....	27
4.3 Wiring In Hazardous Areas .....	28
4.3.1 Flow Input .....	28
4.3.2 Pressure Input .....	28
4.3.3 Temperature Input .....	28
<b>5. UNIT OPERATION</b>	
5.1 Front Panel Operation Concept for Operate Mode .....	29
5.2 General Operation .....	30
5.3 Password Protection .....	30
5.4 Relay Operation .....	30
5.5 Pulse Output .....	30
5.6 Analog Outputs .....	30
5.7 Function Keys; Display Grouping .....	30
5.8 RS-232 Serial Port Operation .....	31
5.8.1 PC Communications .....	31
5.8.2 Operation of RS-232 Serial Port with Printers .....	31
5.9 RS-485 Serial Port Operation .....	31
5.10 Pause Computations Prompt .....	31
<b>6. PROGRAMMING</b>	
6.1 Front Panel Operation Concept for Program Mode .....	32
6.2 EZ Setup .....	33
6.3 Detailed Menu Descriptions .....	35
6.4 System Parameters .....	36
6.5 Display .....	41
6.6 System Units .....	43
6.7 Fluid Data .....	50
6.8 Flow Input .....	55
6.9 Other Input .....	68
6.10 Pulse Output .....	71
6.11 Current Output .....	74
6.12 Relays .....	76
6.13 Communication .....	80
6.14 Network Card .....	89
6.15 Service & Analysis .....	90
10.6 Setup Tab .....	108

# CONTENTS

<b>7. PRINCIPLE OF OPERATION</b>	
7.1 General.....	96
7.2 Square Law Flowmeter Considerations.....	96
7.3 Flow Equations.....	96
7.3.1 Flow Input Computation.....	96
7.3.2 Pressure Computation.....	97
7.3.3 Temperature Computation.....	97
7.3.4 Density/Viscosity Computation.....	97
7.3.5 Corrected Volume Flow Computation.....	98
7.3.6 Mass Flow Computation.....	99
7.3.7 Combustion Heat Flow Computation.....	101
7.3.8 Heat Flow Computation.....	101
7.3.9 Sensible Heat Flow Computation.....	101
7.3.10 Liquid Delta Heat Computation.....	101
7.3.11 Expansion Factor Computation for Square Law Flowmeters.....	102
7.3.12 Uncompensated Flow Computation.....	105
7.3.13 ILVA Flow Meter Equations.....	106
7.4 Computation of the D.P. Factor.....	107
<b>8. RS-232 SERIAL PORT</b>	
8.1 RS-232 Serial Port Description.....	108
8.2 Instrument Setup by PC Over Serial Port.....	108
8.3 Operation of Serial Communication Port with Printers.....	108
8.4 ES761ST2 RS-232 Port Pinout.....	108
<b>9. RS-485 SERIAL PORT</b>	
9.1 RS-485 Serial Port Description.....	109
9.2 General.....	109
9.3 Operation of Serial Communication Port with PC.....	109
9.4 ES761ST2 RS-485 Port Pinout.....	109
<b>10. FLOW COMPUTER SETUP SOFTWARE</b>	
10.1 System Requirements.....	110
10.2 Cable and Wiring Requirements.....	110
10.3 Installation.....	110
10.4 Using the Flow Computer Setup Software.....	110
10.5 File Tab.....	111
10.6 Setup Tab.....	111
10.7 View Tab.....	112
10.8 Misc. Tab.....	112
<b>11. GLOSSARY OF TERMS</b>	
10 Glossary Of Terms.....	113
<b>12. Diagnosis and Troubleshooting</b>	
12.1 Response of ES761ST2 on Error or Alarm.....	116
12.2 Diagnosis Flowchart and Troubleshooting.....	116
12.3 Error Messages.....	117
<b>Appendix A</b>	
Fluid Properties Table.....	120
<b>Appendix B - Setup Menus</b>	
Setup Menus with Operator Code Access.....	121
Setup Menus with Supervisor Code Access.....	122
Warranty.....	123
Decoding Part Number.....	123



## SAFETY INSTRUCTIONS

**The following instructions must be observed.**

- This instrument was designed and is checked in accordance with regulations in force EN 60950 (“Safety of information technology equipment, including electrical business equipment”). A hazardous situation may occur if this instrument is not used for its intended purpose or is used incorrectly. Please note operating instructions provided in this manual.
- The instrument must be installed, operated and maintained by personnel who have been properly trained. Personnel must read and understand this manual prior to installation and operation of the instrument.
- The manufacturer assumes no liability for damage caused by incorrect use of the instrument or for modifications or changes made to the instrument.

### Technical Improvements

- The manufacturer reserves the right to modify technical data without prior notice.

## 1. Introduction

### 1.1 Unit Description:

The ES761ST2 is a special version of the ST2 indicated by software version 02.24.XX. In summary Compensation Input 2 (whether Temperature or Pressure) will always be used to imply the properties of Saturated Steam. However, for the superheated steam cases Compensation Input 1 will continue to be used for temperature input and compensation Input 2 will be used for pressure input.

In addition, new flowmeter equations were added for Verabar and Accelabar in support of the flowmeter offerings from Veris.

Special capabilities were added as follows:

1. Saturated Steam Properties can be implied by a temperature sensor on Compensation Input 2 only.

2. The temperature sensor selections available on Compensation Input 2 when saturated steam are:

- Manual Temperature 2
- RTD Temperature 2
- 0-20mA Temperature 2
- 4-20mA Temperature 2.

These selections also had a minor impact on the logic for selecting the units of measure.

3. If using a Saturated Steam Equation with a Temperature 2 usage selected for Compensation Input 2, then Temperature 2 will be offered in the following locations:

- Display Scroll List
- View Input Signal for Other Input 2
- Current Outputs
- Relay Outputs
- Print List
- Error Log
- Print System Setup
- Print Error Report
- Serial Interface for RS232
- Serial Interface for the RS485

4. Two new Square Law Flowmeter Selections of Verabar and Accelabar were added. These impacted the logic and operation of the menus for Enter Beta, Meter Exp. Coef., Compute DP Factor.

5. This manual describes the capabilities in additional detail.

6. There is a special ST2 setup diskette modification in support of the firmware capabilities. The ES761ST2 Flow Computer satisfies the instrument requirements for a variety of flowmeter types in liquid, gas, steam and heat applications. Multiple flow equations are available in a single instrument with many advanced features.

The alphanumeric display offers measured parameters in easy to understand format. Manual access to measurements and display scrolling is supported.

The versatility of the Flow Computer permits a wide measure of applications within the instrument package. The various hardware inputs and outputs can be "soft" assigned to meet a variety of common application needs. The user "soft selects" the usage of each input/output while configuring the instrument.

The isolated analog output can be chosen to follow the volume flow, corrected volume flow, mass flow, heat flow, temperature, pressure, or density by means of a menu selection. Most hardware features are assignable by this method.

The user can assign the standard RS-232 Serial Port for data logging, or transaction printing, or for connection to a modem or two way pager for remote meter reading.

A PC Compatible software program is available which permits the user to rapidly redefine the instrument configuration.

Language translation option features also permit the user to define his own messages, labels, and operator prompts. These features may be utilized at the OEM level to creatively customize the unit for an application or alternately to provide for foreign language translations. Both English and a second language reside within the unit.

#### NX-19 option

Advanced ordering options are available for Natural Gas calculations where the user requires compensation for compressibility effects. Compensation for these compressibility effects are required at medium to high pressure and are a function of the gas specific gravity, % CO<sub>2</sub>, % Nitrogen, as well as temperature and pressure. The compressibility algorithm used is that for NX-19.

#### Stacked differential pressure transmitter option

This option permits the use of a low range and high range DP transmitter on a single primary element to improve flow transducer and measurement accuracy.

#### Peak demand option

This option permits the determination of an hourly averaged flow rate. Demand last hour, peak demand and time/date stamping for applications involving premium billing.

#### Data logging option

This option provides data storage information in 64k of battery backed RAM. Items to be logged, conditions to initiate the log and a variety of utilities to clear and access the data via the RS-232 port are provided.

#### Peak Demand Option

There are applications where customer charges are determined in part by the highest hourly averaged flowrate observed during a billing period.

The peak demand option for the ES761ST2 is intended for applications where it is important to compute such an hourly average flowrate, to note the value of the peak occurrence and the corresponding time and date of that event.

The demand last hour rate is computed based on the current total and the total 60 minutes prior. This value is recomputed every 5 minutes.

The peak demand is the highest value observed in the demand last hour.

The time and date stamp is the time and date at which the highest peak demand occurred.

The Demand Last Hour and/or Peak Demand can be directly viewed on the display by pressing the RATE key and then scrolling through the rates with the ^/v arrow key until the desired item is viewed.

The Peak Time and Date stamp can be viewed on the display by pressing the TIME and then scrolling through the time related parameters using the  $\wedge/v$  arrow keys until the desired item is viewed.

All of these items can be included into the scrolling display list along with the other process values and totalizers in a user selectable list.

The peak demand may be cleared by pressing the CLEAR key while viewing the PEAK DEMAND or by means of a command on the serial port.

The Peak Time and Date stamp can be viewed on the display by pressing the TIME and then scrolling through the time related parameters using the  $\wedge/v$  arrow keys until the desired item is viewed.

The Demand Last Hour and Peak Demand can be assigned to one of the analog outputs. The demand last hour or peak demand could thusly be output on a recording device such as a strip chart recorder or fed into a building energy automation system.

The Demand Last Hour and Peak Demand can be assigned to one of the relays. The customer can be notified that he is approaching or exceeding a contract high limit by assigning the demand last hour to one of the relays and setting the warning point into the set point. A warning message would also be displayed.

The peak demand may be used in conjunction with the print list and data logger to keep track of hourly customer usage profiles. The Demand Last Hour, Peak Demand, and Time and Date Stamp information can be accessed over the serial ports. The Peak Demand may also be reset over the serial ports.

The peak demand option may also be used as a condition to call out in remote metering by modem or two way pager.

### EZ Setup

The unit has a special EZ setup feature where the user is guided through a minimum number of steps to rapidly configure the instrument for the intended use. The EZ setup prepares a series of questions based on flow equation, fluid, and flowmeter type desired in the application.

## 1.2 Specifications:

### Environmental

Operating Temperature: 0 to +50 C  
 Storage Temperature: -40 to +85 C  
 Humidity : 0-95% Non-condensing  
 Materials: UL, CSA, VDE approved

**Approvals:** CE Approved Light Industrial, UL/CSA Pending

### Display

Type: 2 lines of 20 characters  
 Types: Backlit LCD and VFD ordering options  
 Character Size: 0.3" nominal  
 User selectable label descriptors and units of measure

### Keypad

Keypad Type: Membrane Keypad  
 Keypad Rating: Sealed to Nema 4  
 Number of keys: 16  
 Raised Key Embossing

### Enclosure

Enclosure Options: Panel, Wall, Explosion Proof  
 Size: See Chapter 2; Installation  
 Depth behind panel: 6.5" including mating connector  
 Type: DIN  
 Materials: Plastic, UL94V-0, Flame retardant  
 Bezel: Textured per matt finish  
 Equipment Labels: Model, safety, and user wiring

### NX-19 Compressibility Calculations

Temperature	-40 to 240 F
Pressure	0 to 5000 psi
Specific Gravity	0.554 to 1.0
Mole % CO2	0 to 15%
Mole % Nitrogen	0 to 15%

### Power Input

The factory equipped power options are internally fused. An internal line to line filter capacitor is provided for added transient suppression. MOV protection for surge transient is also supported

#### Universal AC Power Option:

85 to 276 Vrms, 50/60 Hz  
 Fuse: Time Delay Fuse, 250V, 500mA

#### DC Power Option:

24 VDC (16 to 48 VDC)  
 Fuse: Time Delay Fuse, 250V, 1.5A  
 Transient Suppression: 1000 V

### Flow Inputs:

#### Flowmeter Types Supported:

##### Linear:

Vortex, Turbine, Positive Displacement, Magnetic, GilFlo, GilFlo 16 point, ILVA 16 Point and others

##### Square Law:

Orifice, Venturi, Nozzle, V-Cone, Wedge, Averaging Pitot, Target and others

##### Multi-Point Linearization:

May be used with all flowmeter types. Including: 16 point, UVC and dynamic compensation.

### Analog Input:

#### Ranges

Voltage: 0-10 VDC, 0-5 VDC, 1-5 VDC  
 Current: 4-20 mA, 0-20 mA

Basic Measurement Resolution: 16 bit

Update Rate: 2 updates/sec minimum

Automatic Fault detection: Signal over/under-range,  
 Current Loop Broken

Calibration: Operator assisted learn mode. Learns Zero and Full Scale of each range

#### Fault Protection:

Fast Transient: 1000 V Protection (capacitive clamp)

Reverse Polarity: No ill effects

Over-Voltage Limit: 50 VDC Over voltage protection

Over-Current Protection: Internally current limited protected to 24 VDC

Optional: Stacked DP transmitter 0-20 mA or 4-20 mA

### Pulse Inputs:

Number of Flow Inputs: one

Input Impedance: 10 k $\Omega$  nominal

Trigger Level: (menu selectable)

#### High Level Input

Logic On: 2 to 30 VDC

Logic Off: 0 to .9 VDC

#### Low Level Input (mag pickup)

Selectable sensitivity: 10 mV and 100 mV

Minimum Count Speed: 0.25 Hz

Maximum Count Speed: Selectable: 0 to 40 kHz

Overvoltage Protection: 50 VDC

Fast Transient: Protected to 1000 VDC (capacitive clamp)



### Temperature, Pressure, Density Inputs

The compensation inputs usage are menu selectable for temperature, temperature 2, pressure, density, steam trap monitor or not used.

Calibration: Operator assisted learn mode

Operation: Ratiometric

Accuracy: 0.01% FS

Thermal Drift: Less than 100 ppm/C

Basic Measurement Resolution: 16 bit

Update Rate: 2 updates/sec minimum

Automatic Fault detection:

Signal Over-range/under-range

Current Loop Broken

RTD short

RTD open

Transient Protection: 1000 V (capacitive clamp)

Reverse Polarity: No ill effects

Over-Voltage Limit (Voltage Input): 50 VDC

Over-Current Limit (Internally limited to protect input to 24 VDC)

Available Input Ranges

(Temperature / Pressure / Density / Trap Monitor)

Current: 4-20 mA, 0-20 mA

Resistance: 100 Ohms DIN RTD

100 Ohm DIN RTD (DIN 43-760, BS 1904):

Three Wire Lead Compensation

Internal RTD linearization learns ice point resistance

1 mA Excitation current with reverse polarity protection

Temperature Resolution: 0.1°C

### Datalogger (optional)

Type: Battery Backed RAM

Size: 64k

Initiate: Key, Interval or Time of Day

Items Included: Selectable List

Data Format: Printer or CSV Access via RS-232 command

### Stored Information (ROM)

Steam Tables (saturated & superheated), General Fluid Properties, Properties of Water, Properties of Air, Natural Gas

### User Entered Stored Information (EEPROM / Nonvolatile RAM)

Transmitter Ranges, Signal Types

Fluid Properties

(specific gravity, expansion factor, specific heat, viscosity,

isentropic exponent, combustion heating value, Z factor,

Relative Humidity)

Units Selections (English/Metric)

### RS-232 Communication

Uses: Printing, Setup, Modem, Two Way Pager, Datalogging

Baud Rates: 300, 600, 1200, 2400, 4800, 9600, 19200

Parity: None, Odd, Even

Device ID: 0 to 99

Protocol: Proprietary, Contact factory for more information

Chassis Connector Style: DB 9 Female connector

Power Output: 8V (150 mA max.) provided to Modem or Two Way Pager

### RS-485 Communication (optional)

Uses: Network Communications

Baud Rates: 300, 600, 1200, 2400, 4800, 9600, 19200

Parity: None, Odd, Even

Device ID: 1 to 247

Protocol: ModBus RTU

Chassis Connector Style: DB 9 Female connector

### Excitation Voltage

24 VDC @ 100 mA overcurrent protected

### Relay Outputs

The relay outputs usage is menu assignable to (Individually for each relay) Hi/Lo Flow Rate Alarm, Hi/Lo Temperature Alarm, Hi/Lo Pressure Alarm, Pulse Output (pulse options), Wet Steam or General purpose warning (security).

(Peak demand and demand last hour optional)

Number of relays: 2 (3 optional)

Contact Style: Form C contacts (Form A with 3 relay option)

Contact Ratings: 240 V, 1 amp

Fast Transient Threshold: 2000 V

### Analog Outputs

The analog output usage is menu assignable to correspond to the Heat Rate, Uncompensated Volume Rate, Corrected Volume Rate, Mass Rate, Temperature, Density, or Pressure. (Peak demand and demand last hour optional)

Number of Outputs: 2

Type: Isolated Current Sourcing (shared common)

Isolated I/P/C: 500 V

Available Ranges: 0-20 mA, 4-20 mA (menu selectable)

Resolution: 16 bit

Accuracy: 0.05% FS at 20 Degrees C

Update Rate: 5 updates/sec

Temperature Drift: Less than 200 ppm/C

Maximum Load: 1000 ohms

Compliance Effect: Less than .05% Span

60 Hz rejection: 40 dB minimum

EMI: No effect at 10 V/M

Calibration: Operator assisted Learn Mode

Averaging: User entry of DSP Averaging constant to cause a smooth control action

### Isolated Pulse output

The isolated pulse output is menu assignable to Uncompensated Volume Total, Compensated Volume Total, Heat Total or Mass Total.

Isolation I/O/P: 500 V

Pulse Output Form (menu selectable): Open Collector NPN or 24 VDC voltage pulse

Nominal On Voltage: 24 VDC

Maximum Sink Current: 25 mA

Maximum Source Current: 25 mA

Maximum Off Voltage: 30 VDC

Saturation Voltage: 0.4 VDC

Pulse Duration: User selectable

Pulse output buffer: 8 bit

### Real Time Clock

The Flow Computer is equipped with either a super cap or a battery backed real time clock with display of time and date.

Format:

24 hour format for time

Day, Month, Year format for date

Daylight Savings Time (optional)

### Measurement

The Flow Computer can be thought of as making a series



of measurements of flow, temperature/density and pressure sensors and then performing calculations to arrive at a result(s) which is then updated periodically on the display. The analog outputs, the pulse output, and the alarm relays are also updated. The cycle then repeats itself.

**Step 1:** Update the measurements of input signals-  
Raw Input Measurements are made at each input using equations based on input signal type selected. The system notes the "out of range" input signal as an alarm condition.

**Step 2:** Compute the Flowing Fluid Parameters-  
The temperature, pressure, viscosity and density equations are computed as needed based on the flow equation and input usage selected by the user.

**Step 3 :** Compute the Volumetric Flow-  
Volumetric flow is the term given to the flow in volume units. The value is computed based on the flowmeter input type selected and augmented by any performance enhancing linearization that has been specified by the user.

**Step 4:** Compute the Corrected Volume Flow at Reference Conditions-  
In the case of a corrected liquid or gas volume flow calculation, the corrected volume flow is computed as required by the selected compensation equation.

**Step 5 :** Compute the Mass Flow-  
All required information is now available to compute the mass flow rate as volume flow times density. A heat flow computation is also made if required.

**Step 6:** Check Flow Alarms-  
The flow alarm functions have been assigned to one of the above flow rates during the setup of the instrument. A comparison is now made by comparing the current flow rates against the specified hi and low limits.

**Step 7:** Compute the Analog Output-  
This designated flow rate value is now used to compute the analog output.

**Step 8:** Compute the Flow Totals by Summation-  
A flow total increment is computed for each flow rate. This increment is computed by multiplying the respective flow rate by a time base scaler and then summing. The totalizer format also includes provisions for total rollover.

**Step 9:** Pulse Output Service-  
The pulse output is next updated by scaling the total increment which has just been determined by the pulse output scaler and summing it to any residual pulse output amount.

**Step 10:** Update Display and Printer Output-  
The instrument finally runs a task to update the various table entries associated with the front panel display and serial outputs.

### Instrument Setup

The setup is password protected by means of a numeric lock out code established by the user. The help line and units of measure prompts assure easy entry of parameters.

An EZ Setup function is supported to rapidly configure the instrument for first time use. A software program is also available which runs on a PC using a RS-232 Serial for

connection to the Flow Computer. Illustrative examples may be down loaded in this manner.

The standard setup menu has numerous subgrouping of parameters needed for flow calculations. There is a well conceived hierarchy to the setup parameter list. Selections made at the beginning of the setup automatically affect offerings further down in the lists, minimizing the number of questions asked of the user.

In the setup menu, the flow computer activates the correct setup variables based on the instrument configuration, the flow equation, and the hardware selections made for the compensation transmitter type, the flow transmitter type, and meter enhancements (linearization) options selected. All required setup parameters are enabled. All setup parameters not required are suppressed.

Also note that in the menu are parameter selections which have preassigned industry standard values. The unit will assume these values unless they are modified by the user.

Most of the process input variables have available a "default" or emergency value which must be entered. These are the values that the unit assumes when a malfunction is determined to have occurred on the corresponding input.

It is possible to enter in a nominal constant value for temperature or density, or pressure inputs by placing the desired nominal value into the default values and selecting "manual". This is also a convenience when performing bench top tests without simulators.

The system also provides a minimum implementation of an "audit trail" which tracks significant setup changes to the unit. This feature is increasingly being found of benefit to users or simply required by Weights and Measurement Officials in systems used in commerce, trade, or "custody transfer" applications.

### Simulation and Self Checking:

This mode provides a number of specialized utilities required for factory calibration, instrument checkout on start-up, and periodic calibration documentation.

A service password is required to gain access to this specialized mode of operation. Normally quality, calibration, and maintenance personnel will find this mode of operation very useful.

Many of these tests may be used during start-up of a new system. Output signals may be exercised to verify the electrical interconnects before the entire system is put on line.

The following action items may be performed in the Diagnostic Mode:

- Print Calibration/Maintenance Report
- View Signal Input (Voltage, Current, Resistance, Frequency)
- Examine Audit Trail
- Perform a Self Test
- Perform a Service Test
- View Error History
- Perform Pulse Output Checkout / Simulation
- Perform Relay Output Checkout / Simulation
- Perform Analog Output Checkout / Simulation
- Calibrate Analog Inputs using the Learn Feature
- Calibrate Analog Output using the Learn Feature
- Schedule Next Maintenance Date

Note that a calibration of the analog input/output will advance

the audit trail counters since it effects the accuracy of the system.

### Operation of Steam Trap Monitor

In applications on Saturated Steam, the otherwise unused Compensation Input may be connected to a steam trap monitor that offers the following compatible output signal levels:

4mA = trap cold

12 mA = trap warm and open (blowing)

20 mA = trap warm and closed

In normal operation a steam trap is warm and periodically opens and closes in response to the accumulation of condensate. A cold trap is indication that it is not purging the condensate, a trap that is constantly blowing is an indication that it is stuck open. To avoid a false alarm, the ES761ST2 permits the user to program a delay, or time period, which should be considered normal for the trap to be either cold, or open. An alarm will only be activated if the trap is detected as continuously being in the abnormal states for a time period greater than this TRAP ERROR DELAY time.

The user selects to use the Compensation Input for Trap Monitoring by selecting "4-20mA TRAP STATUS as the INPUT SIGNAL for OTHER INPUT1.

The user can program the ERROR DELAY time in HH:MM format into both the TRAP ERROR DELAY (cold trap error) menu and the TRAP BLOWING DELAY (trap stuck open) menu.

The ES761ST2 will warn the operator of a TRAP ERROR when an abnormal condition is detected. The error can be acknowledged by pressing the ENTER key. However, the problem may reassert itself if there is a continued problem with the steam trap.

In addition, the event is noted in the ERROR LOG.

It is also possible for the user to program a trap malfunction as one of the conditions worthy of a CALL OUT of a problem by selecting this error in the ERROR MASK.

The Data-Logging option of the ES761ST2 can also be used to log the performance of the trap by storing the % of time the trap has been cold, and/or blowing open during the datalog interval.

### Datalogging Option

The Datalogging Option for the ES761ST2 permits the user to automatically store sets of data items as a record on a periodic basis. A datalog record may be stored as the result of either a PRINT key depression, or an INTERVAL, or a TIME OF DAY request for a datalog.

The user defines the list of items to be included in each datalog by selecting these in the PRINT LIST menu located within the COMMUNICATIONS SUBMENU.

The user selects what will trigger a datalog record being stored in the PRINT INITIATE menu. The choices are PRINT KEY, INTERVAL, and TIME OF DAY.

The user can select the datalog store interval in a HH:MM format in the PRINT INTERVAL menu.

The user can also select the store time of day in a 24 hr HH:MM format in the PRINT TIME menu.

The user can also define whether he just wants the data stored

into the datalogger, or if he wants the data both stored in the datalogger and sent out over the RS232 port in the DATALOG ONLY menu.

The user can define the format he wishes the data to be output in using the DATALOG FORMAT menu. Choices are PRINTER and DATABASE. PRINTER format will output the data records in a form suitable to dump to a printer. DATABASE format will output the values in a CSV, or Comma Separated Variable with Carriage return delimiting of each record.

A number of serial commands are also included to access and manipulate information stored with in the datalogger. Among these RS232 command capabilities are the following actions:

Clear Data Logger

Send all Data in Datalogger

Send Only New Data since Datalogger was last Read

Send Data for the date included in the request

Send the column heading text for the CSV data fields

Send the column units of measure text for the CSV data fields

Store one new record into datalogger now

Read Number of New Records in the datalogger

Read number of records currently in the datalogger

Read the maximum number of records capacity of the datalogger

Move Pointer Back N records

Dump Record at Pointer

Dump records newer than pointer

Dump data from N records back

The datalogger option is used in conjunction with the RS-232 port in remote metering applications.

The technical details associated with the serial commands are listed in Universal Serial Protocol Manual available upon request.

### RS-232 Serial Port

The Flow Computer has a general purpose RS-232 Port which may be used for any one of the following purposes:

Transaction Printing

Data Logging

Remote Metering by Modem

Remote Metering by Two Way Pager

Computer Communication Link

Configuration by Computer

Print System Setup

Print Calibration/Malfunction History

### Instrument Setup by PC's over Serial Port

A Diskette program is provided with the Flow Computer that enables the user to rapidly configure the Flow Computer using an Personnel Computer. Included on the diskette are common instrument applications which may be used as a starting point for your application. This permits the user to have an excellent starting point and helps speed the user through the instrument setup.

### Operation of Serial Communication Port with Printers

The Flow Computer's RS-232 channel supports a number of operating modes. One of these modes is intended to support operation with a printer in metering applications

requiring transaction printing, data logging and/or printing of calibration and maintenance reports.

For transaction printing, the user defines the items to be included in the printed document. The user can also select what initiates the transaction print generated as part of the setup of the instrument. The transaction document may be initiated via a front panel key depression.

In data logging, the user defines the items to be included in each data log as a print list. The user can also select when or how often he wishes a data log to be made. This is done during the setup of the instrument as either a time of day or as a time interval between logging.

The system setup and maintenance report list all the instrument setup parameters and usage for the current instrument configuration. In addition, the Audit trail information is presented as well as a status report listing any observed malfunctions which have not been corrected.

The user initiates the printing of this report at a designated point in the menu by pressing the print key on the front panel.

#### Operating Serial Communication Port with Modems

The ES761ST2 offers a number of capabilities that facilitate its use with modems. The ES761ST2's RS232 port can be connected to a modem in order to implement a remote metering system that uses either the phone companies standard phone lines or cellular telephone system. In addition to remote meter readings, the serial commands may also be used to examine and/or make setup changes to the unit, and to check for proper operation or investigate problems. Several hundred commands are supported. A compatible industrial modem accessory and interconnecting cabling is offered in the MPP2400N specifically designed for use with the ES761ST2.

The ES761ST2 and Modem can be used together to create systems with one or more of the following capabilities:

1. Poll the ES761ST2 unit for information from a remote PC.
2. Call Out from the ES761ST2 unit to a remote PC on a scheduled reading time and/or crisis basis
3. Some combination of the above two descriptions where the unit is polled by one PC and calls into to a different PC if a problem is detected.

In fact, up to five ST-2 units can share the same modem. Each ES761ST2 must have a unique DEVICE ID. This multidropping of flow computers on a single modem is popular when there are several flow computers mounted near each other.

In most applications using modem communications, the ES761ST2's RS232 USAGE is first set equal to MODEM. Each ES761ST2 on a shared modem cable is given a unique serial device address or DEVICE ID. The BAUD RATE is commonly set to 2400, the PARITY set to NONE, and the HANSHAKING set to NONE to complete the basic setup. The remote PC's communication settings are chosen to match these.

The level of complexity of the ES761ST2 to Modem connection can range from simple to more complex.

In a simple system a remote PC will call into the telephone

number of the modem. The modem will answer the call, and establish a connection between the ES761ST2 and the remote PC. An exchange of information can now occur. The ES761ST2 will act as a slave and respond to commands and requests for information from the remote MASTER PC. The MASTER PC will end the exchange by handing up.

However, it is more common that the ES761ST2 will be used to control the modem. In these applications the following communication menu settings would be used:

```

RS232 USAGE = MODEM
DEVICE ID, BAUD RATE, PARITY, and
HANDSHAKING are set
MODEM CONTROL = YES
DEVICE MASTER = YES (When multidropping
several ES761ST2's, only one unit will be the DEVICE
MASTER)
MODEM AUTO ANSWER = YES (This instructs the
unit to answer incoming calls)
HANG UP IF INACTIVE = YES (This instructs the unit
to hang up the line if no activities occur within several
minutes).
```

A more complex form of a remote metering system can be implemented where the ES761ST2 will initiate a call to contact the remote PC at a scheduled time and/or in the event of a problem that has been detected. In these applications the ES761ST2 has additional setup capabilities including:

```

The ES761ST2 must have a unique identifier assigned
to it (using the TAG NUMBER)
Call Out Telephone number must be entered in the
CALL OUT NUMBER
The scheduled call out time for the daily reading must
be entered in CALL OUT TIME
A decision must be made whether the unit will be used
to call on error(s) in CALL ON ERROR
The particular error conditions to call out on must be
defined in the ERROR MASK
The NUMBER OF REDIALS to be attempted if line is
busy must be entered in that cell
HANG UP IF INACTIVE= YES will disconnect the call
if remote computer does not respond.
```

Consult the Universal Serial Commands User Manual for details on the individual commands supported by the ES761ST2. Contact the Flow Applications Group for a discussion on the remote metering system capabilities you are considering.

NOTE: Some modems can be configured in advance to answer incoming calls, terminate phone connections if communications is lost. In such applications there may be no need for the ES761ST2 to be functioning to "control" the modem. Setting the RS233 USAGE = COMPUTER will likely work.

#### Operating Serial Communication Port with Two Way Paging

The ES761ST2 offers a number of capabilities that facilitate its use with two way paging systems. The ES761ST2's

RS232 port can be connected to a compatible two way pager transceiver in order to implement a wireless, two way paging, remote metering system. A compatible, industrial Two Way Pager Transceiver accessory is offered in the TWPNW specifically designed for use with the ES761ST2. A monthly service contract with a two way paging provider, for example Skytel, is required. The remote user or system sends or receives information from the ES761ST2 using either a Two Way Pager, such as Motorola's Pagerwriter 2000 pager, or by email via the INTERNET.

In addition to obtaining remote meter readings, the serial commands may also be used to examine and/or make setup changes to the unit, and/or to check for proper operation or investigate problems. Several hundred commands are supported.

The ES761ST2 and TWPNW can be used together to create systems with one or more of the following capabilities:

1. Poll the ES761ST2 unit for information from a remote PC over the Internet via email.
2. Call Out from the ES761ST2 unit to a remote PC on a scheduled reading time and/or crisis basis by email and the internet
3. Some combination of the above two descriptions where the unit is polled by one PC and calls into to a different PC or pager if a problem is detected.

In fact, up to five ST-2 units can share the same Two Way Pager. Each ES761ST2 must have a unique DEVICE ID. This multidropping of flow computers on a single Two Way Pager is popular when there are several flow computers mounted near each other.

The ES761ST2's RS232 USAGE is first set equal to PAGER. Each ES761ST2 on a shared PAGER is given a unique serial device address or DEVICE ID. The BAUD RATE is commonly set to 9600, the PARITY set to NONE, and the HANSHAKING set to NONE to complete the basic setup.

In a simple system, the ES761ST2 will send an email to an address programmed into the unit. The recipient will receive a daily email report containing the information desired in the form of a readable report.

To setup the information to be sent in this example:  
 Setup your desired PRINT LIST  
 Setup what will initiate the storage of information in the PRINT INITIATE menu

Setup any related parameters: PRINT INTERVAL or PRINT TIME

Set DATALOG ONLY = YES if data records will be sent at a later time  
 = NO if data records will be sent immediately as well as being stored

Set DATALOG FORMAT = PRINTER

To setup the communication channel, the following communication menu settings would be used:

RS232 USAGE = PAGER  
 Set the DEVICE ID,  
 BAUD RATE= 9600,  
 PARITY= NONE,  
 HANSHAKING=NONE  
 DEVICE MASTER = YES (When multidropping several ES761ST2, only one unit will be the DEVICE MASTER)  
 CALL OUT NUMBER = <email name of receiver> or <PIN of receiving PAGER>  
 CALL OUT TIME = time of a scheduled call out in HH:MM format (if used set a different call out time to each unit, several hours apart)  
 NUMBER OF REDIALS = 3 (if there is poor coverage unit will try to up to 3 times)  
 PAGER PIN NUMBER = <enter the Pager Pin Number given you by Skytel >  
 DESTINATION TYPE= E-MAIL (or PAGER PIN if pager or mailbox)  
 MAX BLOCK SIZE = 3 (This is number of blocks (1-4) of 128 bytes to be sent in each message. A smaller number of blocks increases the chance of successful communication transfers.

If you also wish the unit to CALL OUT in the event of a problem, the following menu settings would be used:

CALL ON ERROR = YES  
 ERROR MASK configured to suit the applications needs

### Initial Installation and Startup

When a ES761ST2 / TWP pair are first put on line, several service actions are required. These include:

1. Allow time for the ES761ST2 to charge the batteries in the TWPNW (see note below)
2. Set up an account with Skytel and choose a suitable service plan for this application
3. Initializing the Pager using the ES761ST2 INITIALIZE PAGER utility
4. Registering the pager with Skytel using the ES761ST2 REGISTER PAGER utility
5. Observe a sample exchange of information between the ES761ST2 and the remote user using the CLP PROGRESS

**NOTE:** It is important to wait 24 hours for the Two Way Pager Transceiver to charge its batteries prior to initial use. Otherwise erratic problems may occur during registration.

Special Utilities for steps 3, 4, and 5 are built into the ES761ST2. These may be summarized as follows:

INITIALIZE PAGER = YES causes the ES761ST2 to send commands to initialize the pager. The responses to the command can be either SUCCESS if all is well or FAILED if a problem is detected.

REGISTER PAGER = YES causes the ES761ST2 to attempt to establish a connection with a local Skytel tower. A series of informative messages will appear as the ES761ST2 attempts to register your PAGER PIN NUMBER with Skytel. Note that your service plan must be setup with Skytel before attempting to register the pager.

The responses to the command can be either SUCCESS if all is well or FAILED if a problem is detected.

CLP PROGRESS is a diagnostic menu location that provides information on the information exchanges for test purposes (see CLP Progress Menu in chapter 6). Contact the applications group if problems are encountered in initial setup or use of two way paging applications.

A more complex form of a remote metering system can be implemented where the ES761ST2 will initiate a call to a "mailbox" at Skytel. The Remote PC can access his mailbox and read and process the various messages over the internet as part of a customer billing system. Skytel offers a software developers kit for customers wishing to create custom solutions.

In each message, the ES761ST2 provides a header containing information that can be used to determine such items as:

1. What is the TAG NO of the device that sent the information?
2. What is its SENSOR SN
3. What is its DEVICE ID?
4. What type of message follows?
  - a. Exception Report (Message Type-1)
  - b. Send one Data Set (Message Type 2)
  - c. Send all new Datalog Data Sets (Message type 3)
5. What is the time and data of the first data record?
6. What information is contained in the data fields of CSV that follow?
7. Message Delimiter (CRLF)
8. For commands returning data, the data now follows in a CSV format

Consult the Universal Serial Commands User Manual for details on the individual commands supported by the ES761ST2.

Contact the Flow Applications Group for a discussion on the remote metering system capabilities you are considering.

#### **RS-485 Serial Port (optional)**

The RS-485 serial port can be used for accessing flow rate, total, pressure, temperature, density and alarm status information. The port can also be used for changing presets and acknowledging alarms.



## 2. Installation

### General Mounting Hints

#### 2.1 General Mounting Hints:

The ES761ST2 Flow Computer should be located in an area with a clean, dry atmosphere which is relatively free of shock and vibration. The unit is installed in a 5.43" (138mm) wide by 2.68" (68mm) high panel cutout. (see Mounting Dimensions)  
To mount the Flow Computer, proceed as follows:


### Mounting Procedure

- a. Prepare the panel opening.
- b. Slide the unit through the panel cutout until the it touches the panel.
- c. Install the screws (provided) in the mounting bracket and slip the bracket over the rear of the case until it snaps in place.
- d. Tighten the screws firmly to attach the bezel to the panel. 3 in. lb. of torque must be applied and the bezel must be parallel to the panel.

### NEMA4X / IP65 Specifications


**NOTE:** To seal to NEMA4X / IP65 specifications, supplied bezel kit must be used and panel cannot flex more than .010".  
When the optional bezel kit is used, the bezel adaptor must be sealed to the case using an RTV type sealer to maintain NEMA4X / IP65 rating.

### 2.2 Mounting Diagrams:

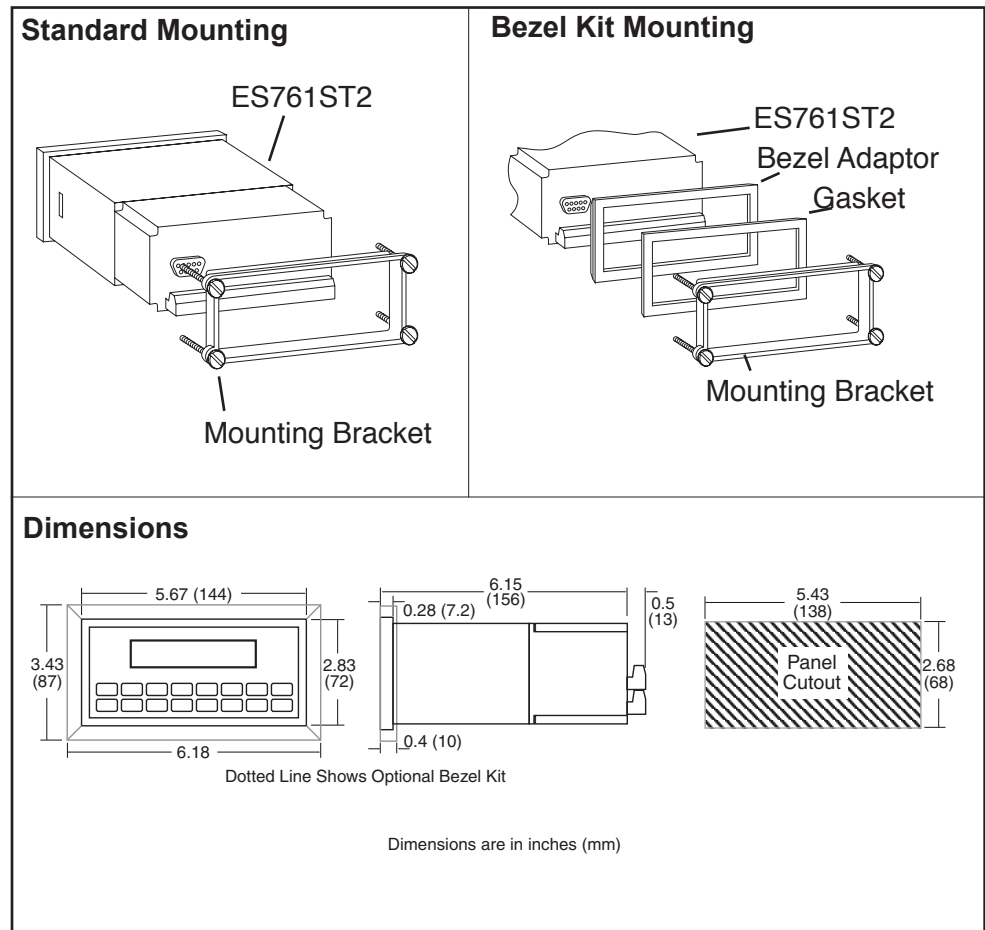


**2.2 Mounting Diagrams:**  
(continued)

**Wall Mount (mounting option W)**

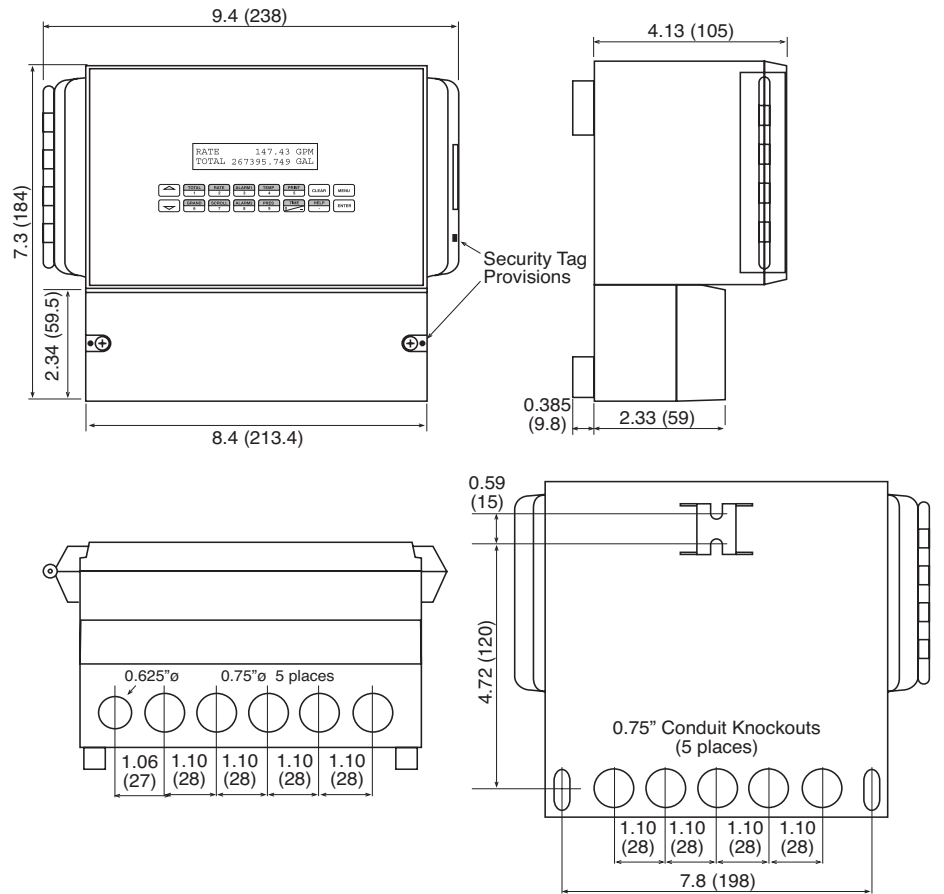

**NEMA4 Wall Mount (mounting option N)**

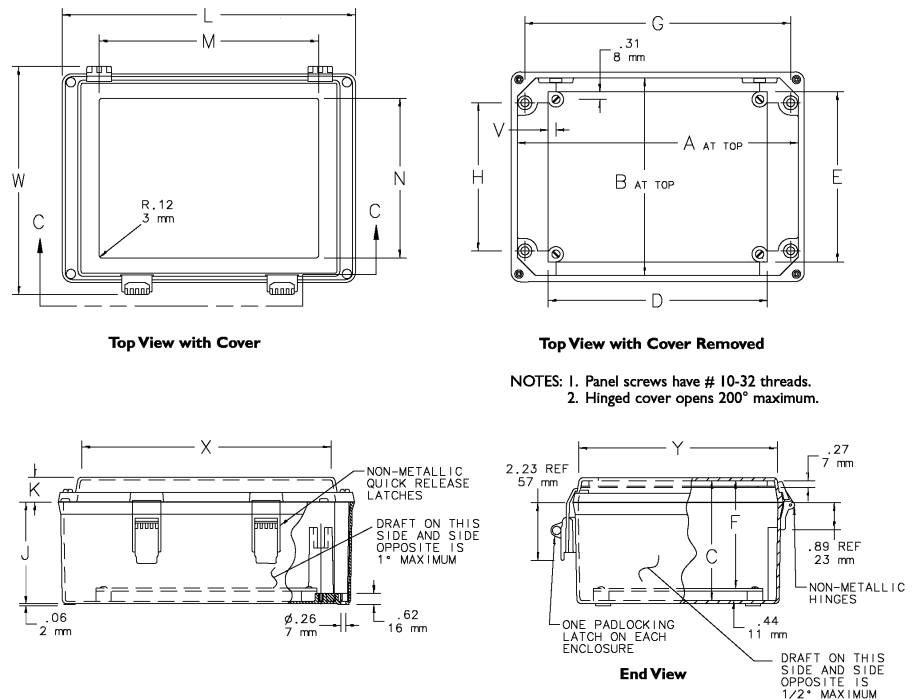


A x B x C	D x E	G x H	L x W	F	J	K	V	X	Y
11.50 x 8.00 x 6.78 (292 x 203 x 172)	8.75 x 6.88 (222 x 175)	10.75 x 6.00 (273 x 152)	12.00 x 9.39 (305 x 239)	6.25 (159)	5.13 (130)	1.75 (44)	0.25 (6)	9.97 (253)	7.34 (186)




**2.2 Mounting Diagrams:**  
(continued)

**Explosion Proof Mount (mounting option X)**

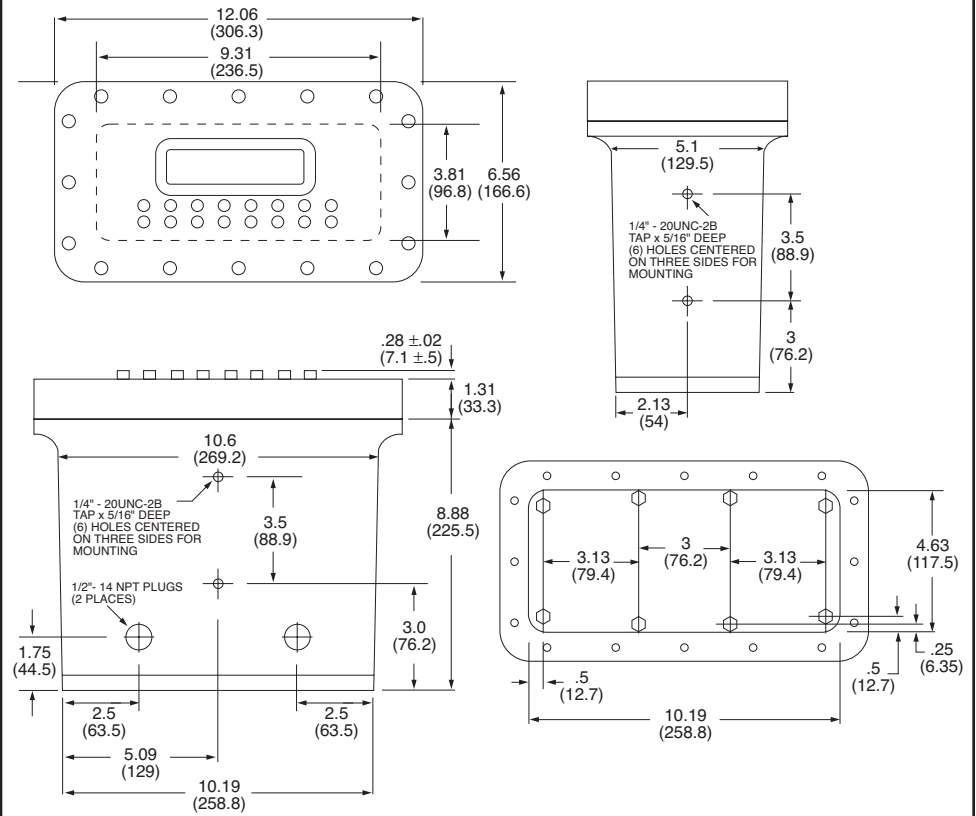

**Explosion Proof Mount (mounting option E)**

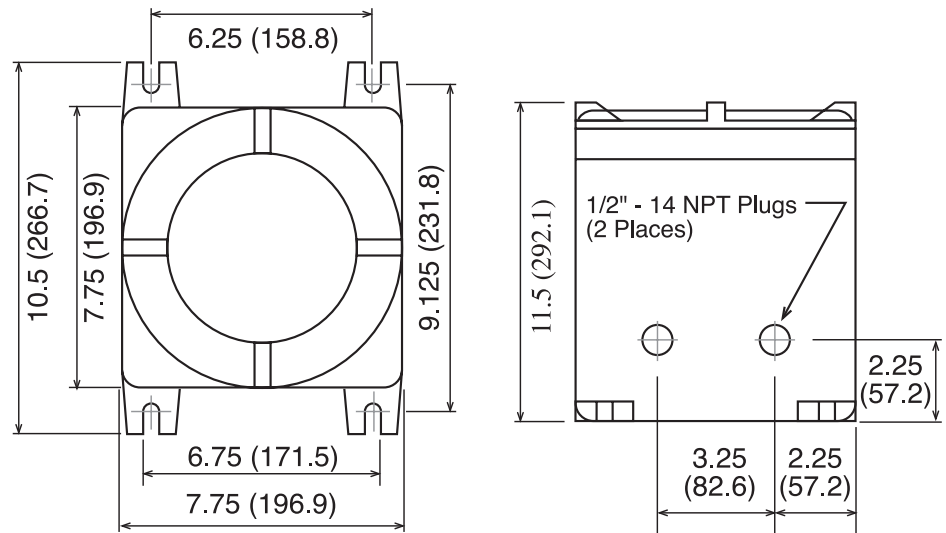

**STEAM MASS**

**3.1 Steam Mass**

**Measurements:**

A flowmeter measures the actual volume flow in a steam line. A temperature and/or pressure sensor is installed to measure temperature and/or pressure.

**Calculations:**

- Density and mass flow are calculated using the steam tables stored in the flow computer.
- With square law device measurement the actual volume is calculated from the differential pressure, taking into account temperature and pressure compensation.
- Saturated steam requires either a pressure or temperature measurement with the other variable calculated using the saturated steam curve.
- Optional steam trap monitoring using Compensation Input 1 if not used in saturated steam application.

**Input Variables:**

*Superheated Steam:* Flow, temperature (T<sub>1</sub>) and pressure(P<sub>2</sub>)

*Saturated Steam:* Flow, temperature (T<sub>2</sub>) or pressure (P<sub>2</sub>)


**Output Results:**

- Display Results  
Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density (peak demand, demand last hour, time/date stamp)
- Analog Output  
Mass or Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour
- Pulse Output  
Mass or Volume Total
- Relay Outputs  
Mass or Volume Flow Rate , Total, Pressure, Temperature, Alarms, Peak Demand, Demand Last Hour

**Applications:**

Monitoring mass flow and total of steam. Flow alarms are provided via relays and datalogging is available via analog (4-20mA) and serial outputs.

**Steam Mass Illustration**

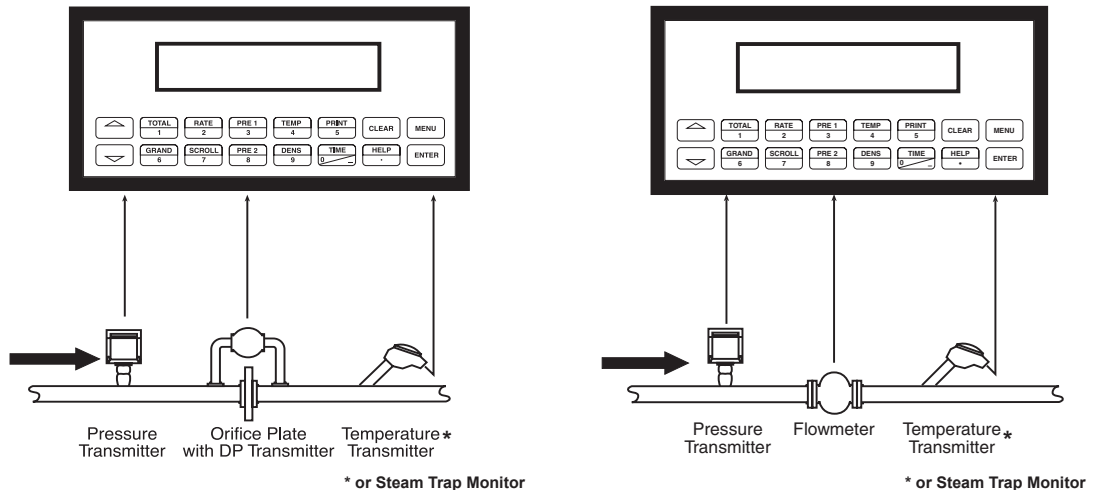

**Calculations**

**Mass Flow**

SUPERHEATED STEAM: Mass Flow = volume flow • density (T<sub>1</sub> , p<sub>2</sub>)

SATURATED STEAM: Mass Flow = volume flow • density (T<sub>2</sub> or P<sub>2</sub>)

**STEAM HEAT**

**3.2 Steam Heat**

**Measurements:**

A flowmeter measures the actual volume flow in a steam line. A temperature and/or pressure sensor is installed to measure temperature and/or pressure.

**Calculations:**

- Density, mass flow and heat flow are calculated using the steam tables stored in the flow computer. The heat is defined as the enthalpy of steam under actual conditions with reference to the enthalpy of water at T=0°C.
- With square law device measurement the actual volume is calculated from the differential pressure, taking into account temperature and pressure compensation.
- Saturated steam requires either a pressure or temperature measurement with the other variable calculated using the saturated steam curve.
- Optional steam trap monitoring using compensation input if not used in saturated steam application.

**Input Variables:**

*Superheated Steam:* Flow, temperature (T<sub>1</sub>) and pressure(P<sub>2</sub>)

*Saturated Steam:* Flow, temperature (T<sub>2</sub>) or pressure (P<sub>2</sub>)


**Output Results:**

- Display Results  
Heat, Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density (peak demand, demand last hour, time/date stamp)
- Analog Output  
Heat, Mass or Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour
- Pulse Output  
Heat, Mass or Volume Total
- Relay Outputs  
Heat, Mass or Volume Flow Rate , Total, Pressure, Temperature Alarms, Peak Demand, Demand Last Hour

**Applications:**

Monitoring heat flow and total heat of steam. Flow alarms are provided via relays and datalogging is available via analog (4-20mA) and serial outputs.

**Steam Heat Illustration**

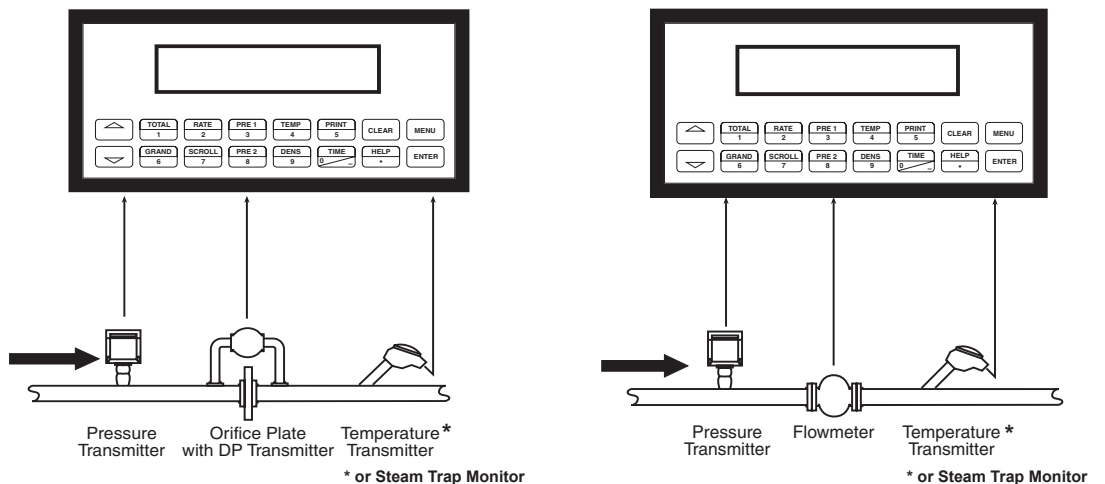

**Calculations**

**Heat Flow**

**SUPERHEATED STEAM:**

$$\text{Heat Flow} = \text{Volume flow} \cdot \text{density} (T_1, p_2) \cdot \text{Sp. Enthalpy of steam} (T_1, p_2)$$

**SUATURATED STEAM:**

$$\text{Heat Flow} = \text{Volume flow} \cdot \text{density} (T_2 \text{ or } P_2) \cdot \text{Sp. Enthalpy of steam at} (T_2 \text{ or } P_2)$$

**STEAM NET HEAT**

**3.3 Steam Net Heat**

**Measurements:**

A flowmeter measures the actual volume flow in a steam line. A temperature and a pressure sensor are installed to measure temperature and/or pressure. All measurement are made on the steam side of a heat exchanger.

**Calculations:**

- Density, mass flow and net heat flow are calculated using the steam tables stored in the flow computer. The net heat is defined as the difference between the heat of the steam and the heat of the very hot condensate. For simplification it is assumed that the condensate (water) has a temperature which corresponds to the temperature of saturated steam at the pressure measured upstream of the heat exchanger.
- With square law device measurement the actual volume is calculated from the differential pressure, taking into account steam side temperature and pressure compensation.
- Saturated steam requires either a pressure or temperature measurement with the other variable calculated using the saturated steam curve.
- Optional steam trap monitoring using compensation input 1 if not used in saturated steam application.

**Input Variables:**

*Superheated Steam:* Flow, temperature and pressure  
*Saturated Steam:* Flow, temperature or pressure


**Output Results:**

- Display Results  
Heat, Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density, (peak demand, demand last hour, time/date stamp)
- Analog Output  
Heat, Mass or Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour
- Pulse Output  
Heat, Mass or Volume Total
- Relay Outputs  
Heat, Mass or Volume Flow Rate, Total, Pressure, Temperature Alarms, Peak Demand, Demand Last Hour

**Applications:**

Monitoring the thermal energy which can be extracted by a heat exchanger taking into account the maximum possible thermal energy remaining in the returned condensate. For simplification it is assumed that the condensate (water) has a temperature which corresponds to the temperature of saturated steam at the pressure measured upstream of the heat exchanger.

**Steam Net Heat Illustration**

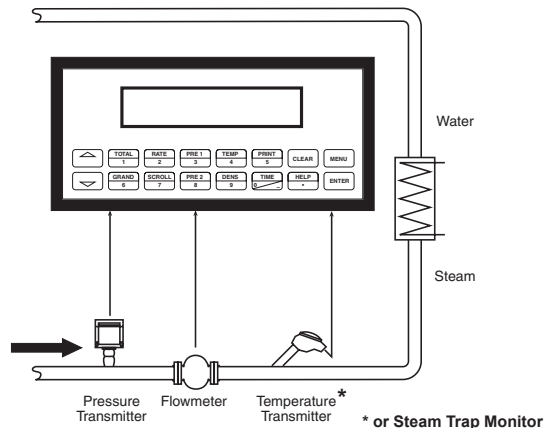

**Calculations**

**Net Heat Flow**

**SUPERHEATED STEAM:**

$$\text{Net Heat Flow} = \text{Volume flow} \cdot \text{density} (T_1, P_2) \cdot [E_D (T_1, P_2) - E_W (T_{S(p)})]$$

**SATURATED STEAM:**

$$\text{Net Heat Flow} = \text{Volume flow} \cdot \text{density} (T_2 \text{ or } P_2) \cdot [E_D (T_2 \text{ or } P_2) - E_W (T_{\text{Sat}(T_2 \text{ or } P_2)})]$$

- $E_D$  = Specific enthalpy of steam
- $E_W$  = Specific enthalpy of water
- $T_{S(p)}$  = Calculated condensation temperature  
(= saturated steam temperature for supply pressure)

**STEAM DELTA HEAT**

**3.4 Saturated Steam Delta Heat**

**Measurements:**

Measures actual volume flow and pressure of the saturated steam in the supply piping as well as the temperature of the condensate in the downstream piping of a heat exchanger.

**Calculations:**

- Calculates density, mass flow as well as the delta heat between the saturated steam (supply) and condensation (return) using physical characteristic tables of steam and water stored in the flow computer.
- With square law device measurement the actual volume is calculated from the differential pressure, taking into account temperature and pressure compensation.
- The saturated steam properties in the supply line is calculated from the pressure (or temperature) measured there.

**Input Variables:**

*Supply:* Flow and either temperature or pressure (saturated steam)

*Return:* Temperature (condensate)


**Output Results:**

- Display Results  
Heat, Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density (optional: peak demand, demand last hour, time/date stamp)
- Analog Output  
Heat, Mass or Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour
- Pulse Output  
Heat, Mass or Volume Total
- Relay Outputs  
Heat, Mass or Volume Flow Rate , Total, Pressure, Temperature Alarms, Peak Demand, Demand Last Hour

**Applications:**

Calculate the saturated steam mass flow and the heat extracted by a heat exchanger taking into account the thermal energy remaining in the condensate.

**Steam Delta Heat Illustration**

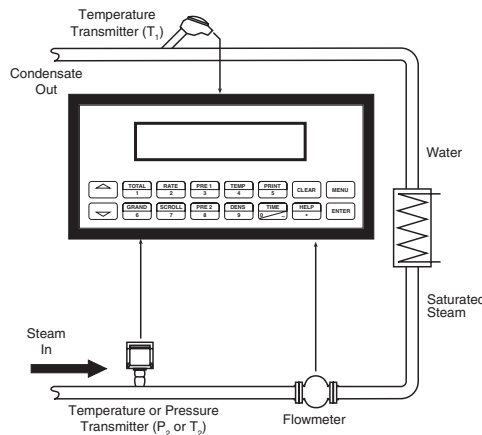

**Calculations**

**Delta Heat Flow**

$$\text{Net Heat Flow} = \text{Volume flow} \cdot \text{density} (P_2 \text{ or } T_2) \cdot [E_D (P_2 \text{ or } T_2) - E_w (T_1)]$$

- $E_D$  = Specific enthalpy of steam implied by either  $T_2$  or  $P_2$
- $E_w$  = Specific enthalpy of water implied by  $T_1$

**Note:** Assumes a closed system.

**CORRECTED GAS VOLUME**

**3.5 Corrected Gas Volume**

**Measurements:**

A flowmeter measures the actual volume flow in a gas line. Temperature and pressure sensors are installed to correct for gas expansion effects.

**Calculations:**

- Corrected Volume is calculated using the flow, temperature and pressure inputs as well as the gas characteristics stored in the flow computer (see "FLUID DATA" submenu). Use the "OTHER INPUT" submenu to define reference temperature and reference pressure values for standard conditions.


**Output Results:**

- Display Results  
Corrected Volume or Actual Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density (optional: peak demand, demand last hour, time/date stamp)
- Analog Output  
Corrected Volume or Actual Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour
- Pulse Output  
Corrected Volume or Actual Volume Total
- Relay Outputs  
Corrected Volume or Actual Volume Flow Rate, Total, Pressure, Temperature Alarms, Peak Demand, Demand Last Hour

**Applications:**

Monitoring corrected volume flow and total of any gas. Flow alarms are provided via relays and datalogging is available via analog (4-20mA) and serial outputs.

**Corrected Gas Volume Illustration**

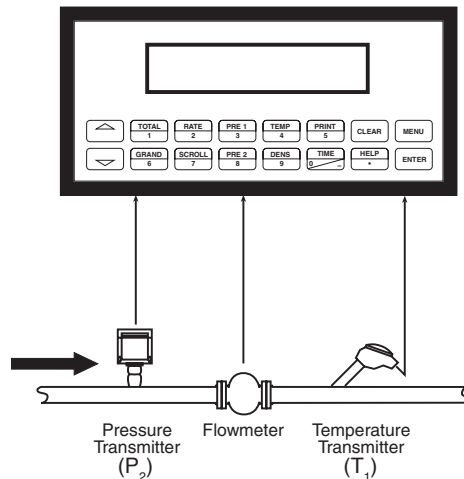

**Calculations**

**Volume Flow**

*Pulse Input; Average K-Factor*

$$\text{Volume Flow} = \frac{\text{input frequency} \cdot \text{time scale factor}}{\text{K-Factor}}$$

*Analog Input; Linear*

$$\text{Volume Flow} = \% \text{ input} \cdot \text{Full Scale Flow}$$

(See "Computations" section for other available equations)

**Corrected Volume Flow**

$$\text{Corrected Volume Flow} = \text{Volume Flow} \cdot \frac{P}{P_{\text{ref}}} \cdot \frac{T_{\text{ref}}}{T} \cdot \frac{Z_{\text{ref}}}{Z}$$

**GAS MASS**

**3.6 Gas Mass**

**Measurements:**

A flowmeter measures the actual volume flow in a gas line. Temperature and pressure sensors are installed to measure temperature and pressure.

**Calculations:**

- Density and mass flow are calculated using gas characteristics stored in the flow computer.
- With square law device measurement the actual volume is calculated from the differential pressure, taking into account temperature and pressure compensation.


**Output Results:**

- Display Results  
Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density (peak demand, demand last hour, time/date stamp)
- Analog Output  
Mass or Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour
- Pulse Output  
Mass or Volume Total
- Relay Outputs  
Mass or Volume Flow Rate, Total, Pressure, Temperature, Density Alarms, Peak Demand, Demand Last Hour

**Applications:**

Monitoring mass flow and total of gas. Flow alarms are provided via relays and datalogging is available via analog (4-20mA) and serial outputs.

**Gas Mass Illustration**

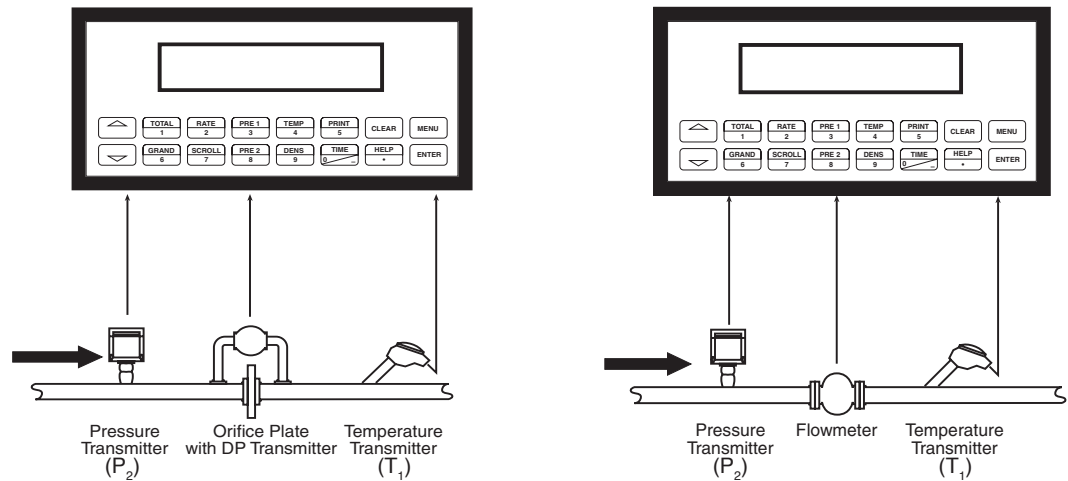

**Calculations**

**Mass Flow**

$$\text{Mass Flow} = \text{Actual Volume Flow} \cdot \rho_{\text{ref}} \cdot \frac{P}{P_{\text{ref}}} \cdot \frac{T_{\text{ref}}}{T} \cdot \frac{Z_{\text{ref}}}{Z}$$

- $\rho_{\text{ref}}$  = Reference density
- $T_{\text{ref}}$  = Reference temperature
- $P_{\text{ref}}$  = Reference pressure
- $Z_{\text{ref}}$  = Reference Z-factor

(See "Computations" section for other available equations)



**GAS COMBUSTION HEAT**

**3.7 Gas Combustion Heat**

**Measurements:**

A flowmeter measures the actual volume flow in a gas line. Temperature and pressure sensors are installed to measure temperature and pressure.

**Calculations:**

- Density, mass flow and combustion heat are calculated using gas characteristics stored in the flow computer.
- With square law device measurement the actual volume is calculated from the differential pressure, taking into account temperature and pressure compensation.


**Output Results:**

- Display Results  
Heat, Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density (peak demand, demand last hour, time/date stamp)
- Analog Output  
Heat, Mass or Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour
- Pulse Output  
Heat, Mass or Volume Total
- Relay Outputs  
Heat, Mass or Volume Flow Rate, Total, Pressure, Temperature Alarms, Peak Demand, Demand Last Hour

**Applications:**

Calculate the energy released by combustion of gaseous fuels.

**Gas Combustion Heat**

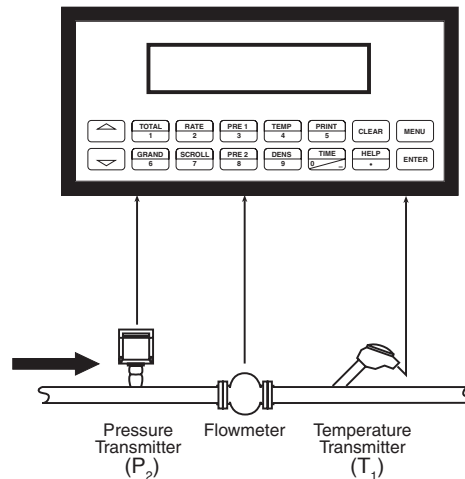

**Calculations**

**Combustion Heat Flow**

$$\text{Combustion Energy} = C \cdot \rho_{\text{ref}} \cdot Q \cdot \frac{P}{P_{\text{ref}}} \cdot \frac{T_{\text{ref}}}{T} \cdot \frac{Z_{\text{ref}}}{Z}$$

- C = Specific combustion heat
- $\rho_{\text{ref}}$  = Reference density
- Q = Volume flow

(See "Computations" section for other available equations)

**Corrected Liquid Volume**

**3.8 Corrected Liquid Volume**

**Measurements:**

A flowmeter measures the actual volume flow in a liquid line. A temperature sensor is installed to correct for liquid thermal expansion. A pressure sensor can be installed to monitor pressure. Pressure measurement does not affect the calculation.

**Calculations:**

- Corrected Volume is calculated using the flow and temperature inputs as well as the thermal expansion coefficient stored in the flow computer (see "FLUID DATA" submenu). Use the "OTHER INPUT" submenu to define reference temperature and density values for standard conditions.


**Output Results:**

- Display Results  
Corrected Volume and Actual Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density (optional: peak demand, demand last hour, time/date stamp)
- Analog Output  
Corrected Volume and Actual Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour
- Pulse Output  
Corrected Volume and Actual Volume Total
- Relay Outputs  
Corrected Volume and Actual Volume Flow Rate, Total, Pressure, Temperature Alarms, Peak Demand, Demand Last Hour

**Applications:**

Monitoring corrected volume flow and total of any liquid. Flow alarms are provided via relays and datalogging is available via analog (4-20mA) and serial outputs.

**Corrected Liquid Volume Illustration**

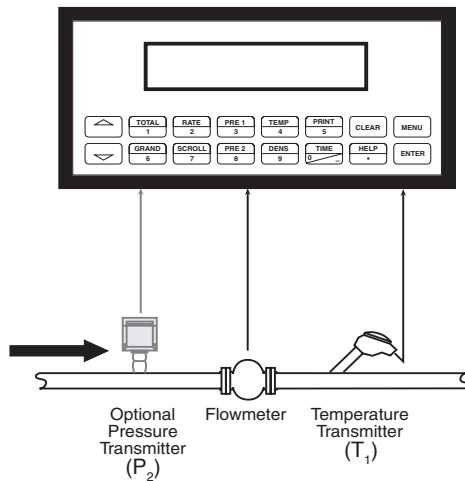

**Calculations**

**Volume Flow**

*Pulse Input; Average K-Factor*

$$\text{Volume Flow} = \frac{\text{input frequency} \cdot \text{time scale factor}}{\text{K-Factor}}$$

*Analog Input; Linear*

$$\text{Volume Flow} = \% \text{ input} \cdot \text{Full Scale Flow} \quad (\text{See "Computations" section for other available equations})$$

**Corrected Volume Flow**

$$\text{Corrected Volume Flow} = \text{vol. flow} \cdot (1 - \alpha \cdot (T_f - T_{ref}))^2$$

$\alpha$  = Thermal expansion coefficient  $\cdot 10^{-6}$

**Liquid Mass**

**3.9 Liquid Mass**

**Measurements:**

Actual volume flow is measured by the flow element (DP transmitter, Flowmeter). Temperature is measured by the temperature transmitter. A pressure transmitter can be used to monitor pressure. Pressure measurement does not affect the calculation. A density transmitter may be used in place of a temperature transmitter for direct density measurement.

**Calculations:**

- The density and mass flow are calculated using the reference density and the thermal expansion coefficient of the liquid (see "FLUID DATA" submenu)


**Output Results:**

- Display Results  
Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density (peak demand, demand last hour, time/date stamp)
- Analog Output  
Mass or Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour
- Pulse Output  
Mass or Volume Total
- Relay Outputs  
Mass or Volume Flow Rate, Total, Temperature, Pressure, Density Alarms, Peak Demand, Demand Last Hour

**Applications:**

Monitoring mass flow and total of any liquid. Flow alarms are provided via relays and datalogging is available via analog (4-20mA) and serial outputs.

**Liquid Mass Illustration**

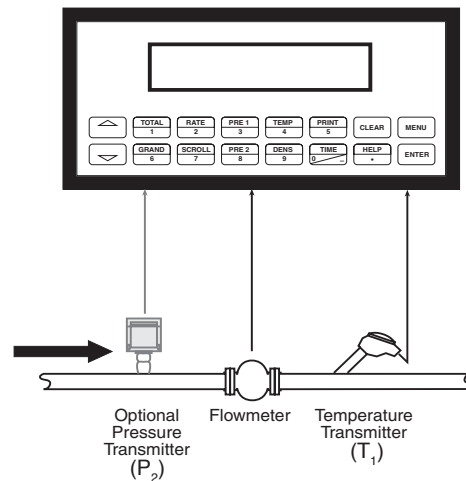

**NOTE:**  
A density transmitter may be used for direct density measurement.

**Calculations**

**Volume Flow**

As calculated in the "Computations" section

**Mass Flow**

$$\text{Mass Flow} = \text{volume flow} \cdot (1 - \alpha \cdot (T_1 - T_{ref}))^2 \cdot \text{ref. density}$$

$$\alpha = \text{Thermal expansion coefficient} \cdot 10^{-6}$$

(See "Computations" section for other available equations)

**LIQUID COMBUSTION HEAT**    **3.10 Liquid Combustion Heat**

**Measurements:**

Actual volume flow is measured by the flow element (DP transmitter, Flowmeter). Temperature is measured by the temperature transmitter. A pressure transmitter can be used to monitor pressure. Pressure measurement does not affect the calculation.

**Calculations:**

- The density, mass flow and combustion heat are calculated using the fluid characteristics stored in the flow computer. (see "FLUID DATA" submenu)


**Output Results:**

- Display Results  
 Combustion Heat, Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density (peak demand, demand last hour, time/date stamp)
- Analog Output  
 Combustion Heat, Mass or Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour
- Pulse Output  
 Combustion Heat, Mass or Volume Total
- Relay Outputs  
 Combustion Heat, Mass or Volume Flow Rate, Total, Temperature, Pressure Alarms, Peak Demand, Demand Last Hour

**Applications:**

Calculate the energy released by combustion of liquid fuels

**Liquid Combustion Heat Illustration**

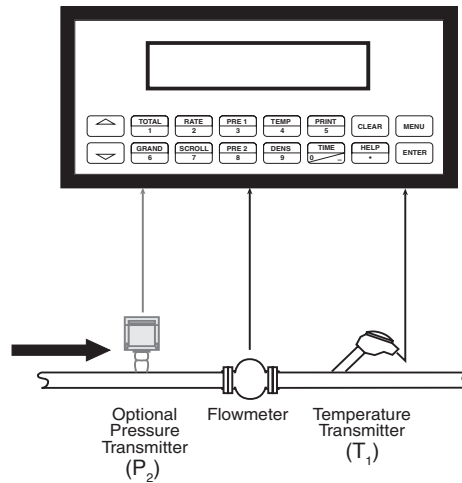

**Calculations**

**Volume Flow**

As calculated in the "Computations" section

**Heat Flow**

$$\text{Heat Flow} = C \cdot \text{volume flow} \cdot (1 - \alpha \cdot (T_1 - T_{ref}))^2 \cdot \text{ref. density}$$

- $\alpha$  = Thermal expansion coefficient  $\cdot 10^{-6}$
- C = Specific combustion heat

(See "Computations" section for other available equations)

**LIQUID SENSIBLE HEAT**

**3.11 Liquid Sensible Heat**

**Measurements:**

Actual volume flow is measured by the flow element (DP transmitter, Flowmeter). Temperature is measured by the temperature transmitter. A pressure transmitter can be used to monitor pressure. Pressure measurement does not affect the calculation.

**Calculations:**

- The density, mass flow and sensible heat are calculated using the fluid characteristics stored in the flow computer. (see "FLUID DATA" submenu)


**Output Results:**

- Display Results  
Sensible Heat, Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density (peak demand, demand last hour, time/date stamp)
- Analog Output  
Sensible Heat, Mass or Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour
- Pulse Output  
Sensible Heat, Mass or Volume Total
- Relay Outputs  
Sensible Heat, Mass or Volume Flow Rate, Total, Temperature, Pressure Alarms, Peak Demand, Demand Last Hour

**Applications:**

Calculate the energy stored in a condensate with respect to water at 32°F (0°C).

**Liquid Sensible Heat Illustration**

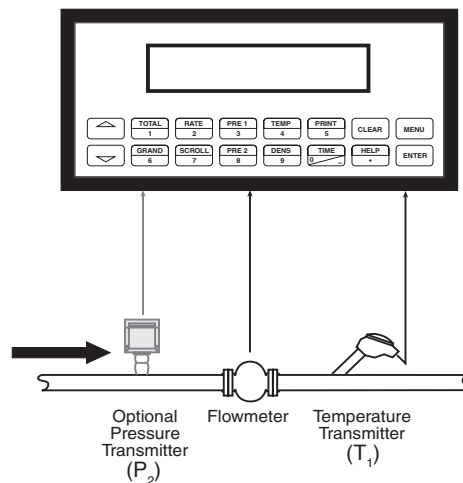

**Calculations**

**Volume Flow**

As calculated in the "Computations" section

**Heat Flow**

$$\text{Heat Flow} = C \cdot \text{volume flow} \cdot (1 - \alpha \cdot (T_1 - T_{ref}))^2 \cdot \text{ref. density} \cdot (T_1 - 32)$$

- $\alpha$  = Thermal expansion coefficient  $\cdot 10^{-6}$
- C = Specific heat

(See "Computations" section for other available equations)

**LIQUID DELTA HEAT 3.12 Liquid Delta Heat**

**Measurements:**

Actual volume flow is measured by the flow element (DP transmitter, Flowmeter). Temperature of the supply and return lines are measured by the temperature transmitters.

**Calculations:**

- The density, mass flow and delta heat are calculated using values of the heat carrying liquid stored in the flow computer. (see "FLUID DATA" submenu)
- Can select to perform either a heating or cooling calculation


**Output Results:**

- Display Results  
Heat, Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature1, Temperature2, Delta Temperature, Density, (peak demand, demand last hour, time/date stamp)
- Analog Output  
Heat, Mass or Volume Flow Rate, Temperature1, Temperature2, Delta Temperature, Density, Peak Demand, Demand Last Hour
- Pulse Output  
Heat, Mass or Volume Total
- Relay Outputs  
Heat, Mass or Volume Flow Rate, Total, Temperature Alarms, Peak Demand, Demand Last Hour

**Applications:**

Calculate the energy which is extracted by a heat exchanger from heat carrying liquids.

**Liquid Delta Heat Illustration**

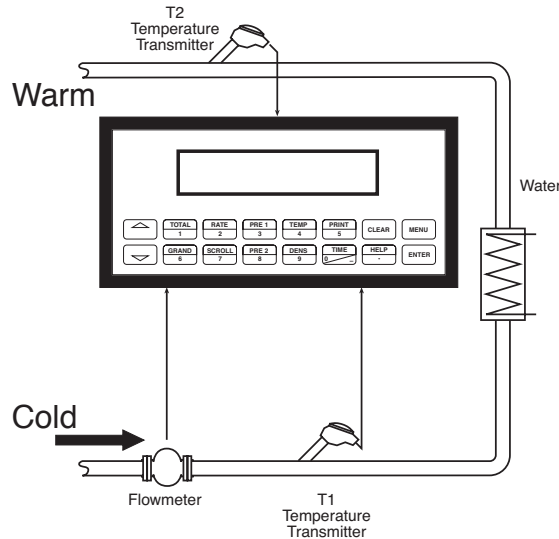

**Calculations**

**Water**

$$\text{Heat} = \text{Volume Flow} \cdot \rho(T_1) \cdot [h(T_2) - h(T_1)]$$

**Other heat carrying liquids**

$$\text{Heat} = C \cdot \text{volume flow} \cdot (1 - \alpha \cdot (T_1 - T_{ref}))^2 \cdot \rho_{ref} \cdot (T_2 - T_1)$$

WHERE: Delta T > Low Delta T Cutoff

**NOTE:** Can be set to solve either heating or cooling calculation

- $\alpha$  = Thermal expansion coefficient  $\cdot 10^{-6}$
- C = Mean specific heat
- $\rho(T_1)$  = Density of water at temperature  $T_1$
- $h(T_1)$  = Specific enthalpy of water at temperature  $T_1$
- $h(T_2)$  = Specific enthalpy of water at temperature  $T_2$
- $\rho_{ref}$  = Reference density
- $T_{ref}$  = Reference temperature

## 4. WIRING

### 4.1 Terminal Designations

#### Two Relay Terminations

1	DC OUTPUT		
2	PULSE IN	Vin (+)*	FLOW IN
3	-----	Iin (+)	
4	COMMON		
5	RTD EXCIT (+)		TEMPERATURE
6	RTD SENS (+)		IN
7	RTD SENS (-)	Iin (+)**	
8	DC OUTPUT		
9	RTD EXCIT (+)		PRESSURE
10	RTD SENS (+)		(TEMP 2)
11	RTD SENS (-)	Iin (+)	IN
12	PULSE OUTPUT (+)		
13	PULSE OUTPUT (-)		
14	ANALOG OUTPUT 1 (+)		
15	ANALOG OUTPUT 2 (+)		
16	ANALOG OUTPUT COMMON (-)		
17	NO		
18	COM RLY1		
19	NC		
20	NC		
21	COM RLY2		
22	NO		
23	AC LINE	DC (+)	POWER IN
24	AC LINE	DC (-)	

#### Three Relay Option Terminations

1	DC OUTPUT		
2	PULSE IN	Vin (+)*	FLOW IN
3	-----	Iin (+)	
4	COMMON		
5	RTD EXCIT (+)		TEMPERATURE
6	RTD SENS (+)		IN
7	RTD SENS (-)	Iin (+)**	
8	DC OUTPUT		
9	RTD EXCIT (+)		PRESSURE
10	RTD SENS (+)		(TEMP 2)
11	RTD SENS (-)	Iin (+)	IN
12	PULSE OUTPUT (+)		
13	PULSE OUTPUT (-)		
14	ANALOG OUTPUT 1 (+)		
15	ANALOG OUTPUT 2 (+)		
16	ANALOG OUTPUT COMMON (-)		
17	N.O. RLY1		
18	COM.RLY1		
19	N.O. RLY3		
20	COM.RLY3		
21	N.O. RLY2		
22	COM.RLY2		
23	AC LINE	DC (+)	POWER IN
24	AC LINE	DC (-)	





\* In stacked DP mode, terminal 2 is used for Iin (+) DP Hi Range.  
Terminal 3 is used for Iin (+) DP Lo Range.

\*\* In trap monitor mode, terminal 7 is used for Iin (+) from trap monitor.




**4.2 Typical Wiring Connections:**


**4.2.1 Flow Input**

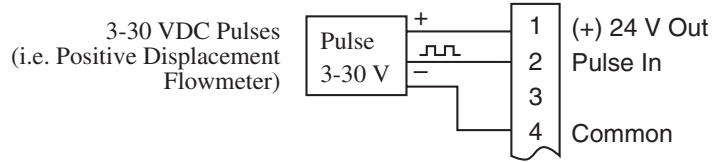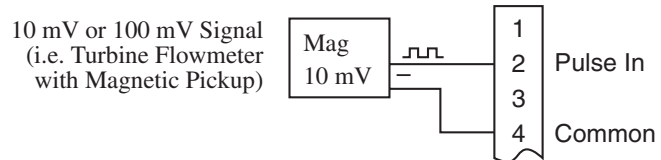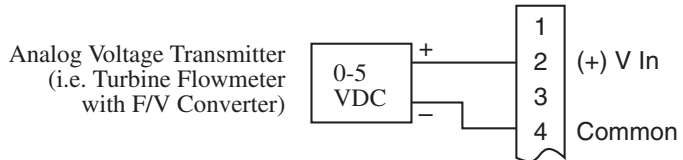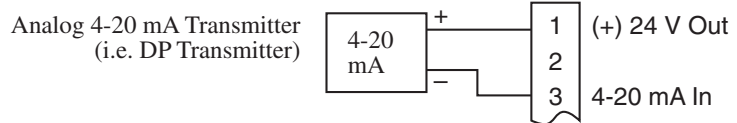

**4.2.2 Stacked DP Input**


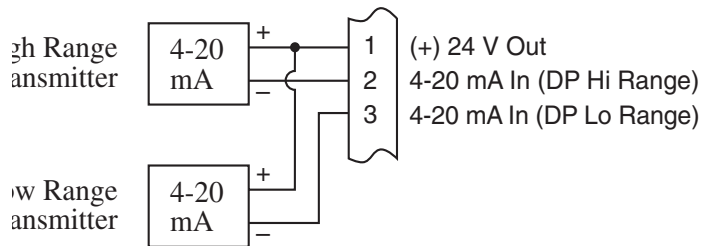


**4.2.3 Pressure Input**

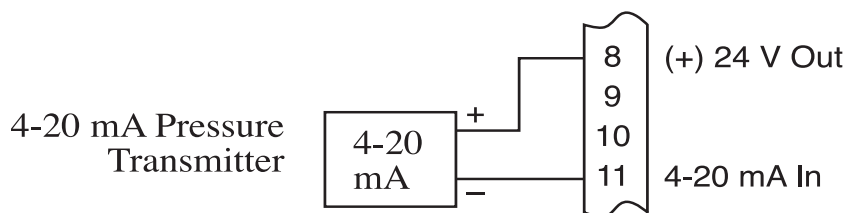

### 4.2.4 Temperature Input



RTD Connections  
2, 3 & 4 wire RTD's

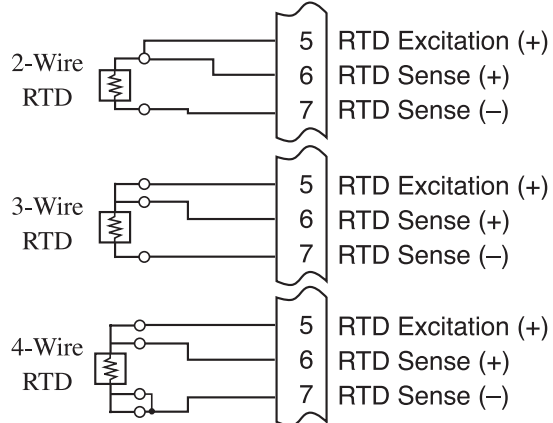

\* Or optional steam trap monitoring input in some saturated steam applications.

### 4.2.5 Temperature 2 Input


RTD Connections  
2, 3 & 4 wire RTD's

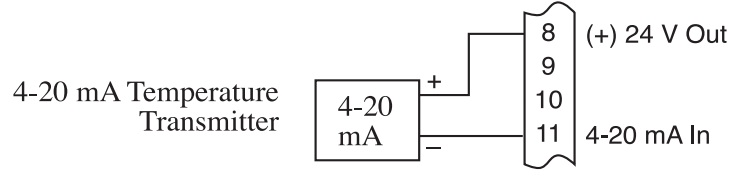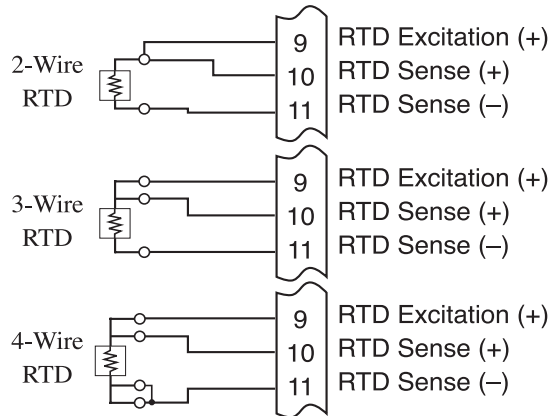


### 4.3 Wiring In Hazardous Areas

#### Examples using MTL787S+ Barrier (MTL4755ac for RTD)


##### 4.3.1 Flow Input

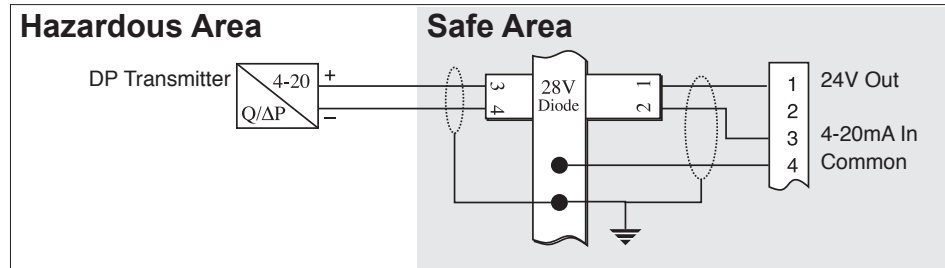

##### 4.3.2 Pressure Input

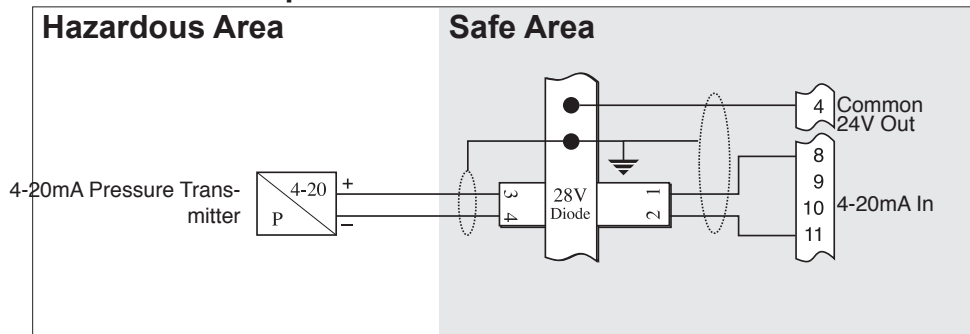


##### 4.3.3 Temperature Input

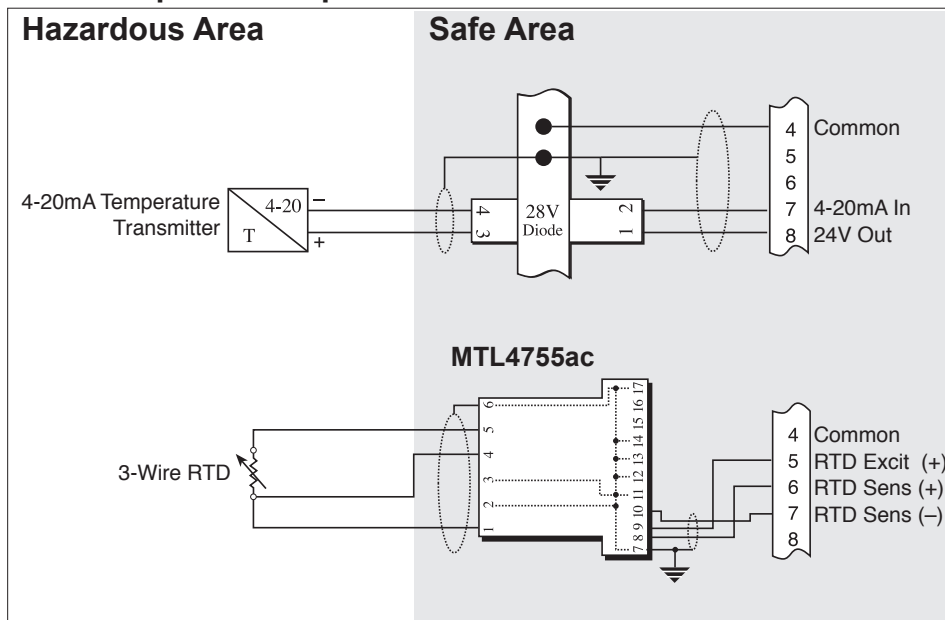

## 5. UNIT OPERATION

### 5.1 Front Panel Operation Concept for Operate Mode

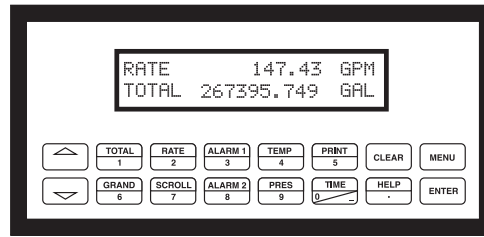

#### How To Use On-Line Help

#### HELP

On-line help is provided to assist the operator in using this product. The help is available during OPERATE and SETUP modes simply by pressing the HELP key. The HELP key is used to enter decimals when entering numeric values.

#### How To View Process Values

#### VIEWING PROCESS VALUES

In the OPERATE mode, several keys have a special, direct access feature, to display an item of interest (i.e. RATE, TOTAL, ALARM SETPOINT, etc.). Press the key to view your choice. Press the  $\Delta \nabla$  keys to view other items in that group.

#### How To Clear The Totalizer

#### CLEARING TOTALIZER

To clear the totalizers, you must press the TOTAL Function Key to select the totalizer group. Press the  $\Delta \nabla$  keys to select the desired totalizer. Once the desired totalizer is displayed, press the CLEAR key to reset the total. The operator will be prompted to verify this action and to enter a password if the unit is locked.

#### How To Clear The Grand Total

#### CLEARING GRAND TOTAL

To clear the grand totalizers, you must press the GRAND Function Key and use the  $\Delta \nabla$  keys to select the desired grand total. Once the grand total is selected, press the CLEAR key to reset the grand total. The operator will be prompted to verify this action and to enter service password if the unit is locked.

#### How To Enter Alarm Setpoints

#### ALARM SETPOINT KEYS

ALARM 1 & ALARM 2 keys are used to view and/or change the alarm setpoints. To view the setpoints, simply press the desired Alarm setpoint key once. Rapidly press the alarm setpoint keys several times for direct editing of the alarm setpoints. The operator will be prompted to enter password if the unit is locked. Press CLEAR, "###", ENTER to enter value.

#### How To Activate The Scrolling Display List

#### SCROLL

Press the Scroll key to activate the scrolling display list. See section 6 to setup the display list.

#### How To Use The Print Key

#### PRINT

The PRINT key is used to print on demand when the communication port is set for printer. When the PRINT key is pressed, a user defined list of data (TOTAL, RATE, ALARM SETPOINT, etc.) is sent to the RS-232 port. A timed message of "PRINTING" will be displayed to acknowledge the print request.

#### How To Use The Menu Key

#### MENU KEY

The MENU key is used to view/enter the Instrument Setup and Service Mode. Press the MENU key to access the Setup and Service modes. (See section 6 for Setup mode). The MENU key is also used for a "Pop-Back" function. When the MENU key is pressed, the display will "Pop-Back" to the current submenu heading. Multiple MENU key depressions will return the unit to the Operate Mode.

#### How To Acknowledge Alarms

#### ACKNOWLEDGING ALARMS

Most alarm messages are self-clearing. Press the ENTER key to acknowledge and clear latching alarms.

NOTE: Some keys and functions are password protected. Enter the password to gain access. The passwords are factory set as follows:

**Private = 1000, Service = 2000**

**General Operation**

**5.2 General Operation**

This instrument is used primarily to monitor flowrate and accumulated total. The inputs can be software configured for a variety of flowmeter, temperature and pressure sensors. The standard output types include: Pulse, Relay, Analog and RS-232 The unit can display the flowrate, total and process variables. RS-485 is an available option for a second communication channel.

**Password Protection**

**5.3 Password Protection**

After an Private and/or Service Code is entered in the "System Parameters" Submenu Group. (see section 6.3, Private Code and Service Code sub-menus), the unit will be locked. The unit will prompt the user for the password when trying to perform the following functions:

- Clear Totals
- Clear Grand Totals (service code required)
- Edit a Setup Menu Item
- Edit Alarm Setpoints (ALARM 1 & ALARM 2 Keys)

The Service Code should be reserved for service technicians. The Service Code will allow access to restricted areas of the Service and Test menus. Changes in these areas may result in lost calibration information.

**Relay Operation**

**5.4 Relay Operation**

Two relay alarm outputs are standard. The relays may also be used for pulse outputs. The relays can be assigned to trip according to various rate, total, temperature or pressure readings. The relays can be programmed for low/high alarms, latch or unlatch, or as relay pulse outputs.

ALARM SETPOINT 1 (RLY1) and ALARM SETPOINT 2 (RLY2) are easily accessible by pressing the ALARM 1 or ALARM 2 key on the front panel.

**Pulse Output**

**5.5 Pulse Output**

The isolated pulse output is menu assignable to any of the available totals. The pulse output duration and scaling can be set by the user. The pulse output is ideal for connecting to remote totalizers or other devices such as a PLC. See section 1.2 for electrical specifications.







**Analog Outputs**

**5.6 Analog Outputs**

The analog outputs are menu assignable to correspond to any of the process parameters. The outputs are menu selectable for 0-20 mA or 4-20 mA. The analog outputs are ideal for "trend" tracking using strip chart recorders or other devices.

**Function Keys Display Grouping**

**5.7 Function Keys; Display Grouping**

TOTAL	Press the  keys to view HEAT TOTAL, MASS TOTAL, CORRECTED VOLUME TOTAL, VOLUME TOTAL
GRAND TOTAL	Press the  keys to view GRAND HEAT, GRAND MASS, GRAND CORRECTED VOLUME, GRAND VOLUME
RATE	Press the  keys to view HEAT, MASS, CORRECTED VOLUME, VOLUME, PEAK DEMAND, DEMAND LAST HOUR
TEMPERATURE	Press the  keys to view TEMPERATURE 1, TEMPERATURE 2, DELTA TEMPERATURE, DENSITY
PRESSURE	Press the  keys to view PRESSURE, DIFFERENTIAL PRESSURE, Y <sub>1</sub> , SPECIFIC ENTHALPY
TIME	Press the  keys to view TIME/DATE, PEAK TIME/DATE, ACCUMULATIVE POWER LOSS TIME, TIME OF LAST POWER OUTAGE, TIME POWER WAS LAST RESTORED

**RS-232 Serial Port Operation**
**5.8 RS-232 Serial Port Operation**

The RS-232 serial port can be used for programming (using the Setup Disk) or for communicating to printers and computers in the Operating Mode (Run Mode). Enhanced uses include remote metering by modem or two way pager.

**PC Communications**
**5.8.1 PC Communications:**

The Setup Disk also allows the user to query the unit for operating status such as Flow Rate, Flow Total, Temperature, Pressure, Alarm Setpoints, etc. In this mode of operation the RS232 port is assumed connected to a computer. The ES761ST2 will act as a slave and answer requests from the PC. See the Universal Protocol Users Manual for a complete listing of the commands set supported. A DDE/OPC Server is also available for use in exchanging information with DDE Clients such as Spread Sheets, Database Programs, and HMI software.

**RS-232 Serial Port Operation of RS-232 Serial Port with Printers**
**5.8.2 Operation of RS-232 Serial Port with Printers:**
Transaction Printing

For transaction printing, the user defines the items to be included in the printed document (see section 6.13 COMMUNICATION, Print List). The transaction document can be initiated by pressing the PRINT key.

Data Logging

The user can select when (time of day) or how often (print interval) the data log is to be made (see section 6.13 COMMUNICATION, Print Initiate). Information will be stored to the datalogger and optionally output to the RS-232 port.

System Setup and Maintenance Report

The system setup and maintenance report lists all of the instrument setup parameters and usage for the current instrument configuration. The audit trail information and a status report is also printed. This report is initiated in the Service and Analysis Group (see section 6.15 SERVICE & ANALYSIS, Print System Setup).

**Operation of RS-232 Serial Port with Modems and Pagers**
**5.8.3 Operation of RS-232 Serial Port with Modems and Pagers**
Modem

In this mode of operation the RS232 port is assumed to be connected to MPP2400N or similar telephone modem. The ES761ST2 is responsible for communicating to a remote computer through the modem to perform such actions as:

Answer incoming calls, process requests for information or action items or data log contents or change setup parameters, call out daily readings to designated phone number, call out to designated phone number in the case of a designated exception or malfunction in the unit, terminating telephone calls if a connection is lost.

Two Way Paging

In this mode of operation the RS232 port is assumed to be connected to TWP Two Way Pager Transceiver. The ES761ST2 is responsible for communicating to the pager to perform such actions as:

Look for and process requests for information or change setup parameters, call out daily readings to designated pager/email address, call out to designated pager/email address in the case of a designated exception or malfunction in the unit.

**RS-485 Serial Port Operation**
**5.9 RS-485 Serial Port Operation**

The RS-485 serial port is intended to permit operation of the flow computer in a RS-485 network. Access is limited to reading process variables, totalizers, error logs and to executing action routines such as clearing totalizers, alarms, and changing setpoints.

**Pause Computations Prompt**
**5.10 Pause Computations Prompt**


The user will be prompted with a "Pause Computations" message when making significant setup changes to the instrument. Pausing computations is necessary to make any significant changes. With computations paused, all outputs assume a safe state equal to that of an unpowered unit. Computations resume when exiting the setup menu.

## 6. PROGRAMMING

### 6.1 Front Panel Operation Concept for Program Mode

The ES761ST2 is fully programmable through the front panel. The instrument setup menu structure is based on a number of topical submenu groups with one submenu group for each instrument function. Each submenu contains all of the individual settings associated with that function. During the instrument setup, setup topics are shown on the bottom line of the display while the detailed selection options are shown on the top line. A help menu is available for each menu item.

Please review the following key usage summary before attempting to setup the instrument.

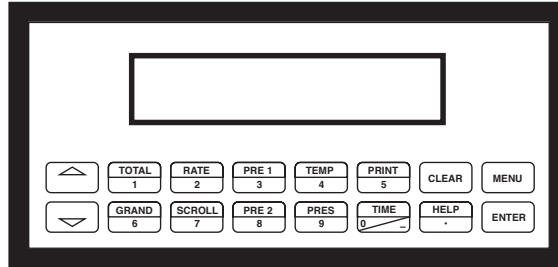

**CAUTION:** When the computations are paused the instrument outputs will go to a safe state which is the same as if the unit lost power. All calculations stop.

#### Key Usage Summary:

 **Menu Key**

#### **MENU KEY**

Pressing the MENU key while in the "HOME" position will select the view setup parameters mode. Thereafter, the MENU key is used to "pop up" one menu level (i.e. return to the start of the submenu group). The unit will "pop up" one level for each time the **MENU key is pressed until finally returning to the "HOME" position of showing the "scroll" display list.**

 **Up & Down Arrow Keys**

#### **UP & DOWN ARROW KEYS**

Use the UP and DOWN arrow keys to navigate through the submenu groups. The up and down arrow keys are also used to view the next/previous selection in a selection list within a submenu cell. When entering text characters, the UP and DOWN arrow keys are used to scroll through the available character sets for each individual character location. Press the ENTER key to accept the character and advance to the next character.

 **Help Key**

#### **HELP KEY**

On-line help is available to assist the user during instrument setup. A quick help is provided at each setup step. Press the HELP key to display a help message for the current setup selection. This key is also used to enter decimals during numeric entry sequences.

 **Numeric Entry Keys**

#### **NUMERIC ENTRY KEYS**

The keys labeled "0 - 9", "-", ".", CLEAR and ENTER are used to enter numerical values. A leading 0 will assume that you intend to enter a minus "-" sign. The standard numeric entry sequence is: CLEAR, "###", ENTER. Numeric entry values are bounded or clamped by minimum and maximum permitted values.

 **Clear Key**

#### **CLEAR KEY**

The CLEAR key is used to clear numeric values to "0".




 **Enter Key**

#### **ENTER KEY**






The ENTER key is used to accept the current value and advance to the next selection (Successfully terminate the current numeric entry sequence).





**6.2  
EZ  
SETUP**

<b>EZ SETUP</b>	
<b>EZ SETUP</b>	<p>The EZ Setup routine is a quick and easy way to configure the most commonly used instrument functions. We recommend first completing the EZ Setup routine for the flow equation and meter type for your initial application. The setup can then be customized using the complete submenu groups described later in this chapter.</p> <p><b>Caution:</b> Entering the EZ Setup mode automatically sets many features to a default value (without prompting the user). This may cause any previously programmed information to be lost or reset.</p> <p><b>Selection:</b></p> <p> YES, NO</p> <p><b>Display:</b>           EZ SETUP?    YES                                       PAUSE COMPUTATIONS</p> <p><b>Note:</b> The "Pause Computations" warning message informs the user that all computations are halted while programming EZ Setup.</p>
<b>EZ Setup Example: Steam Mass Vortex Flowmeter</b>	
<b>UNITS</b>	<p>Select the desired units of measure.</p> <p><b>Selection:</b></p> <p> METRIC, ENGLISH</p> <p><b>Display:</b>           ENGLISH                                       UNITS?</p>
<b>FLOW EQUATION</b>	<p>Select the flow equation appropriate for your application.</p> <p><b>Selection:</b></p> <p> STEAM MASS, STEAM HEAT, STEAM NET HEAT, STEAM DELTA HEAT, GAS CORRECTED VOLUME, GAS MASS, GAS COMBUSTION HEAT, LIQ. CORRECTED VOLUME, LIQUID MASS, LIQ. COMBUSTION HEAT, LIQUID SENSIBLE HEAT, LIQUID DELTA HEAT</p> <p><b>Display:</b>           STEAM MASS                                       FLOW EQUATION</p>

**6.2  
EZ  
SETUP**  
(Continued)

<b>EZ SETUP</b>	
<b>Fluid Type</b>	<p>Select the type of fluid appropriate for your application.</p> <p><b>Selection:</b></p> <p> SATURATED STEAM, SUPERHEATED STEAM</p> <p><b>Display:</b>     SATURATED STEAM                                FLUID TYPE</p>
<b>FLOWMETER TYPE</b>	<p>Select the flowmeter type used in your application.</p> <p><b>Selection:</b></p> <p> LINEAR, SQR LAW, SQR LAW-LIN., LINEAR 16 PT, SQR LAW 16 PT, SQR LAW-LIN. 16 PT, LINEAR UVC, GILFLO, GILFLO 16 PT, BYPASS, ILVA 16 PT, VERABAR, ACCELABAR</p> <p><b>Display:</b>             LINEAR                                FLOWMETER TYPE</p>
<b>INPUT SIGNAL</b>	<p>Select the appropriate input signal.</p> <p><b>Selection:</b></p> <p> 4-20 mA, 0-20 mA, 0-5 Vdc, 1-5 Vdc, 0-10 Vdc, DIGITAL: 10 mV LEVEL, DIGITAL: 100 mV LEVEL, DIGITAL: 2.5 V LEVEL, 4-20mA STACKED, 0-20mA STACKED, 4-20mA LINEAR MANIFOLD, 0-20mA LINEAR MANIFOLD</p> <p><b>Display:</b>             DIGITAL 2.5 V LEVEL                                INPUT SIGNAL</p>
<b>K-FACTOR</b>	<p>Enter the K-Factor for the flowmeter.</p> <p><b>Input:</b></p> <p> Number with floating decimal point: 0.0001...999999</p> <p><b>Display:</b>             123.67 P/ft<sup>3</sup>                                K-FACTOR</p>
<b>INPUT SIGNAL (PRESSURE)</b>	<p>Select the appropriate pressure input signal.</p> <p><b>Selection:</b></p> <p> MANUAL PRESSURE, 4-20 PRESSURE (ABS.), 0-20 PRESSURE (ABS.), 4-20 PRESSURE (G), 0-20 PRESSURE (G)</p> <p>If "Fluid Type" is set for Saturated Steam, selection will include: MANUAL TEMP., RTD, 0-20 TEMP., 4-20 TEMP.</p> <p><b>Display:</b>             4-20 PRESSURE (ABS.)                                INPUT SIGNAL</p>

**6.2  
EZ  
SETUP**  
(Continued)

<b>EZ SETUP</b>	
<b>FULL SCALE VALUE (PRESSURE)</b>	Select the type of fluid appropriate for your application.  <b>Selection:</b>   SATURATED STEAM, SUPERHEATED STEAM  <b>Display:</b> SATURATED STEAM FLUID TYPE
<b>DEFAULT VALUE (PRESSURE)</b>	Select the flowmeter type used in your application.  <b>Selection:</b>   LINEAR, SQR LAW, SQR LAW-LIN., LINEAR 16 PT, SQR LAW 16 PT, SQR LAW-LIN. 16 PT, LINEAR UVC, GILFLO, GILFLO 16 PT, BYPASS  <b>Display:</b> LINEAR FLOWMETER TYPE  Select the appropriate input signal.  <b>Selection:</b>  4-20 mA, 0-20 mA, 0-5 Vdc, 1-5 Vdc, 0-10 Vdc, DIGITAL: 10 mV LEVEL, DIGITAL: 100 mV LEVEL, DIGITAL: 2.5 V LEVEL, DIGITAL: 5 V LEVEL, DIGITAL: 10 V LEVEL, DIGITAL: 20 V LEVEL, DIGITAL: 50 V LEVEL, DIGITAL: 100 V LEVEL

**6.3  
DETAILED  
MENU  
DESCRIPTION**

**DETAILED MENU DESCRIPTION**


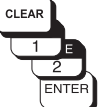

The menu organization for the unit is depicted in Appendix B. The first depiction is that available with the operator password. The second is that available with supervisor password.

Please reference Appendix B while reviewing the detailed descriptions for each menu location in the following sections.



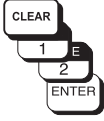
6.4  
SYSTEM  
PARAMETERS

SYSTEM PARAMETERS	
<b>EZ SETUP</b>	<p><b>Display:</b>       DIGITAL 2.5 V LEVEL                           INPUT SIGNAL</p> <p>Enter the K-Factor for the flowmeter.</p> <p><b>Input:</b></p> <p>                          Number with floating decimal point:                           0.0001...999999</p> <p><b>Display:</b>        123.67 P/ft<sup>3</sup>                           K-FACTOR</p> <p>Select the appropriate pressure input signal.</p> <p><b>Selection:</b></p> <p>                          MANUAL PRESSURE, 4-20 PRESSURE (ABS.),    0-                           20 PRESSURE (ABS.), 4-20 PRESSURE (G),    0-20                           PRESSURE (G)</p> <p><b>Display:</b>        4-20 PRESSURE (ABS.)                           INPUT SIGNAL</p> <p>Enter the full scale value for the pressure input signal.</p>
<b>ACCESS CODE</b>	<p><b>Input:</b></p> <p>                          Number with fixed decimal point:                           000.000 ... 999.999</p> <p><b>Display:</b>        588.000 psia                           FULL SCALE VALUE</p> <p>Enter the default value for the pressure input signal.</p> <p><b>Input:</b></p> <p>                          Number with fixed decimal point:                           000.000 ... 999.999</p> <p><b>Display:</b>        14.696 psia                           DEFAULT VALUE</p> <p><b>NOTE:</b> After the last entry has been saved, the display automatically returns to the HOME position. The "EZ Setup" routine is completed and the flow computations are resumed.</p>

**6.4  
SYSTEM  
PARAMETERS**  
(Continued)

<b>SYSTEM PARAMETERS</b>	
<b>FLOW EQUATION</b>	<p>The Flow Equation sets the basic functionality of the unit. Choose the Flow Equation for your particular application.</p> <p><b>Note:</b> Various setup data is only available depending on the flow equation selected. The flow equation also determines the assignment of the inputs.</p> <p><b>Caution:</b> Select the flow equation as the first step. We recommend using the EZ Setup to select the proper flow equation. The user can then enter the submenu groups and make additional changes as desired.</p> <p><b>Selection:</b></p> <p> GAS COMBUSTION HEAT, GAS MASS, GAS CORRECTED VOLUME, STEAM DELTA HEAT, STEAM NET HEAT, STEAM HEAT, STEAM MASS, LIQUID DELTA HEAT, LIQUID SENSIBLE HEAT, LIQ. COMBUSTION HEAT, LIQUID MASS, LIQ. CORRECTED VOLUME.</p> <p><b>Display:</b> STEAM MASS FLOW EQUATIONS</p>
<b>ENTER DATE</b>	<p>Enter the date in this format: Day - Month - Year.</p> <p><b>Note:</b> After prolonged breaks in the power supply (several days) or upon initial start-up of the unit, the date and time must be reset. This does not apply to units with the datalogger or language option.</p> <p><b>Input:</b></p> <p> Flashing selections can be changed. Store and Confirm entries with the ENTER key</p> <p><b>Display:</b> 08 FEB 1996 ENTER DATE</p>
<b>DAYLIGHT SAVINGS TIME</b>	<p>The "Daylight Savings" mode allows the unit to automatically adjust the time according to daylight savings time change</p> <p><b>Note:</b> Select "Yes" to enable the Daylight Savings Mode</p> <p><b>Selection:</b></p> <p> Yes, No</p> <p><b>Display:</b> Yes DAYLIGHT SAVINGS</p>

**6.4  
SYSTEM  
PARAMETERS**  
(Continued)
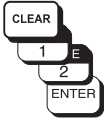
<b>SYSTEM PARAMETERS</b>	
<p><b>ENTER TIME</b></p>	<p>Enter the actual time in this format: Hours - Minutes</p> <p><b>Note:</b> After prolonged breaks in the power supply (several days) or upon initial start-up of the unit, the date and time must be reset.</p> <p><b>Input:</b></p>  <p>Flashing selections can be changed. Store and Confirm entries with the ENTER key</p> <p><b>Display:</b> 13:24 ENTER TIME</p>
<p><b>PRIVATE CODE</b></p> <p><b>Special Note:</b> After returning to the run mode, program editing is automatically locked after 60 seconds as long as no keys are pressed. The program editing can also be disabled by entering a number other than the private code at the Access Code prompt.</p>	<p>A personal code may be defined. This code is used to enable program editing.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• The private code is factory set to 1000</li> <li>• Entering a private code of "0" will always enable program editing (Turns automatic lock off)</li> </ul> <p><b>Input:</b></p>  <p>Maximum 4 digit number: 0...9999 Store and Confirm entries with the ENTER key</p> <p><b>Display:</b> 1000 PRIVATE CODE</p>
<p><b>SERVICE CODE</b></p> <p><b>Note:</b> The Service Code will allow access to the same information as the Private Code with the following additional functions:</p> <ul style="list-style-type: none"> <li>• Change the Service Code</li> <li>• Change the Order Code</li> <li>• Change the Serial No.</li> <li>• Clear Grand Total</li> <li>• Clear Errors in Error Log</li> <li>• View &amp; Perform calibration in Service &amp; Analysis Menu</li> <li>• Restore Factory Calibration Information in Service &amp; Analysis Menu</li> <li>• Set Next Calibration Date</li> <li>• Print Maint.Report</li> <li>• Perform Service Test</li> </ul>	<p>A personal service code may be defined. This code is used to enable program menus that are normally reserved for factory and service personnel. (i.e.: Service &amp; Analysis Submenu Group)</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• The service code is factory set to 2000</li> <li>• The service code submenu will only appear if the service code was entered for the "Access Code".</li> </ul> <p><b>Input:</b></p>  <p>Maximum 4 digit number: 0...9999 Store and Confirm entries with the ENTER key</p> <p><b>Display:</b> 2000 SERVICE CODE</p>

**6.4  
SYSTEM  
PARAMETERS**  
(Continued)

**SYSTEM PARAMETERS**

**ENGINEERING CODE**

**Note:**

The Engineering Code will allow access to the same information as the Private Code with the following additional functions:

- Change the Service Code
- Change the Order Code
- Change the Serial No.
- Clear Grand Total
- Clear Errors in Error Log
- View & Perform calibration in Service & Analysis Menu
- Restore Factory Calibration Information in Service & Analysis Menu
- Set Next Calibration Date
- Print Maint.Report
- Perform Service Test


A personal engineering code may be defined. This code is used to enable program menus that are normally reserved for engineering personnel.

(i.e.: Service & Analysis Submenu Group)

**Note:**

- The engineering code is factory set to 3000
- The engineering code submenu will only appear if the engineering code was entered for the "Access Code".

**Input:**



Maximum 4 digit number: 0...9999

Store and Confirm entries with the ENTER key

**Display:**

3000  
SERVICE CODE

**TAG NUMBER**

A personalized tag can be entered for unit I.D. purposes.

**Note:**

- Maximum of 10 characters.
- Spaces are considered characters and must be confirmed by pressing the ENTER key.

**Input:**



Alphanumeric characters for each of 10 positions  
1...9; A...Z;\_, <, =, >, ?, etc.




Flashing selections can be changed.

Store and Confirm entries with the ENTER key.

**Display:**

FT101  
TAG NUMBER

**6.4  
SYSTEM  
PARAMETERS**  
(Continued)

<b>SYSTEM PARAMETERS</b>	
<b>ORDER CODE</b>	<p>The order code (part number) of the unit can be entered. This will help in identifying what options were ordered.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• The order number is set at the factory and should only be altered if options are added in the field by an authorized service technician.</li> <li>• Maximum of 10 characters.</li> </ul> <p><b>Input:</b></p> <p> Alphanumeric characters for each of 10 positions 1...9; A...Z;</p> <p>Flashing selections can be changed. Store and Confirm entries with the ENTER key</p> <p><b>Display:</b>           ST2V10P                           ORDER CODE</p>
<b>SERIAL NUMBER</b>	<p>The serial number of the unit is assigned at the factory.</p> <p><b>Note:</b></p> <p>Maximum of 10 characters.</p> <p><b>Input:</b></p> <p> Alphanumeric characters for each of 10 positions 1...9; A...Z;</p> <p><b>Display:</b>           SN 12345                           SERIAL NUMBER</p>
<b>SERIAL-NO. SENS.</b>	<p>The serial number or tag number of the flowmeter can be entered.</p> <p><b>Note:</b></p> <p>Maximum of 10 characters.</p> <p><b>Input:</b></p> <p> Alphanumeric characters for each of 10 positions 1...9; A...Z;_, &lt;, =, &gt;, ?, etc.</p> <p>Flashing selections can be changed. Store and Confirm entries with the ENTER key.</p> <p><b>Display:</b>           SN 12345                           SERIAL-NO. SENS.</p>



**6.5  
DISPLAY**

DISPLAY


**SCROLL LIST**

Select the variable that are to be displayed in the "HOME position" during normal operation. Each variable can be assigned to line 1 (L1), line 2 (L2) or NO (removed from scroll list).

**Note:**

- To initiate the scroll list press the SCROLL key. The list will be displayed in groups of two, each group is displayed for approximately 3 to 4 seconds.
- Any alarm messages will be displayed periodically, alternating throughout the scroll list.

**Selection (with Prompt):**

 CHANGE? YES, NO

ADD TO LIST? L1, L2, NO

**Variable Selection:**  
 HEAT FLOW, MASS FLOW, VOLUME FLOW, STD. VOLUME FLOW, TEMP.1 (if Saturated Steam), TEMP.2 (if Saturated Steam), DELTA T, PRESSURE, DENSITY, SPEC. ENTHALPY, TIME, DATE, HEAT TOTAL, HEAT GRAND TOTAL, MASS TOTAL, MASS GRAND TOTAL, STD VOLUME TOTAL, STD.V. GRAND TOTAL, VOLUME TOTAL, VOL. GRAND TOTAL, PEAK DEMAND, DEMAND LAST HOUR, PEAK DEMAND TIME, PEAK DEMAND DATE




**Note:** Variable selection will vary depending on Flow Equation selected and options supplied.

**Display:**




```

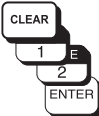ADD TO LIST?      L1
HEAT FLOW?
    
```

**6.5  
DISPLAY  
(Continued)**

<b>DISPLAY</b>	
<b>DISPLAY DAMPING</b>	<p>The "display damping" constant is used to stabilize fluctuating displays. The higher the constant, the less fluctuation will be displayed.</p> <p><b>Note:</b> Relay response time is affected by the value entered for display damping. The larger the display damping value, the slower the relay response time will be. This is intended to prevent false triggering of the relays. Enter a display damping factor of zero (0) for fastest response time.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• Factory setting: 1</li> </ul> <p><b>Input:</b></p>  <p>2 digits max; 0...99</p> <p><b>Display:</b></p> <pre style="font-family: monospace;"> CONSTANT?          1 DISPLAY DAMPING                     </pre>
<b>MAX. DEC. POINT</b>	<p>Enter the number of decimal places for numerical values.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• The number of decimal places applies to all displayed variables and totalizers.</li> <li>• The number of decimal places is automatically reduced if there is insufficient space available on the display for large numbers.</li> <li>• The number of decimal places set here does not affect the functions set in the programming setup.</li> </ul> <p><b>Selection:</b></p>  <p>0, 1, 2, 3 or 4 (decimal places)</p> <p><b>Display:</b></p> <pre style="font-family: monospace;">                                      3 MAX. DEC. POINT                     </pre>
<b>LANGUAGE</b>	<p>The language can be selected in which all text, parameters and operating messages are to be displayed.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• This function is supported by a special capability in the setup diskette.</li> </ul> <p><b>Selection:</b></p>  <p>ENGLISH, OTHER</p> <p><b>Display:</b></p> <pre style="font-family: monospace;"> ENGLISH LANGUAGE                     </pre>

**6.6  
SYSTEM  
UNITS**

<b>SYSTEM UNITS</b>	
<b>TIME BASE</b>	<p>Select "one" unit of time to be used as a reference for all measured or derived and time-dependant process variables and functions such as:</p> <ul style="list-style-type: none"> <li>• flowrate (volume/time; mass/time)</li> <li>• heat flow (amount of energy/time) etc.</li> </ul> <p><b>Selection:</b></p> <p> /s (per second), /m (per minute), /h (per hour), /d (per day)</p> <p><b>Display:</b>                    /h    TIME BASE</p>
<b>HEAT FLOW UNIT</b>	<p>Select the unit for heat flow (amount of energy, combustion heat).</p> <p><b>Note:</b> The unit selected here also applies to the following:</p> <ul style="list-style-type: none"> <li>• Zero and full scale value for current.</li> <li>• Relay setpoints</li> </ul> <p><b>Selection:</b></p> <p> kBtu/time base, kW, MJ/time base, kCal/time base, MW, tons, GJ/h, Mcal/h, Gcal/h, Mbtu/h, Gbtu/h, Dth/h</p> <p><b>Display:</b>                    kBtu/h    HEAT FLOW UNIT</p>
<b>HEAT TOTAL UNIT</b>	<p>Select the unit of heat for the particular totalizer.</p> <p><b>Note:</b> The unit selected here also applies to the following:</p> <ul style="list-style-type: none"> <li>• Pulse value for pulse output</li> <li>• Relay setpoints</li> </ul> <p><b>Selection:</b></p> <p> kBtu, kWh, MJ, kCal, MWh, tonh,GJ, Mcal, Gcal, Mbtu, Gbtu, Dth</p> <p><b>Display:</b>                    kBtu    HEAT FLOW UNIT</p>

**6.6  
SYSTEM  
UNITS**  
(Continued)

**SYSTEM UNITS**

**MASS FLOW UNIT**

Select the unit of mass flowrate (mass/time base).

**Note:**

The unit selected here also applies to the following:

- Zero and full scale value for current
- Relay setpoints

**Selection:**



lbs/time base, kg/time base, g/time base,  
t/time base, tons(US)/time base,  
tons(long)/time base

**Display:**

lbs/h

MASS FLOW UNIT

**MASS TOTAL UNIT**

Select the unit of mass for the particular totalizer.

**Note:**

The unit selected here also applies to the following:

- Pulse value for pulse output
- Relay setpoints

**Selection:**



lbs, kg, g, t, tons(US), tons(long), hlbs, Klbs, Mlbs

**Display:**



lbs

MASS TOTAL UNIT




**6.6  
SYSTEM  
UNITS**  
(Continued)

<b>SYSTEM UNITS</b>	
<b>COR.VOL. FLOW UNIT</b>	<p>Select the unit of corrected volumetric flowrate (corrected volume/time base).</p> <p><b>Note:</b> The unit selected here also applies to the following:</p> <ul style="list-style-type: none"> <li>• Zero and full scale value for current</li> <li>• Relay setpoints</li> </ul> <p><i>Corrected Volume</i> = volume measured under operating conditions converted to volume under reference conditions.</p> <p><b>Selection:</b> The available selections will change depending on the flow equation selected.</p> <div style="display: flex; align-items: center; margin-top: 20px;"> <p>bbl/time base, gal/time base, l/time base, hl/time base, dm<sup>3</sup>/time base, ft<sup>3</sup>/time base, m<sup>3</sup>/time base, scf/time base, Nm<sup>3</sup>/time base, NI/time base, igal/time base, mcf/time base</p> </div> <p>All units listed above apply to corrected volume.</p> <p><b>Display:</b></p> <div style="text-align: right; margin-right: 50px;">             scf/h COR.VOL. FLOW UNIT           </div>
<b>COR. VOLUME TOT. UNIT</b>	<p>Select the unit of volume for the particular totalizer.</p> <p><b>Note:</b> The unit selected here also applies to the following:</p> <ul style="list-style-type: none"> <li>• Pulse value for pulse output</li> <li>• Relay setpoints</li> </ul> <p><i>Corrected Volume</i> = volume measured under operating conditions converted to volume under reference conditions.</p> <p><b>Selection:</b> The available selections will change depending on the flow equation selected.</p> <div style="display: flex; align-items: center; margin-top: 20px;"> <p>bbl, gal, l, hl, dm<sup>3</sup>, ft<sup>3</sup>, m<sup>3</sup>, scf, Nm<sup>3</sup>, NI, igal, mcf</p> </div> <p>All units listed above apply to corrected volume.</p> <p><b>Display:</b></p> <div style="text-align: right; margin-right: 50px;">             scf COR.VOLUME TOT.UNIT           </div>

**6.6  
SYSTEM  
UNITS**  
(Continued)

<b>SYSTEM UNITS</b>	
<b>VOLUME FLOW UNIT</b>	<p>Select the unit for volumetric flowrate.</p> <p><b>Note:</b> The unit selected here also applies to the following:</p> <ul style="list-style-type: none"> <li>• Zero and full scale value for current</li> <li>• Relay setpoints</li> </ul> <p><b>Selection:</b> The available selections will change depending on the flow equation selected.</p> <p> bbl/time base, gal/time base, l/time base, hl/time base, dm<sup>3</sup>/time base, ft<sup>3</sup>/time base, m<sup>3</sup>/time base, acf/time base, igal/time base</p> <p>All units listed above apply to the actual volume measured under operating conditions.</p> <p><b>Display:</b>                               ft<sup>3</sup>/h   VOLUME FLOW UNIT</p>
<b>VOLUME TOTAL UNIT</b>	<p>Select the unit for uncorrected volume totalizer.</p> <p><b>Note:</b> The unit selected here also applies to the following:</p> <ul style="list-style-type: none"> <li>• Pulse value for pulse output</li> <li>• Relay setpoints</li> </ul> <p><b>Selection:</b> The available selections will change depending on the flow equation selected.</p> <p> bbl, gal, l, hl, dm<sup>3</sup>, ft<sup>3</sup>, m<sup>3</sup>, acf, igal</p> <p>All units listed above apply to the actual volume measured under operating conditions.</p> <p><b>Display:</b>                               ft<sup>3</sup>   VOLUME TOTAL UNIT</p>

**6.6  
SYSTEM  
UNITS**  
(Continued)

<b>SYSTEM UNITS</b>	
<b>DEFINITION bbl</b>	<p>In certain countries the ratio of gallons (gal) per barrels (bbl) can vary according to the fluid used and the specific industry. Select one of the following definitions:</p> <ul style="list-style-type: none"> <li>• US or imperial gallons</li> <li>• Ratio gallons/barrel</li> </ul> <p><b>Selection:</b></p> <p>US: 31.0 gal/bbl for beer (brewing)            US: 31.5 gal/bbl for liquids (normal cases)   US: 42.0 gal/bbl for oil (petrochemicals)            US: 55.0 gal/bbl for filling tanks            imp: 36.0 gal/bbl for beer (brewing)            imp: 42.0 gal/bbl for oil (petrochemicals)</p> <p><b>Display:</b>            US: 31.0 gal/bbl                                      DEFINITION bbl</p>
<b>TEMPERATURE UNIT</b>	<p>Select the unit for the fluid temperature.</p> <p><b>Note:</b>            The unit selected here also applies to the following:</p> <ul style="list-style-type: none"> <li>• Zero and full scale value for current</li> <li>• Relay setpoints</li> <li>• Reference conditions</li> <li>• Specific heat</li> </ul> <p><b>Selection:</b></p> <p> °C (Celsius), °F (Fahrenheit),   °K (Kelvin), °R (Rankine)</p> <p><b>Display:</b>                            °F              TEMPERATURE UNIT</p>

6.6  
**SYSTEM  
 UNITS**  
 (Continued)

## SYSTEM UNITS

### PRESSURE UNIT

Select the unit for process pressure.

**Note:**

The unit selected here also applies to the following:

- Zero and full scale value for current
- Relay setpoints
- Reference conditions

Differential pressure is in mbar for Metric selections

Differential pressure is in "H<sub>2</sub>O f or English selections

**Selection:**



bara, kpa<sub>a</sub>, kc<sub>2a</sub>, psia, barg, psig, kpag, kc<sub>2g</sub>

Definitions:

bara	bar	
kpa <sub>a</sub>	kpa	Absolute pressure
kc <sub>2a</sub>	kg/cm <sup>2</sup>	("a" for absolute)
psia	psi	

barg	bar	Gauge pressure compared to
kpag	kpa	atmospheric pressure
kc <sub>2g</sub>	kg/cm <sup>2</sup>	("g" for gauge)
psig	psi	

Gauge pressure differs from absolute pressure by the atmospheric pressure, which can be set in the submenu group "OTHER INPUT".

**Display:**

psia  
 PRESSURE UNIT

### DENSITY UNIT

Select the unit for the density of the fluid.

**Note:**

The unit selected here also applies to the following:

- Zero and full scale value for current
- Relay setpoints

**Selection:**




kg/m<sup>3</sup>, kg/dm<sup>3</sup>, #/gal, #/ft<sup>3</sup>  
 (# = lbs = 0.4536 kg)

**Display:**


#/ft<sup>3</sup>  
 DENSITY UNIT






**6.6  
SYSTEM  
UNITS**  
(Continued)

<b>SYSTEM UNITS</b>	
<b>SPEC. ENTHALPY UNIT</b>	<p>Select the unit for the combustion value (spec. enthalpy).</p> <p><b>Note:</b> The unit selected here also applies to the following:</p> <ul style="list-style-type: none"> <li>• Specific thermal capacity (kWh/kg → kWh/kg - °C)</li> </ul> <p><b>Selection:</b></p> <p> btu/#, kWh/kg, MJ/kg, kCal/kg (# = lbs = 0.4536 kg)</p> <p><b>Display:</b>                                Btu/#     SPEC. ENTHALPY UNIT</p>
<b>LENGTH UNIT</b>	<p>Select the unit for measurements of length.</p> <p><b>Selection:</b></p> <p style="text-align: center;">in, mm</p> <p><b>Display:</b>                                in     LENGTH UNIT</p>



6.7  
FLUID DATA

FLUID DATA	
<b>FLUID TYPE</b>	<p>Select the fluid. There are three types:</p> <p><b>1. Steam / Water</b> All information required for steam and water (such as saturated steam curve, density and thermal capacity) is permanently stored in the flow computer.</p> <p><b>2. Fluid Displayed</b> Preset information for other fluids (such as air and natural gas) is stored in the flow computer and can directly adopted by the user.</p> <p>If the preset values need to be changed to fit your specific process conditions, then proceed as follows: Select the fluid (air or natural gas) and press the ENTER key (this sets all of the preset values). Re-select the submenu group "FLUID TYPE", now choose "GENERIC" and ENTER. Now the preset values for the previously selected fluid can be altered.</p> <p><b>3. Generic Fluid</b> Select the setting "GENERIC" for the Fluid type submenu. The characteristics of any fluid can now be defined by the user.</p> <p><b>Selection:</b></p> <div style="display: flex; align-items: center;">  <p>GENERIC, WATER, SATURATED STEAM, SUPERHEATED STEAM, DRY AIR, HUMID AIR, HUMID GAS, NATURAL GAS, NATURAL GAS (NX-19), HYDROGEN, ARGON, METHANE, NITROGEN, CARBON DIOXIDE, PROPANE, OXYGEN, ETHANE, HELIUM</p> </div> <p><b>Display:</b>                    GENERIC                                       FLUID TYPE</p>
<b>REF. DENSITY</b>	<p>Select the density for a generic fluid at reference temperature and pressure (see "STP REFERENCE" in "OTHER INPUT" submenu group).</p> <p><b>Input:</b></p> <p style="text-align: center;">Number with floating decimal point: 0.0001...10000.0</p> <p><b>Display:</b>                    .0760 #/ft3                                       REF. DENSITY</p>

6.7  
**FLUID DATA**  
 (Continued)

<b>FLUID DATA</b>	
<b>THERM. EXP. COEF.</b>	<p>Enter the thermal expansion coefficient for a generic liquid. The coefficient is required for the temperature compensation of volume with various flow equations (i.e. Liquid Mass or Corrected Liquid Volume).</p> <p><b>Input:</b></p> <div style="display: flex; align-items: center;">  <p>Number with floating decimal point: 0.000...100000 (e-6)</p> </div> <p>The thermal expansion coefficient can be calculated as follows:</p> $c = \frac{1 - \sqrt{\frac{\rho(T_1)}{\rho(T_0)}}}{T_1 - T_0} + 10^6$ <p>                     c            Thermal expansion coefficient                      T<sub>0</sub>, T<sub>1</sub>    Temperatures at known points (see below)                      ρ (T<sub>0</sub>, T<sub>1</sub>) Density of the liquid at temperature T<sub>0</sub> or T<sub>1</sub> </p> <p>For optimum accuracy, choose the reference temperatures as follows:                      T<sub>0</sub>: midrange temperature                      T<sub>1</sub>: choose a second point at or near the maximum process temperature</p> <p>10<sup>6</sup>        The value entered is internally multiplied by a factor of 10<sup>-6</sup> (display: e-6/temp. unit) since the value to be entered is very small.</p> <p><b>Display:</b>            104.300 (e-6/oF)                                                   THERM. EXP. COEF.</p>
<b>COMBUSTION HEAT</b>	<p>Enter the specific combustion heat for generic fuels.</p> <p><b>Input:</b></p> <div style="display: flex; align-items: center;">  <p>Number with floating decimal point: 0.000...100000</p> </div> <p><b>Display:</b>            1000.000 kBtu/lbs                                                   COMBUSTION HEAT</p>
<b>SPECIFIC HEAT</b>	<p>Enter the specific heat capacity for generic fluids. This value is required for calculating the delta heat of liquids.</p> <p><b>Input:</b></p> <div style="display: flex; align-items: center;">  <p>Number with floating decimal point: 0.000...10.000</p> </div> <p><b>Display:</b>            10.000 kBtu/lbs-°F                                                   SPECIFIC HEAT</p>

6.7  
**FLUID DATA**  
 (Continued)

<b>FLUID DATA</b>	
<b>FLOW. Z-FACTOR</b>	<p>Enter a Z-factor for the gas at operating conditions. The Z-factor indicates how different a "real" gas behaves from an "ideal gas" which exactly obeys the "general gas law" (<math>P \times V/T = \text{constant}; Z=1</math>). The further the real gas is from its condensation point, the closer the Z-factor approaches "1".</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• The Z-factor is used for all gas equations.</li> <li>• Enter the Z-factor for the average process conditions (pressure and temperature).</li> </ul> <p><b>Input:</b></p> <div style="display: flex; align-items: center;">  <p>Number with fixed decimal point: 0.1000...10.0000</p> </div> <p><b>Display:</b></p> <div style="text-align: right; margin-right: 50px;"> <p>1.0000</p> <p>FLOW. Z-FACTOR</p> </div>
<b>REF. Z-FACTOR</b>	<p>Enter a Z-factor for the gas at reference conditions.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• The Z-factor is used for all gas equations.</li> <li>• Define the standard conditions in the submenu "STP REFERENCE" (OTHER INPUT submenu group).</li> </ul> <p><b>Input:</b></p> <p style="text-align: center;">Number with fixed decimal point: 0.1000...10.0000</p> <p><b>Display:</b></p> <div style="text-align: right; margin-right: 50px;"> <p>1.0000</p> <p>REF. Z-FACTOR</p> </div>
<b>ISENTROPIC EXP.</b>	<p>Enter the isentropic exponent of the fluid. The isentropic exponent describes the behavior of the fluid when measuring the flow with a square law flowmeter. The isentropic exponent is a fluid property dependent on operating conditions.</p> <p><b>Note:</b></p> <p>Select one of the "SQR LAW" selections in "FLOWMETER TYPE" of submenu group "FLOW INPUT" to activate this function.</p> <p><b>Input:</b></p> <div style="display: flex; align-items: center;">  <p>Number with fixed decimal point: 0.1000...10.0000</p> </div> <p><b>Display:</b></p> <div style="text-align: right; margin-right: 50px;"> <p>1.4000</p> <p>ISENTROPIC EXP.</p> </div>

6.7  
**FLUID DATA**  
 (Continued)

FLUID DATA	
<p><b>MOLE % NITROGEN</b></p>	<p>Enter the Mole % Nitrogen in the anticipated natural gas mixture. This information is needed by the NX-19 computation</p> <p><b>Note:</b>                      Select "NATURAL GAS (NX-19)" in "FLUID TYPE" to activate this function.</p> <p><b>Input:</b></p> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">                         TOTAL                          1 E                          2                     </div> <p>Number with fixed decimal point: 0.00...15.00</p> </div> <p><b>Display:</b>                      0.00                      MOLE % NITROGEN</p>
<p><b>MOLE % CO<sub>2</sub></b></p>	<p>Enter the Mole % CO<sub>2</sub> in the anticipated natural gas mixture. This information is needed by the NX-19 computation</p> <p><b>Note:</b>                      Select "NATURAL GAS (NX-19)" in "FLUID TYPE" to activate this function.</p> <p><b>Input:</b></p> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">                         TOTAL                          1 E                          2                     </div> <p>Number with fixed decimal point: 0.00...15.00</p> </div> <p><b>Display:</b>                      0.00                      MOLE % CO2</p>
<p><b>VISCOSITY COEF. A</b></p>	<p>Enter the Viscosity coefficient A for the anticipated fluid. This information is needed by the viscosity computation for UVC and for Reynolds Number calculations.</p> <p><b>Note:</b>                      Select "SQUARE LAW 16PT" or "LINEAR UVC" in "FLOWMETER TYPE" to activate this function.</p> <p><b>Input:</b></p> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">                         TOTAL                          1 E                          2                     </div> <p>Number with fixed decimal point: 0.000000...1000000</p> </div> <p><b>Display:</b>                      0.000444                      VISCOSITY COEF. A</p>

**6.7  
FLUID DATA  
(Continued)**

**Computation  
of Viscosity  
Coef. A and B**

**FLUID DATA**

**VISCOSITY COEF. B**

Enter the Viscosity coefficient B for the anticipated fluid. This information is needed by the viscosity computation for UVC and for Reynolds Number calculations.

**Note:**

Select "SQUARE LAW 16PT" or "LINEAR UVC" in "FLOWMETER TYPE" to activate this function.

**Input:**



Number with fixed decimal point: 0.000000...1000000

**Display:**

0.3850  
VISCOSITY COEF. B

**Computation of Viscosity Coef. A and B**

The flow computer solves an equation which computes the viscosity as a function of temperature. Two parameters must be entered for this calculation to be performed. These are the setup parameters Viscosity Coef. A and Viscosity Coef. B. A table listing these values for common fluids is available from the factory.

Alternately, if your intended fluid is not listed, the Viscosity Coef. A and B can be derived from two known temperature/viscosity pairs. Begin by obtaining this information for you intended fluid. Convert these known points to units of Degrees F and centipoise (cP)

The information is now in a suitable form to compute the Viscosity Coef. A and Viscosity Coef. B using the following equation based on the fluid state.

For a liquid, A and B are computed as follows:

$$B = \frac{(T_1 + 459.67) \cdot (T_2 + 459.67) \cdot \ln [cP_1/cP_2]}{(T_2 + 459.67) - (T_1 + 459.67)}$$

$$A = \frac{cP_1}{\exp [ B / ( T_1 + 459.67 ) ]}$$

For a gas, A and B are computed as follows:

$$B = \frac{\ln [ cP_2 / cP_1 ]}{\ln [ (T_2 + 459.67) / (T_1 + 459.67) ]}$$

$$A = \frac{cP_1}{(T_1 + 459.67)^B}$$

**NOTE:**  $cS = \frac{cP}{\text{Density (in kg/l)}}$

**% RELATIVE HUMIDITY**

Enter the % Relative Humidity in the anticipated gas mixture. This information is needed to more accurately compute the density of a Humid gas.

**nput:**




Number with fixed decimal point: 0.000000...100.0000

**Display:**







0.3850  
% RELATIVE HUMIDITY

6.8  
FLOW INPUT

**FLOW INPUT**




<b>FLOWMETER TYPE</b>	Select the flowmeter type. The flow equation (see SYSTEM PARAMETERS) and the flowmeter selected here determine the basic operation of the flow computer.	
	.	
	<b>Selection:</b> 	
LINEAR	Volumetric flowmeter with linear pulse or analog output.	
SQR LAW	Differential pressure transmitter without square root extraction, with analog output.	
SQR LAW-LIN.	Differential pressure transmitter with square root extraction and analog output.	
LINEAR 16 PT*	Volumetric flowmeter with nonlinear pulse or analog output; with 16 point linearization table.	
SQR LAW 16 PT*	Differential pressure transmitter without square root extraction, with analog output and 16 point linearization table.	
SQR LAW-LIN. 16 PT*	Differential pressure transmitter with square root extraction, analog output and 16 point linearization table.	
LINEAR UVC	Volumetric Turbine flowmeter with UVC calibration curve documentation and pulse output.	
LINEAR MANIFOLD	Linear manifold consists of 2 linear flowmeters used in conjunction with an external bypass/diverter valve. It may be used with turbine, PD, Mag, Vortex flowmeters equipped with analog outputs to extend the allowable turndown range.	
GILFLO	Gilflo flowmeters are special purpose differential pressure type flowmeters with an analog output where the differential pressure is linear with flow.	
GILFLO 16PT	Gilflo 16 PT flowmeters are special purpose differential pressure type flowmeters with an analog output where the differential pressure is approximately linear with flow, but can be further enhanced by a 16 point linearization table.	
BYPASS	BYPASS is a selection for use with Bypass(Shuntflow) flowmeters equipped with a pulse output.	
ILVA 16PT	ILVA 16 PT flowmeters are special purpose differential pressure type flowmeters with an analog output where the differential pressure is approximately linear with flow, but can be further enhanced by a 16 point linearization table.	
	* A linearization table must be entered by user. (see "LINEARIZATION" submenu).	
	<b>Display:</b>	LINEAR FLOWMETER TYPE

**6.8  
FLOW INPUT  
(Continued)**





<b>FLOW INPUT</b>	
<b>SQUARE LAW FLOWMETER</b>	<p>Select the type of square law flowmeter to be used with the instrument.</p> <p><b>Note:</b> This selection will only appear if one of the Square Law selections were made in "FLOWMETER TYPE".</p> <p><b>Selection:</b>   ORIFICE, V-CONE, ANNUBAR, PITOT, VENTURI, FLOW NOZZLE, BASIC SQRLAW/TARGET, WEDGE, VERABAR, ACCELABAR</p> <p><b>Display:</b>  <div style="text-align: center;">ORIFICE SQUARE LAW FLOWMETER</div></p>
<b>ILVA METER SIZE</b>	<p>Select the size of the ILVA flowmeter.</p> <p><b>Selection:</b>   DN50, DN80, DN100, DN150, DN200, DN250, DN300</p>
<b>ACCELABAR METER SIZE</b>	<p>Select the size of the Accelabar flowmeter.</p> <p><b>Selection:</b>   1 inch, 2 inch, 3 inch, 4 inch, 6 inch, 8 inch, 10 inch, 12 inch</p>
<b>INPUT SIGNAL</b>	<p>Select the type of measuring signal produced by the flowmeter.</p> <p><b>Selection:</b>   DIGITAL, 10 mV LEVEL      Voltage pulses, 10mV trigger threshold.   DIGITAL, 100 mV LEVEL      Voltage pulses, 100mV trigger threshold.   DIGITAL, 2.5 V LEVEL      Voltage pulses, 2.5V trigger threshold.</p> <p style="margin-left: 100px;">4-20 mA      4-20 mA current signal  0-20 mA      0-20 mA current signal  4-20 mA STACKED      4-20 mA current signal  0-20 mA STACKED      0-20 mA current signal</p> <p style="margin-left: 100px;">0-5 V      0-5 V voltage signal  1-5 V      1-5 V voltage signal  0-10 V      0-10 V voltage signal</p> <p><b>Display:</b>  <div style="text-align: center;">4-20 mA INPUT SIGNAL</div></p>







**6.8  
FLOW INPUT  
(Continued)**

<b>FLOW INPUT</b>	
<b>LOW SCALE</b>	<p>Set the low scale value for the analog input signal. The value entered here must be identical to the value set for the flowmeter.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• For flowmeters with analog/linear output, the flow computer uses the selected system units for volumetric flowrate.</li> <li>• The units for differential pressure flowmeters are dependent on the system units selected for pressure:                             <ul style="list-style-type: none"> <li>- Imperial units [inches H2O]</li> <li>- Metric units: [mbar]</li> </ul> </li> </ul> <p><b>Input:</b></p>  <p>Number with floating decimal point: 0.000...999999</p> <p><b>Display:</b></p> <p style="text-align: center;">.000 ft3/h LOW SCALE VALUE</p>
<b>FULL SCALE</b>	<p>Set the full scale value for the analog input signal. The value entered here must be identical to the value set for the flowmeter.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• For flowmeters with analog/linear output, Target, generic square law and Gilflo flowmeters, the flow computer uses the selected system units for volumetric flowrate.</li> <li>• The units for differential pressure flowmeters are dependent on the system units selected for pressure:                             <ul style="list-style-type: none"> <li>- Imperial units [inches H2O]</li> <li>- Metric units: [mbar]</li> </ul> </li> </ul> <p><b>Input:</b></p>  <p>Number with floating decimal point: 0.000...999999</p> <p><b>Display:</b></p> <p style="text-align: center;">10000.00 ft3/h FULL SCALE VALUE</p>
<b>LOW SCALE-HI RANGE</b>	<p>Set the low scale value for the high range transmitter analog input signal. The value entered here must be identical to the value set for the flowmeter.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• The units for differential pressure flowmeters are dependent on the system units selected for pressure:                             <ul style="list-style-type: none"> <li>- Imperial units [inches H2O]</li> <li>- Metric units: [mbar]</li> </ul> </li> </ul> <p><b>Input:</b></p>  <p>Number with floating decimal point: 0.000...999999</p> <p><b>Display:</b></p> <p style="text-align: center;">.000 ft3/h LOW SCALE-HIGH RANGE</p>

**6.8  
FLOW INPUT**  
(Continued)

<b>FLOW INPUT</b>	
<b>FULL SCALE-HI RANGE</b>	<p>Set the full scale value for the high range transmitter analog input signal. The value entered here must be identical to the value set for the flowmeter.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• The units for differential pressure flowmeters are dependent on the system units selected for pressure:               <ul style="list-style-type: none"> <li>- Imperial units [inches H2O]</li> <li>- Metric units: [mbar]</li> </ul> </li> </ul> <p><b>Input:</b></p>  Number with floating decimal point: 0.000...999999 <p><b>Display:</b></p> <p style="text-align: center;">10000.00 ft<sup>3</sup>/h FULL SCALE VALUE</p>
<b>SWITCH UP DP</b>	<p>Enter the value of delta P at which the unit will begin using the hi range delta P pressure transmitter signal.</p> <p><b>Input:</b></p>  Number with floating decimal point: 0.000...999999 <p><b>Display:</b></p> <p style="text-align: center;">0.000 in H2O SWITCH UP DP</p>
<b>SWITCH DOWN DP</b>	<p>Enter the value of delta P at which the unit will begin using the lo range delta P pressure transmitter signal.</p> <p><b>Input:</b></p>  Number with floating decimal point: 0.000...999999 <p><b>Display:</b></p> <p style="text-align: center;">0.000 in H2O SWITCH UP DP</p>
<b>LOW FLOW CUTOFF</b>	<p>Enter the low flow cutoff. This is used as a switchpoint for creep suppression. This can be used to prevent low flows from being registered.</p> <p><b>Input:</b></p>  Number with floating decimal point: 0.000...999999 <p><b>Display:</b></p> <p style="text-align: center;">.000 ft<sup>3</sup>/h LOW FLOW CUTOFF</p>

**6.8  
FLOW INPUT**  
(Continued)
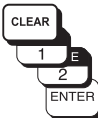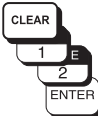
<b>FLOW INPUT</b>	
<b>K-FACTOR</b>	<p>Enter the K-Factor of the flowmeter.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The K-Factor is expressed in pulses per unit volume (as defined by "total units")</li> </ul> <p><b>Input:</b></p>  <p>Number with floating decimal point: 0.001...999999</p> <p><b>Display:</b></p> <p style="text-align: right;">.000 ft<sup>3</sup>/h LOW FLOW CUTOFF</p>
<b>INLET PIPE BORE</b>	<p>Enter the inlet pipe diameter or bore for the piping section upstream of the flow measurement device.</p> <p><b>Input:</b></p>  <p>Number with floating decimal point: 0.001...1000.00</p> <p><b>Display:</b></p> <p style="text-align: right;">4.090 in INLET PIPE BORE</p>
<b>ENTER BETA</b>	<p>Enter the geometric ratio for the square law device being used. This value is given by the manufacturer of the orifice plate, or other square law device.</p> <p><b>Note:</b></p> <p>"Beta" is only required for measuring gas or steam with some square law flowmeters.</p> <p><b>Input:</b></p>  <p>Number with fixed decimal point: 0.0000...1.0000</p> <p><b>Display:</b></p> <p style="text-align: right;">1.0000 ENTER BETA</p>
<b>CAL. DENSITY</b>	<p>Enter the calibration density. This is the fluid density upon which the flowmeter's calibration is based.</p> <p><b>Input:</b></p>  <p>Number with floating decimal point in requested units: 0.000...10.000</p> <p><b>Display:</b></p> <p style="text-align: right;">8.3372 (#/gal) CAL. DENSITY</p>

**6.8  
FLOW INPUT  
(Continued)**

**FLOW INPUT**

**METER EXP. COEF.**

The flowmeter pipe expands depending on the temperature of the fluid. This affects the calibration of the flowmeter. This submenu allows the user to enter an appropriate correction factor. This is given by the manufacturer of the flowmeter. This factor converts the changes in the measuring signal per degree variation from calibration temperature. The calibration temperature is entered into the flow computer to 70 F / 21 °C.

Some manufacturers use a graph or a formula to show the influence of temperature on the calibration of the flowmeter. In this case use the following equation to calculate the meter expansion coefficient:

$$K_{me} = \frac{1 - \frac{Q(T)}{Q(T_{CAL})}}{T - T_{CAL}} \cdot 1,000,000$$

- $K_{ME}$  Meter expansion coefficient
- $Q(T)$  Volumetric flow at temperature T resp.  $T_{CAL}$
- T Average process temperature
- $T_{FLOWING}$  Flowing temperature
- $T_{CAL}$  Calibration temperature

**Note:**

- This correction should be set in either the flowmeter or in the flow computer.
- Entering the value "0.000" disables this function
- Value can be calculated from Fa factor (see below)

**Computing Meter Expansion Coef from Fa term, cal temp, flowing temp**

$$K_{me} = \frac{\left[ 1 - \frac{1}{F_a} \right] \cdot 1,000,000}{T_{flowing} - T_{calibrate}}$$

**Input:**



Number with floating decimal point:  
0.000...999.9 (e-6/°X)

**Display:**

27.111 (E-6/°F)  
METER EXP. COEF.

**6.8  
FLOW INPUT  
(Continued)**

**FLOW INPUT**

**DP FACTOR**

The DP-Factor describes the relationship between the flowrate and the measured differential pressure. The flowrate is computed according to one of the three following equations, depending on the selected flow equation:

Steam (or gas) mass flow:

$$M = \frac{K_{DP} \cdot \epsilon_1 \cdot \sqrt{2 \cdot \Delta p \cdot \rho}}{1 - K_{ME} \cdot (T - T_{CAL})}$$

Liquid volume flow:

$$Q = \frac{K_{DP} \cdot \sqrt{(2 \cdot \Delta p) / \rho}}{(1 - K_{ME} \cdot (T - T_{CAL}))}$$

Gas corrected volume flow:

$$Q_{REF} = \frac{K_{DP} \cdot \epsilon_1 \cdot \sqrt{2 \cdot \Delta p \cdot \rho}}{\rho_{REF} \cdot (1 - K_{ME} \cdot (T - T_{CAL}))}$$

- M Mass flow
- Q Volumetric flow
- Q<sub>REF</sub> Corrected volumetric flow
- K<sub>DP</sub> DP-Factor
- ε<sub>1</sub> Gas expansion factor (Y<sub>1</sub>)
- T Operating temperature
- T<sub>CAL</sub> Calibration temperature
- Δp Differential pressure
- ρ Density at flowing conditions
- K<sub>ME</sub> Meter expansion coefficient x 10<sup>-6</sup>
- ρ<sub>REF</sub> Reference density

**6.8  
FLOW INPUT  
(Continued)**

**FLOW INPUT**

**DP FACTOR  
(Continued)**

The DP-Factor ( $K_{DP}$ ) can be entered manually or the flow computer can compute it for you. The information necessary for this calculation can be found on the sizing sheet from a flowmeter sizing program.

**Note:**

The following data must be entered before the flow computer can compute the DP-Factor.

- |                                    |                        |
|------------------------------------|------------------------|
| 1. Flow equation                   | see "SYSTEM PARAMETER" |
| 2. Fluid Data                      | see "FLUID DATA"       |
| 3. Beta                            | see "FLOW INPUT"       |
| 4. Meter expansion coef.           | see "FLOW INPUT"       |
| 5. STP Ref. temperature*, pressure | see "OTHER INPUT"      |
| 7. Inlet Pipe Bore                 | see "FLOW INPUT"       |
| 8. Calibration Temp.               | see "OTHER INPUT"      |

\* only for gas flow equations.

**Entries:**



CHANGE FACTOR? NO  
CHANGE FACTOR? YES

If "YES" the flow computer will prompt you further:



COMPUTE FACTOR? NO  
COMPUTE FACTOR? YES

If "NO": Enter DP FACTOR  
If "YES": You will be prompted for the following:



ENTER DELTA P  
ENTER FLOWRATE  
ENTER DENSITY  
ENTER TEMPERATURE  
ENTER INLET PRESSURE  
ENTER ISENTROPIC EXP

**NOTE:** Enter information in the units per measure requested.

**6.8**  
**FLOW INPUT**  
(Continued)

**FLOW INPUT**

**DP FACTOR**  
(Continued)

The flow computer will then compute the gas expansion factor ( $\epsilon_1$ ), ( $Y_1$ ) using one of the following equation:

Orifice Case:

$$Y_1 = \epsilon_1 = 1 - \left[ (0.41 + 0.35 \beta^4) \cdot \frac{\Delta p}{\kappa \cdot p_1 \cdot 27.7} \right]$$

V-Cone, Venturi, Flow Nozzle, Wedge Case:

$$R = 1 - \frac{\Delta p}{27.7 \cdot p_1}$$

$$Y_1 = \epsilon_1 = \sqrt{\frac{(1 - \beta^4) \cdot \frac{\kappa}{\kappa - 1} \cdot R^{2/\kappa} \cdot (1 - R^{(\kappa-1)/\kappa})}{[(1 - (\beta^4 \cdot R^{2/\kappa})) \cdot (1 - R)]}}$$

Annubar, Pitot, Target Case;

$$Y_1 = \epsilon_1 = 1.0$$

- $\epsilon_1$  Gas expansion factor
- $\beta$  BETA (geometric ratio)
- $\Delta p$  Differential pressure
- $\kappa$  Isentropic exponent
- $p_1$  Inlet pressure (absolute)

**NOTE:** 27.7 is a units conversion constant from the absolute inlet pressure units to the differential pressure units. (27.7 is for psia to "H2O, use other units conversions as required.).

**6.8  
FLOW INPUT  
(Continued)**

**FLOW INPUT**

**DP FACTOR  
(Continued)**

**The Verabar gas expansion factor equation:**

$$Y_v = 1 + \left( 18093 - .4191(1 - \beta)^2 \right) \cdot \left( \frac{h_w}{27.73 \cdot P_{fa} \cdot \Gamma} \right)$$

Where:

$$\beta = \text{The sensor blockage} = \frac{4 \cdot P_w}{\pi \cdot D}$$

$$\pi = 3.14159$$

$D$  = Internal pipe diameter in inches.

$P_w$  = The sensor's probe width in inches.

$P_w = 0.336$ " for a -05 sensor.

$P_w = 0.614$ " for a -10 sensor.

$P_w = 1.043$ " for a -15 sensor.

$h_w$  = Verabar differential pressure in inches of H<sub>2</sub>O.

$P_{fa}$  = Absolute static pressure (high side of the Verabar) in psia.

$\Gamma = k$  = Isentropic exponent for a real gas or steam.

**The Accelabar gas expansion factor equation:**

See equations on page 104



**6.8  
FLOW INPUT  
(Continued)**

**FLOW INPUT**

**DP FACTOR  
(Continued)**

The DP-Factor ( $K_{DP}$ ) is then computed using one of the following equations:

**Steam:**

$$K_{DP} = \frac{M \cdot (1 - K_{ME} \cdot (T - T_{CAL}))}{\epsilon_1 \cdot \sqrt{2 \cdot \Delta p} \cdot \rho}$$

**Liquid:**

$$K_{DP} = \frac{Q \cdot (1 - K_{ME} \cdot (T - T_{CAL}))}{\sqrt{\frac{2 \cdot \Delta p}{\rho}}}$$

**Gas:**

$$K_{DP} = \frac{Q_{REF} \cdot \rho_{REF} \cdot (1 - K_{ME} \cdot (T - T_{CAL}))}{\epsilon_1 \cdot \sqrt{2 \cdot \Delta p} \cdot \rho}$$

- $K_{DP}$  DP-Factor
- $M$  Mass flow
- $Q$  Volumetric flow
- $Q_{REF}$  Corrected volumetric flow
- $\epsilon_1$  Gas expansion factor
- $T$  Operating temperature
- $T_{CAL}$  Calibration temperature
- $\Delta p$  Differential pressure
- $\rho$  Density at flowing conditions
- $\rho_{REF}$  Reference density

**Note:**

The computation accuracy can be enhanced by entering up to 16 values for Reynold's Number DP-Factor in a linearization table (see "LINEARIZATION"). Each DP-Factor can be calculated using the above procedure. For every calculation, a sizing sheet is required. The results have to be entered in the linearization table afterwards.

**LOW PASS  
FILTER**

Enter the maximum possible frequency of a flowmeter with a digital output. Using the value entered here, the flow computer selects a suitable limiting frequency for low pass filter to help suppress interference from higher frequency signals.

**Input:**



Max. 5 digit number: 10...40000 (Hz):

**Display:**

40000 Hz  
LOW PASS FILTER

**6.8  
FLOW INPUT  
(Continued)**

**FLOW INPUT**

**LINEARIZATION**

With many flowmeters, the relationship between the flowrate and the output signal may deviate from an ideal curve (linear or squared). The flow computer is able to compensate for this documented deviation using a linearization table. The appearance of the linearization table will vary depending on particular flowmeter selected.

**Linear flowmeters with pulse output**

The linearization table enables up to 16 different frequency & K-factor pairs. The frequency and corresponding K-factor are prompted for each pair of values. Pairs are entered in ascending order by frequency.

**Linear Flowmeters with pulse outputs and a UVC Curve:**

The linearization table enables up to 16 different Hz/cstks and K-Factor points. The Hz/cstks and corresponding K-Factors are prompted for each pair of values. Pairs are entered in ascending order by Hz/cstks.

**Linear flowmeters with analog output (excluding Gilflo, ILVA)**



The linearization table enables up to 16 different flowrate & correction factor pairs. The flowrate and corresponding correction factor are prompted for each pair of values. The correction factor ( $C_f$ ) is determined as follows.

$$C_f = \frac{\text{actual flowrate}}{\text{displayed flowrate}}$$

**Linear/squared DP transmitters with analog output**

The linearization table enables up to 16 different Reynold's Number an DP factor pairs. The Reynold's Number and corresponding DP factor are prompted for each pair of values.

**Selection:**

	CHANGE TABLE?	NO
	CHANGE TABLE?	YES

If "YES" the linearization table sequence of prompts will begin.

**Example (for linear flowmeters with analog output)**






```
Enter flow rate:
FLOW ft3/h  3.60
POINT 0
```

```
Entry of corresponding correction factor:
COR.FACTOR  1.0000
POINT 0
```

**Note:**

Enter "0" for the value of a pair (other than point 0) to exit the linearization table routine and use the values stored up to that point.

**6.8  
FLOW INPUT  
(Continued)**

<b>FLOW INPUT</b>	
<b>FLOWMETER LOCATION</b>	<p>Enter the Flowmeter Location</p> <p><b>Selection:</b></p> <p> Hot, Cold:</p> <p><b>Display:</b> COLD FLOWMETER LOCATION</p>
<b>BYPASS CAL. FACTOR</b>	<p>Enter the Bypass Calibration Factor.</p> <p><b>Input:</b></p> <p> Max. 6 digit number: 0.000001...999999</p> <p><b>Display:</b> 1.000000 BYPASS CAL. FACTOR</p>
<b>BYPASS EAm FACTOR</b>	<p>Enter the Bypass EAm Factor.</p> <p><b>Input:</b></p> <p> Max. 6 digit number: 0.000001...999999</p> <p><b>Display:</b> 1.000000 BYPASS EAM FACTOR</p>
<b>BYPASS DC FACTOR</b>	<p>Enter the Bypass DC Factor.</p> <p><b>Input:</b></p> <p> Max. 6 digit number: 0.1...10.0</p> <p><b>Display:</b> 1.000000 BYPASS DC FACTOR</p>
<b>BYPASS Ym FACTOR</b>	<p>Enter the Bypass Ym Factor.</p> <p><b>Input:</b></p> <p> Max. 6 digit number: 0.001...1.0</p> <p><b>Display:</b> 1.000000 BYPASS YM FACTOR</p>
<b>VIEW INPUT SIGNAL</b>	<p>This feature is used to see the present value of the flow input signal. The type of electrical signal is determined by the flowmeter input signal type selection.</p> <p><b>Display:</b> 150 Hz VIEW INPUT SIGNAL</p>
<b>VIEW HIGH RANGE SIGNAL</b>	<p>This feature is used to see the present value of the high range flow input signal. The type of electrical signal is determined by the flowmeter input signal type selection.</p> <p><b>Display:</b> 4 mA VIEW HIGH RANGE SIGNAL</p>

**6.9  
OTHER  
INPUT**

**OTHER INPUT**

**SELECT INPUT**

In addition to the flow input, the flow computer provides two other inputs for temperature, density and/or pressure signals. In this submenu, select the particular input which is to be configured in the following submenus. Input 1 may also be used in conjunction with a steam trap monitor.

**Selection:**

TOTAL

1
E

2

1 (input 1: Temperature or Steam Trap Monitor)  
2 (input 2: Pressure, Temperature 2, Density)

**Display:** 1

SELECT INPUT

**INPUT SIGNAL**

Determine the type of measuring signal produced by the temperature, pressure or density sensor.

**Note:**  
When saturated steam is measured with only a pressure sensor, "INPUT 1 NOT USED" must be selected. If only a temperature sensor is used, "INPUT 2 NOT USED" must be selected.

**Selection:**

Input 1 (Temperature):

▲
▼

INPUT 1 NOT USED, RTD TEMPERATURE, 4-20 TEMPERATURE, 0-20 TEMPERATURE, MANUAL TEMPERATURE\*, 4-20 mA TRAP STATUS

Input 2 (Process pressure, Temperature 2, Density):





▲
▼

INPUT 2 NOT USED, 4-20 PRESSURE (G), 0-20 PRESSURE (G), MANUAL PRESSURE\*, 4-20 PRESSURE (ABS.), 0-20 PRESSURE (ABS.), RTD TEMPERATURE 2, 4-20 TEMPERATURE 2, 0-20 TEMPERATURE 2, MANUAL TEMPERAT. 2\*, 4-20 DENSITY, 0-20 DENSITY, MANUAL DENSITY\*



\* Select this setting if a user defined fixed value for the corresponding measuring value is required.

**Display:** 4-20 TEMPERATURE  
INPUT SIGNAL

**6.9  
OTHER  
INPUT**  
(Continued)

<b>OTHER INPUT</b>	
<b>LOW SCALE VALUE</b>	<p>Set the low scale value for the analog current input signal (value for 0 or 4 mA input current). The value entered here must be identical to the value set in the pressure, temperature or density transmitter.</p> <p><b>Input:</b></p>  <p>Number with fixed decimal point: -9999.99...+9999.99</p> <p><b>Display:</b></p> <p style="text-align: center;">32.00 of LOW SCALE VALUE</p>
<b>FULL SCALE VALUE</b>	<p>Set the full scale value for the analog current input signal (value for 20 mA input current). The value entered here must be identical to the value set in the pressure, temperature or density transmitter.</p> <p><b>Input:</b></p>  <p>Number with fixed decimal point: -9999.99...+9999.99</p> <p><b>Display:</b></p> <p style="text-align: center;">752.00 of FULL SCALE VALUE</p>
<b>DEFAULT VALUE</b>	<p>A fixed value can be defined for the assigned variable (pressure, temperature, density). The flow computer will use this value in the following cases:</p> <ul style="list-style-type: none"> <li>• In case of error (i.e. defective sensors). The flow computer will continue to operate using the value entered here.</li> <li>• if "MANUAL TEMPERATURE", "MANUAL PRESSURE" or "MANUAL DENSITY" was selected for "INPUT SIGNAL".</li> </ul> <p><b>Input:</b></p>  <p>Number with fixed decimal point: -9999.99...+9999.99</p> <p><b>Display:</b></p> <p style="text-align: center;">70.00 of DEFAULT VALUE</p>
<b>STP REFERENCE</b>	<p>Define the STP reference conditions (standard temperature and pressure) for the variable assigned to the input. Presently, standard conditions are defined differently depending on the country and application.</p> <p><b>Input:</b></p>  <p>Number with fixed decimal point: -9999.99...+9999.99</p> <p><b>Display:</b></p> <p style="text-align: center;">60.00 of STP REFERENCE</p>

**6.9  
OTHER  
INPUT**  
(Continued)

<b>OTHER INPUT</b>	
<b>BAROMETRIC PRESS.</b>	<p>Enter the actual atmospheric pressure. When using gauge pressure transmitters for determining gas pressure, the reduced atmospheric pressure above sea level is then taken into account.</p> <p><b>Input:</b></p> <p> Number with floating decimal point: 0.0000...10000.0</p> <p><b>Display:</b>                    1.013 bara                                       BAROMETRIC PRESS.</p>
<b>CALIBRATION TEMP.</b>	<p>Enter the temperature at which the flowmeter was calibrated. This information is used in the correction of temperature induced effects on the flowmeter body dimensions.</p> <p><b>Input:</b></p> <p> Number with fixed decimal point: -9999.99...+9999.99</p> <p><b>Display:</b>                    68.00 of                                       CALIBRATION TEMP.</p>
<b>VIEW INPUT SIGNAL</b>	<p>This feature is used to see the present value of the compensation input signal. The type of electrical signal is determined by the compensation input signal type selection.</p> <p><b>Display:</b>                    20 mA                                       VIEW INPUT SIGNAL</p>
<b>TRAP ERROR DELAY</b>	<p>Enter the TRAP ERROR DELAY (cold trap error) in HH:MM format. An alarm will only be activated if the trap is detected as continuously being in the abnormal states for a time period greater than this TRAP ERROR DELAY time.</p> <p><b>Display:</b>                    HH:MM                                       TRAP ERROR DELAY</p>
<b>TRAP BLOWING DELAY</b>	<p>Enter the TRAP BLOWING DELAY (trap stuck open) in HH:MM format. An alarm will only be activated if the trap is detected as continuously being in the abnormal states for a time period greater than this TRAP BLOWING DELAY time.</p> <p><b>Display:</b>                    HH:MM                                       TRAP BLOWING DELAY</p>

**6.10  
PULSE  
OUTPUT****PULSE OUTPUT****ASSIGN PULSE  
OUTPUT**

Assign the pulse output to a measured or calculated totalizer value.

**Selection:**

HEAT TOTAL, MASS TOTAL,  
CORRECTED VOL. TOTAL,  
ACTUAL VOLUME TOTAL

**Display:**

ACTUAL VOLUME TOTAL  
ASSIGN PULSE OUTPUT

6.10  
PULSE  
OUTPUT  
(Continued)


**PULSE OUTPUT**

**PULSE TYPE**


The pulse output can be configured as required for an external device (i.e. remote totalizer, etc.).

- ACTIVE:** Internal power supply used (+24V).
- PASSIVE:** External power supply required.
- POSITIVE:** Rest value at 0V (active high).
- NEGATIVE:** Rest value at 24V (active low) or external power supply.


**Active:**

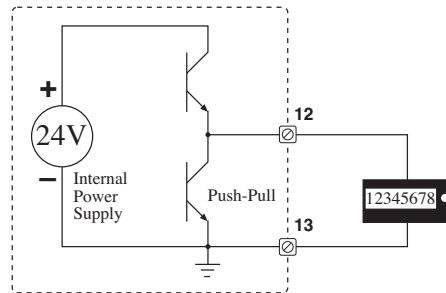


**Passive:**

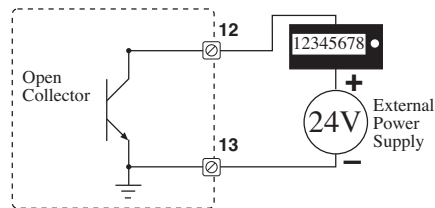

**Positive Pulse:**

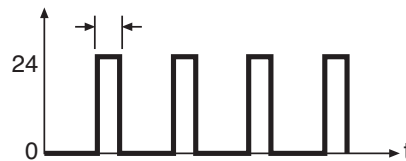

**Negative Pulse:**

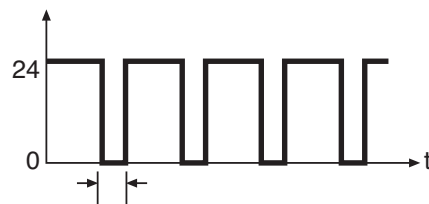

**Selection:**






PASSIVE-NEGATIVE, PASSIVE-POSITIVE,  
ACTIVE-NEGATIVE, ACTIVE-POSITIVE

**Display:**






PASSIVE/POSITIVE  
PULSE TYPE



**6.10  
PULSE  
OUTPUT**  
(Continued)



<b>PULSE OUTPUT</b>	
<b>PULSE VALUE</b>	<p>Define the flow quantity per output pulse. This is expressed in units per pulse (i.e. ft<sup>3</sup> / pulse).</p> <p><b>Note:</b> Ensure that the max. flowrate (full scale value) and the pulse value entered here agree with one another. The max. possible output frequency is 50Hz. The appropriate pulse value can be determined as follows:</p> $\text{Pulse value} > \frac{\text{estimated max. flowrate (full scale)}/\text{sec}}{\text{required max. output frequency}}$ <p><b>Input:</b>  Number with floating decimal point: 0.001...10000.0</p> <p><b>Display:</b> 1.000 ft<sup>3</sup>/P PULSE VALUE</p>
<b>PULSE WIDTH</b>	<p>Set the pulse width required for external devices. The pulse width limits the max. possible output frequency of the pulse output. For a certain output frequency, the max permissible pulse width can be calculated as follows:</p> $\text{Pulse width} < \frac{1}{2 \cdot \text{max. output frequency (Hz)}}$ <p><b>Input:</b>  Number with floating decimal point: 0.01...9.999 s (seconds)</p> <p><b>Display:</b> .01 s PULSE WIDTH</p>
<b>SIMULATION FREQ.</b>	<p>Frequency signals can be simulated in order to check any instrument that is connected to the pulse output. The simulated signals are always symmetrical (50/50 duty cycle).</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• The simulation mode selected affects the frequency output. The flow computer is fully operational during simulation.</li> <li>• Simulation mode is ended immediately after exiting this submenu.</li> </ul> <p><b>Selection:</b>  OFF, 0.0 Hz, 0.1 Hz, 1.0 Hz, 10 Hz, 50 Hz</p> <p><b>Display:</b> OFF SIMULATION FREQ&gt;</p>

6.11  
CURRENT  
OUTPUT



<b>CURRENT OUTPUT</b>	
<b>SELECT OUTPUT</b>	<p>Select the current output to be configured. The flow computer offers two current outputs.</p> <p><b>Selection:</b></p> <p> 1 (Current output 1) 2 (Current output 2)</p> <p><b>Display:</b> 1 SELECT OUTPUT</p>
<b>ASSIGN CURRENT OUT</b>	<p>Assign a variable to the current output.</p> <p><b>Selection:</b></p> <p> HEAT FLOW, MASS FLOW, COR. VOLUME FLOW, VOLUME FLOW, TEMPERATURE, TEMPERATURE 2, DELTA TEMPERATURE, PRESSURE, DENSITY, PEAK DEMAND, DEMAND LAST HOUR</p> <p><b>Display:</b> VOLUME FLOW ASSIGN CURRENT OUT.</p>
<b>CURRENT RANGE</b>	<p>Define the 0 or 4 mA low scale current value. The current for the scaled full scale value is always 20 mA.</p> <p><b>Selection:</b></p> <p> 0-20 mA, 4-20 mA, NOT USED</p> <p><b>Display:</b> 4-20 mA CURRENT RANGE</p>
<b>LOW SCALE</b>	<p>Set the low scale value to the 0 or 4 mA current signal for the variable assigned to the current output.</p> <p><b>Input:</b></p> <p> Number with floating decimal point: -999999...+999999</p> <p><b>Display:</b> .000 ft<sup>3</sup>/h LOW SCALE VALUE</p>
<b>FULL SCALE</b>	<p>Set the full scale value to the 20 mA current signal for the variable assigned to the current output.</p> <p><b>Input:</b></p> <p> Number with floating decimal point: -999999...+999999</p> <p><b>Display:</b> 1000.00 ft<sup>3</sup>/h FULL SCALE VALUE</p>





6.12  
RELAYS

<b>RELAYS</b>	
<b>SELECT RELAY</b>	<p>Set relay output to be configured. Two or three relay outputs are available.</p> <p><b>Selection:</b></p> <div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>1 (Relay 1)</p> <p>2 (Relay 2)</p> <p>3 (Relay 3, optional)</p> </div> </div> <p><b>Display:</b> 1 SELECT RELAY</p>
<b>RELAY FUNCTION</b>	<p>Both relays (1 and 2, and optional 3rd relay) can be assigned to various functions as required:</p> <p><b>Alarm functions</b> Relays activate upon exceeding limit setpoints. Freely assignable to measured or calculated variables or totalizers.</p> <p><b>Malfunction</b> Indication of instrument failure, power loss, etc.</p> <p><b>Pulse output</b> The relays can be defined as additional pulse outputs for totalizer values such as heat, mass, volume or corrected volume.</p> <p><b>Wet steam alarm</b> The flow computer can monitor pressure and temperature in superheated steam applications continuously and compare them to the saturated steam curve. When the degree of superheat (distance to the saturated steam curve) drops below 5 °C, the relay switches and the message "WET STEAM ALARM" is displayed.</p> <p><b>NOTE:</b> <b>Relay response time is affected by the value entered for display damping. The larger the display damping value, the slower the relay response time will be. This is intended to prevent false triggering of the relays. Enter a display damping factor of zero (0) for fastest relay response time.</b></p> <p><b>Selection:</b> Different selections are available depending on the flow equation and type of transmitter selected.</p> <div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>HEAT TOTAL, MASS TOTAL, CORRECTED VOL. TOTAL, ACTUAL VOLUME TOTAL, HEAT FLOW, MASS FLOW, COR. VOL. FLOW, VOLUME FLOW, TEMPERATURE, TEMPERATURE 2, DELTA TEMPERATURE, PRESSURE, DENSITY, WET STEAM ALARM, MALFUNCTION, PEAK DEMAND, DEMAND LAST HOUR</p> </div> </div> <p><b>Display:</b> VOLUME FLOW RELAY FUNCTION</p>

**6.12  
RELAYS  
(Continued)**






<b>RELAYS</b>	
<b>RELAY MODE</b>	<p>Set when and how the relays are switched "ON" and "OFF". This defines both the alarm conditions and the time response of the alarm status.</p> <p><b>Selection:</b></p> <div style="display: flex; align-items: flex-start;"> <div style="margin-right: 10px;">  </div> <div> <p>HI ALARM, FOLLOW LO ALARM, FOLLOW HI ALARM LATCH LO ALARM LATCH RELAY PULSE OUTPUT</p> </div> </div> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• For relay functions "MALFUNCTION" and "WET STEAM ALARM". There is no difference between the modes "HI....." and "LO.....": (i.e. HI ALARM FOLLOW = LO ALARM FOLLOW, HI ALARM LATCH = LOW ALARM LATCH)</li> <li>• Relay mode "RELAY PULSE OUTPUT" defines the relay as an additional pulse output.</li> </ul> <p><b>Display:</b>            HI ALARM, FOLLOW                               RELAY MODE</p>
<b>LIMIT SETPOINT</b>	<p>After configuring a relay for "Alarm indication" (limit value), the required setpoint can be set in this submenu. If the variable reaches the set value, the relay switches and the corresponding message is displayed. Continuous switching near the setpoint can be prevented with the "HYSTERESIS" setting.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• Be sure to select the units (SYSTEM UNITS) before entering the setpoint in this submenu.</li> <li>• Normally open or normally closed contacts are determined when wiring.</li> </ul> <p><b>Input:</b></p> <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;">  </div> <div> <p>Number with floating decimal point: -999999...+999999</p> </div> </div> <p><b>Display:</b>                    99999.0 ft3/h                               LIMIT SETPOINT    1</p>

**6.12  
RELAYS  
(Continued)**

<b>RELAYS</b>	
<b>PULSE VALUE</b>	<p>Define the flow quantity per output pulse if the relay is configured for "RELAY PULSE OUTPUT".. This is expressed in units per pulse (i.e. ft<sup>3</sup> / pulse).</p> <p><b>Note:</b> Ensure that the max. flowrate (full scale value) and the pulse value entered here agree with one another. The max. possible output frequency is 5Hz. The appropriate pulse value can be determined as follows:</p> $\text{Pulse value} > \frac{\text{estimated max. flowrate (full scale)/sec}}{\text{required max. output frequency}}$ <p><b>Input:</b></p>  Number with floating decimal point: 0.001...1000.0 <p><b>Display:</b></p> <p style="text-align: center;">1.000 ft<sup>3</sup>/P PULSE VALUE</p>
<b>PULSE WIDTH</b>	<p>Enter the pulse width. Two cases are possible:</p> <p><b>Case A: Relay set for "MALFUNCTION" or limit value</b> The response of the relay during alarm status is determined by selecting the pulse width.</p> <ul style="list-style-type: none"> <li>• Pulse width = 0.0 s (Normal setting) Relay is latched during alarm conditions.</li> <li>• Pulse width = 0.1...9.9 s (special setting) Relay will energize for selected duration, independent of the cause of the alarm. This setting is only used in special cases (i.e. for activating signal horns).</li> </ul> <p><b>Case B: Relay set for "RELAY PULSE OUTPUT"</b> Set the pulse width required for the external device. The value entered here can be made to agree with the actual flow amount and pulse value by using the following:</p> $\text{Pulse width} < \frac{1}{2 \cdot \text{max. output frequency (Hz)}}$ <p><b>Input:</b></p>  Number with floating decimal point: 0.01...9.99 s (pulse output) 0.00...9.99 s (all other configurations) <p><b>Display:</b></p> <p style="text-align: center;">.01 s PULSE WIDTH</p>



**6.13**  
**COMMUNICATION**  
 (Continued)

<b>COMMUNICATION</b>	
<b>RS-232 USAGE</b>	<p>The flow computer can be connected via RS-232 interface to a personal computer or printer.</p> <p><b>Selection:</b></p> <p> COMPUTER, PAGER, PRINTER, MODEM</p> <p><b>Display:</b>           COMPUTER                           RS-232 USAGE</p>
<b>DEVICE ID</b>	<p>Enter the unique unit I.D. tag number for the flow computer if a number of flow computers are connected to the same interface.</p> <p><b>Selection:</b></p> <p> Max. 2 digit number: 0...99</p> <p><b>Display:</b>                           1                           DEVICE ID</p>
<b>BAUD RATE</b>	<p>Enter the baud rate for serial communication between the flow computer and a personal computer, modem, pager or printer.</p> <p><b>Selection:</b></p> <p> 9600, 2400, 1200, 300</p> <p><b>Display:</b>                   9600                           BAUD RATE</p>
<b>PARITY</b>	<p>Select the desired parity. The setting selected here must agree with the parity setting for the computer, modem, pager or printer.</p> <p><b>Selection:</b></p> <p> NONE, ODD, EVEN</p> <p><b>Display:</b>                   NONE                           PARITY</p>
<b>HANDSHAKE</b>	<p>The control of data flow can be defined. The setting required is determined by the handshaking of the printer.</p> <p><b>Selection:</b></p> <p> NONE, HARDWARE</p> <p><b>Display:</b>                   NONE                           HANDSHAKE</p>



**6.13**  
**COMMUNICATION**  
 (Continued)

**COMMUNICATION**

**PRINT LIST**

Select the variables or parameters which are to be logged or printed via the RS-232 interface.

**Selection (Procedure):**



CHANGE? NO  
 CHANGE? YES

If YES selected, the available variables are displayed one after another. Only some of the following options are available depending on the flow equation selected:



Store option  
 advance to next



Print?








- |                      |         |
|----------------------|---------|
| PRINT HEADER?        | NO(YES) |
| INSTRUMENT TAG?      | NO(YES) |
| FLUID TYPE?          | NO(YES) |
| TIME?                | NO(YES) |
| DATE?                | NO(YES) |
| TRANSACTION NO.?     | NO(YES) |
| HEAT FLOW?           | NO(YES) |
| HEAT TOTAL?          | NO(YES) |
| HEAT GRAND TOTAL?    | NO(YES) |
| MASS FLOW?           | NO(YES) |
| MASS TOTAL?          | NO(YES) |
| MASS GRAND TOTAL?    | NO(YES) |
| COR. VOLUME FLOW?    | NO(YES) |
| COR.VOL.GRAND TOTAL? | NO(YES) |
| VOLUME FLOW?         | NO(YES) |
| VOLUME TOTAL?        | NO(YES) |
| VOL. GRAND TOTAL?    | NO(YES) |
| TEMPERATURE?         | NO(YES) |
| TEMPERATURE 2?       | NO(YES) |
| DELTA TEMPERATURE?   | NO(YES) |
| PROCESS PRESSURE?    | NO(YES) |
| DENSITY?             | NO(YES) |
| SPEC. ENTHALPY?      | NO(YES) |
| DIFF. PRESSURE?      | NO(YES) |
| ERRORS?              | NO(YES) |
| ALARMS?              | NO(YES) |
| PEAK DEMAND?         | NO(YES) |
| DEMAND LAST HOUR?    | NO(YES) |
| PEAK TIME STAMP?     | NO(YES) |
| PEAK DATE STAMP?     | NO(YES) |
| TRAP MONITOR?        | NO(YES) |

"YES" + ENTER: Parameter is added to the print list






"NO" + ENTER: parameter is not printed

After the last option the display advances to the next submenu.







**6.13**  
**COMMUNICATION**  
 (Continued)

<b>COMMUNICATION</b>	
<b>PRINT INITIATE</b>	<p>Datalogger and/or printing variables and parameters over the serial RS-232 interface can be initiated at regular intervals (INTERVAL) or daily at a fixed time (TIME OF DAY) or by front key depression.</p> <p><b>Note:</b>                      Printing can always be initiated by pressing the PRINT key.</p> <p><b>Selection:</b></p> <p> NONE, TIME OF DAY, INTERVAL, ENABLE PRINT KEY</p> <p><b>Display:</b>            TIME OF DAY                                                PRINT INITIATE</p>
<b>DATALOG ONLY</b>	<p>Select YES or NO for Datalog Only prompt.</p> <p><b>Selection:</b></p> <p> YES - Data is logged but no information is sent on print event.   NO - Data is logged and immediately transmitted.</p> <p><b>Display:</b>            YES                                                DATALOG ONLY</p>
<b>PRINT INTERVAL</b>	<p>Define a time interval. Variables and parameters will be periodically logged at regular intervals of this value of time. The setting "00:00" deactivates this feature.</p> <p><b>Input:</b></p> <p> Time value in hours &amp; minutes (HH:MM).</p> <p><b>Display:</b>            00:00                                                PRINT INTERVAL</p>
<b>PRINT TIME</b>	<p>Define the time of day that variables and parameters will be logged out daily.</p> <p><b>Input:</b></p> <p> Time of day in hours &amp; minutes (HH:MM).</p> <p><b>Display:</b>            00:00                                                PRINT TIME</p>
<b>DATALOG FORMAT</b>	<p>Define the Datalog Format.</p> <p><b>Selection:</b></p> <p> DATABASE - Data sets sent in comma seperated variable format.   PRINTER - Individual output variables sent with text label and units suitable for printing.</p> <p><b>Display:</b>            PRINTER                                                DATALOG FORMAT</p>








**6.13**  
**COMMUNICATION**  
 (Continued)

<b>COMMUNICATION</b>	
<b>SEND INC. TOT. ONLY</b>	<p>Select YES or NO for Send Inc. Tot. Only</p> <p><b>Selection:</b></p> <p> YES - Unit will send Inc. Tot. Only                      NO - Unit will not send Inc. Tot. Only</p> <p><b>Display:</b>                    YES                                                       SEND INC. TOT. ONLY</p>
<b>INC ONLY SCALER</b>	<p>Enter multiplying factor for Inc Only Scaler</p> <p><b>Selection:</b></p> <p> X1, X10, X100, X1000</p> <p><b>Display:</b>                    X1                                                       INC ONLY SCALER</p>
<b>CLEAR DATALOG</b>	<p>Select YES or NO for Clear Datalog</p> <p><b>Selection:</b></p> <p> YES - Unit wil clear datalog contents                      NO - Unit will not clear datalog contents</p> <p><b>Display:</b>                    YES                                                       CLEAR DATALOG</p>
<b>MODEM CONTROL (Modem)</b>	<p>Select YES or NO for Modem Control.</p> <p><b>Selection:</b></p> <p> YES - Modem initializationand dialing commands are sent during transactions.                      NO - Modem initializationand dialing commands are NOT sent during transactions.</p> <p><b>Display:</b>                    YES                                                       MODEM CONTROL</p>
<b>DEVICE MASTER (Modem or Pager)</b>	<p>Select YES or NO for Device Master</p> <p><b>Selection:</b></p> <p> YES - Sets sole master device responsible for initializing pager or modem.                      NO - Device will not be used to initializepager or modem.</p> <p><b>Display:</b>                    YES                                                       DEVICE MASTER</p>

**6.13**  
**COMMUNICATION**  
 (Continued)

<b>COMMUNICATION</b>	
<b>MODEM AUTO ANSWER (Modem)</b>	<p>Select YES or NO for Modem Auto Answer</p> <p><b>Selection:</b></p> <p> YES - Modem will answer incoming calls.   NO - Modem will not answer incoming calls.</p> <p><b>Display:</b> YES                      MODEM AUTO ANSWER</p>
<b>CALL OUT NO (Modem or Pager)</b>	<p>Define a Call Out Number. Enter the telephone number, pager number or email address to be called.</p> <p><b>Input:</b></p> <p>max. 16 digit phone number</p> <p><b>Display:</b> ### ### ### ### ####                      CALL OUT NO</p>
<b>CALL OUT TIME (Modem or Pager)</b>	<p>Define the Call Out Time. Enter scheduled call out time (24 hr format), if you want the unit to call out to a remote PC.</p> <p><b>Input:</b></p> <p> Time of day in hours &amp; minutes (HH:MM).</p> <p><b>Display:</b> 00:00                      CALL OUT TIME</p>
<b>CALL ON ERROR (Modem or Pager)</b>	<p>Select YES or NO for Call On Error prompt.</p> <p><b>Selection:</b></p> <p> YES - Unit will call out to remote PC if a designated CSI error occurs.   NO - Unit will not call out to remote PC if error occurs.</p> <p><b>Display:</b> YES                      CALL ON ERROR</p>
<b>NUMBER OF REDIALS (Modem or Pager)</b>	<p>Enter the Number Of Redials desired in the event of a busy signal or communication problem.</p> <p><b>Input:</b></p> <p> max. 2 digit number</p> <p><b>Display:</b> 3                      NUMBER OF REDIALS</p>

**6.13**  
**COMMUNICATION**  
 (Continued)

<b>COMMUNICATION</b>	
<b>HANG UP IF INACTIVE (Modem)</b>	<p>Select YES or NO for Hang Up If Inactive</p> <p><b>Selection:</b></p> <p> YES - Unit will hang up if remote PC fails to respond within several minutes after connection is established.</p> <p> NO - Unit will not hang up if remote PC fails to respond after connection is established.</p> <p><b>Display:</b></p> <p style="text-align: center;">YES                      HANG UP IF INACTIVE</p>
<b>PAGER PIN NUMBER (Pager)</b>	<p>Enter Pager Pin Number for local transceiver.</p> <p><b>Input:</b></p> <p> max. 16 digit number</p> <p><b>Display:</b></p> <p style="text-align: center;">### ### ### ### ####                      PAGER PIN NUMBER</p>
<b>DESTINATION TYPE (Pager)</b>	<p>Select the Destination Type</p> <p><b>Selection:</b></p> <p> E-MAIL - Data will be sent via pager and internet.</p> <p> PAGER - Data will be sent to another pager or pager mailbox.</p> <p><b>Display:</b></p> <p style="text-align: center;">E-MAIL                      DESTINATION TYPE</p>
<b>REGISTER PAGER (Pager)</b>	<p>Select YES or NO for Register Pager prompt.</p> <p><b>Note:</b></p> <p style="padding-left: 40px;">A message will indicate if registration is successful.</p> <p><b>Selection:</b></p> <p> YES - Will result in unit and pager attempting to register with local paging network provider (Skytel)</p> <p> NO - Advance to next menu item</p> <p><b>Display:</b></p> <p style="text-align: center;">YES                      REGISTER PAGER</p>

**6.13**  
**COMMUNICATION**  
 (Continued)

**COMMUNICATION**

**ERROR MASK**  
**(Pager or Modem)**

Select YES or NO for Change Error Mask? prompt

**Selection:**



**Display:**

00:00

CALL OUT TIME

If YES selected, define the conditions that you wish to call out on. The possible conditions are displayed one after another.



Store option  
 advance to next



Change?

- |                     |         |
|---------------------|---------|
| POWER FAILURE       | NO(YES) |
| WATCHDOG TIMEOUT    | NO(YES) |
| COMMUNICATION ERROR | NO(YES) |
| CALIBRATION ERROR   | NO(YES) |
| PRINT BUFFER FULL   | NO(YES) |
| TOTALIZER ERROR     | NO(YES) |
| WET STEAM ALARM     | NO(YES) |
| OFF FLUID TABLE     | NO(YES) |
| FLOW IN OVERRANGE   | NO(YES) |
| INPUT1 OVERRANGE    | NO(YES) |
| INPUT2 OVERRANGE    | NO(YES) |
| FLOW LOOP BROKEN    | NO(YES) |
| LOOP1 BROKEN        | NO(YES) |
| LOOP2 BROKEN        | NO(YES) |
| RTD 1 OPEN          | NO(YES) |
| RTD 1 SHORT         | NO(YES) |
| RTD 2 OPEN          | NO(YES) |
| RTD 2 SHORT         | NO(YES) |
| PULSE OUT OVERRUN   | NO(YES) |
| out 1 OUT OF RANGE  | NO(YES) |
| out 2 OUT OF RANGE  | NO(YES) |
| RELAY 1 HIGH ALARM  | NO(YES) |
| RELAY 1 LOW ALARM   | NO(YES) |
| RELAY 2 HIGH ALARM  | NO(YES) |
| RELAY 2 LOW ALARM   | NO(YES) |
| RELAY 3 HIGH ALARM  | NO(YES) |
| RELAY 3 LOW ALARM   | NO(YES) |
| TRAP ERROR          | NO(YES) |
| TRAP BLOWING        | NO(YES) |
| INPUT 3 OVERRANGE   | NO(YES) |
| INPUT 3 BROKEN      | NO(YES) |
| 24VDC OUT ERROR     | NO(YES) |
| PULSE IN ERROR      | NO(YES) |
| INPUT 1 Vin ERROR   | NO(YES) |
| INPUT 1 Iin ERROR   | NO(YES) |
| INPUT 2 Iin ERROR   | NO(YES) |
| INPUT 2 RTD ERROR   | NO(YES) |
| INPUT 3 Iin ERROR   | NO(YES) |
| INPUT 3 RTD ERROR   | NO(YES) |
| PULSE OUT ERROR     | NO(YES) |
| out 1 ERROR         | NO(YES) |
| out 2 ERROR         | NO(YES) |
| RELAY 1 ERROR       | NO(YES) |
| RELAY 2 ERROR       | NO(YES) |
| RS-232 ERROR        | NO(YES) |
| A/D MALFUNCTION     | NO(YES) |
| PROGRAM ERROR       | NO(YES) |
| SETUP DATA LOST     | NO(YES) |
| TIME CLOCK LOST     | NO(YES) |
| DISPLAY MALFUNCTION | NO(YES) |
| RAM MALFUNCTION     | NO(YES) |
| DATALOG LOST        | NO(YES) |

**6.13**  
**COMMUNICATION**  
(Continued)

**COMMUNICATION**

**CLP PROGRESS**  
**(Pager)**

This is a diagnostic cell for the TWP transceiver. The display shows Clip (CLP) Progress. This is a diagnostic cell which tracks progress of two way paging data exchange. If problems are encountered during use, note the stage at which problems occurred prior to seeking technical help.

**Display:** -124xm Ocur 54stg  
CLP PROGRESS

**STG DEFINITIONS**

- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>0) IDLE</li> <li>1) WAITING FOR GET MESSGE STATUS</li> <li>2) WAITING TO REQUEST DIR INFO</li> <li>3) RECIEVING DIR INFO</li> <li>4) MAKE A REQUEST FOR MESSAGE</li> <li>5) START MESSAGE DOWNLOAD</li> <li>6) WAIT TO REPLY TO A MESSAGE</li> <li>7) WAIT TO SEND FINAL ACK</li> <li>8) INTIALIZE XMODEM</li> <li>9) PARSE DATA</li> <li>10) SEND RESPONSE</li> <li>11)WAIT HERE UNTIL ALL BLOCKS ARE SENT AND THEN ACK</li> <li>12)WAIT FOR FINAL ACK</li> <li>13)WAIT FOR TRANSMISSION TO START and get status</li> <li>14) WAIT FOR SKYTEL RESPONSE AND GET STATUS</li> <li>15) WHEN STATUS IS IN CHECK IF GOOD then delete OR REPEAT</li> <li>16)when delete done reset</li> <li>20)INTIALIZE XMODEM</li> <li>21)PARSE PRINT LIST DATA</li> <li>22) SEND XMODEM BLOCK</li> <li>23) WAIT HERE FOR ALL XMODEM TO BE SENT</li> <li>24)WAIT FOR EOT TO BE ACKNOWLEDGE</li> <li>25)WAIT FOR TRANSMISSION TO START and get status</li> <li>26) WAIT FOR SKYTEL TO RESPOND and get status</li> <li>27) IF TRANSMISSION IS GOOD END ELSE REPEAT.</li> <li>30)INTIALIZE XMODEM</li> <li>31)PARSE PRINT MAINTENCE DATA</li> <li>32) SEND XMODEM BLOCK</li> <li>33) WAIT HERE FOR ALL XMODEM TO BE SENT</li> <li>34)WAIT FOR EOT TO BE ACKNOWLEDGE</li> <li>35)WAIT FOR TRANSMISSION TO START and get status</li> <li>36) WAIT FOR SKYTEL TO RESPOND and get status</li> <li>37) IF TRANSMISSION IS GOOD END ELSE REPEAT.</li> <li>40)INTIALIZE XMODEM</li> <li>41)PARSE PRINT SETUP DATA</li> </ul> | <ul style="list-style-type: none"> <li>42) SEND XMODEM BLOCK</li> <li>43) WAIT HERE FOR ALL XMODEM TO BE SENT</li> <li>44)WAIT FOR EOT TO BE ACKNOWLEDGE</li> <li>45)WAIT FOR TRANSMISSION TO START and get status</li> <li>46) WAIT FOR SKYTEL TO RESPOND and get status</li> <li>47) IF TRANSMISSION IS GOOD END ELSE REPEAT.</li> <li>50) MODEM STRING FOR SELF CONTACT</li> <li>51)SEND STRING</li> <li>52) WAIT FOR ACK SEND EOT OR REPEAT</li> <li>53)WAIT FOR FINAL ACK</li> <li>54)WAIT FOR TRANSMISSION TO START AND GET STATUS</li> <li>55)WAIT FOR SKYTEL RESPONSE AND GET STATUS</li> <li>56)WAIT FOR STATUS INFO TO BE RECIEVED THEN CHECK IF GOOD</li> <li>57)WAIT FOR SKYTEL MESSAGE</li> <li>58) WAITING FOR GET MESSGE STATUS</li> <li>59) WAITING TO REQUEST DIR INFO</li> <li>60) RECIEVING DIR INFO</li> <li>61) DELETE MESSAGE</li> <li>62) RESET CLP</li> <li>70)INTIALIZE XMODEM</li> <li>71)PARSE PRINT SETUP DATA</li> <li>72) SEND XMODEM BLOCK</li> <li>73) WAIT HERE FOR ALL XMODEM TO BE SENT</li> <li>74)WAIT FOR EOT TO BE ACKNOWLEDGE</li> <li>75)WAIT FOR TRANSMISSION TO START and get status</li> <li>76) WAIT FOR SKYTEL TO RESPOND and get status</li> <li>77) IF TRANSMISSION IS GOOD END ELSE REPEAT.</li> <li>80)INTIALIZE XMODEM</li> <li>81)PARSE PRINT SETUP DATA</li> <li>82) SEND XMODEM BLOCK</li> <li>83) WAIT HERE FOR ALL XMODEM TO BE SENT</li> <li>84)WAIT FOR EOT TO BE ACKNOWLEDGE</li> <li>85)WAIT FOR TRANSMISSION TO START and get status</li> <li>86) WAIT FOR SKYTEL TO RESPOND and get status</li> <li>87) IF TRANSMISSION IS GOOD END ELSE REPEAT.</li> <li>100)RESETTING OF THE OF CLP STAGE</li> <li>101)UNIT IS LOST TRY TO RESYNC.</li> <li>102) POWER UP DELAY</li> </ul> |
|---|--|














**6.15  
SERVICE &  
ANALYSIS**  
(Continued)

<b>SERVICE &amp; ANALYSIS</b>	
<p><b>ANALOG OUTPUT 1 CALIBRATION</b> (Pins 14 &amp; 16)</p> <p style="text-align: center;"><b>ADJ</b> <b>4 mA</b> (Pins 14 &amp; 16)</p> <p style="text-align: center;"><b>ADJ</b> <b>20 mA</b> (Pins 14 &amp; 16)</p>	<p>Connect your Ammeter (current meter) to (+) Pin 14 and (-) Pin 16.</p> <p>Observe the reading on the ammeter. Using the numeric keys, enter the actual reading (in mA) and press enter.</p> <p><b>Display:</b>           ACTUAL?       4.025 mA   ADJ 4mA PIN 14-16</p> <p>Observe the reading on the ammeter. Using the numeric keys, enter the actual reading (in mA) and press enter.</p> <p><b>Display:</b>           ACTUAL?       20.017 mA   ADJ 20mA PIN 14-16</p>
<p><b>ANALOG OUTPUT 2 CALIBRATION</b> (Pins 15 &amp; 16)</p> <p style="text-align: center;"><b>ADJ</b> <b>4 mA</b> (Pins 15 &amp; 16)</p> <p style="text-align: center;"><b>ADJ</b> <b>20 mA</b> (Pins 15 &amp; 16)</p>	<p>Connect your Ammeter (current meter) to (+) Pin 15 and (-) Pin 16.</p> <p>Observe the reading on the ammeter. Using the numeric keys, enter the actual reading (in mA) and press enter.</p> <p><b>Display:</b>           ACTUAL?       4.041 mA   ADJ 4mA PIN 15-16</p> <p>Observe the reading on the ammeter. Using the numeric keys, enter the actual reading (in mA) and press enter.</p> <p><b>Display:</b>           ACTUAL?       20.006 mA   ADJ 20mA PIN 15-16</p>
<p><b>FREQUENCY OUTPUT SIMULATION</b> (Pins 12 &amp; 13)</p>	<p>Connect your frequency meter to (+) Pin 12 and (-) Pin 13. This feature is used to check the pulse output. Calibration is not performed.</p> <p><b>Selection:</b></p> <p> OFF, 50 Hz, 10 Hz, 1.0 Hz, 0.1 Hz, 0.0 Hz</p> <p><b>Display:</b>                               OFF   SIMULATION FREQ.</p>





## 7. Principle Of Operation

### General Operation

#### 7.1 General:

The ES761ST2 Flow Computer uses several internal calculations to compute the compensated flow based on specific data input. Several computations are performed to arrive at the uncompensated flow, temperature, pressure, density and viscosity. This information is then used to compute the Corrected Volume Flow, Mass Flow or Heat Flow.

### Square Law Flowmeter Considerations

#### 7.2 Square Law Flowmeter Considerations:

Head class flowmeters are supplied by the manufacturers with a 4-20 mA output span which is already in flow units. The ES761ST2 permits the user to enter this flowmeter information directly. However, closely associated with this information is the density that was assumed during flowmeter calibration. This information must also be input if the user is to obtain maximum accuracy.

It is assumed that the user has the printout from a standardized sizing program for the particular device he will be using. Such standardized printouts list all the necessary information which the user will then be prompted for.

Several specialized flow equations are listed that are not intended for the standard unit but to be offered to appropriate OEMs or as special order items. These are designated by a “†”.

#### Note concerning Fluid Information

The user will be prompted for Fluid Information during the setup of the instrument. See Appendix A for the properties of several common fluids.

### Flow Equations

#### 7.3 Flow Equations:

#### 7.3.1 Flow Input Computation

#### Flow Input Computation:

##### Linear

$$\text{Input Flow} = [\% \text{ input span} \cdot (\text{flow FS} - \text{flow low scale})] + \text{flow low scale}$$

##### Square Law without External SQRT Extractor

$$\text{delta P} = [(\% \text{ input span}) \cdot (\text{flow FS} - \text{flow low scale})] + \text{flow low scale}$$

##### Square Law with External SQRT Extractor

$$\text{delta P} = [(\% \text{ input span})^2 \cdot (\text{flow FS} - \text{flow low scale})] + \text{flow low scale}$$

**NOTE:** For stacked differential pressure option, the appropriate input sensor signal is used in calculations at all times to maximize accuracy.



**7.3.2  
Pressure  
Computation**

**Pressure Input:** (normally based on value measured by other input 2)

General Case

$$P_f = [\% \text{ input span} \cdot (\text{Pres full scale} - \text{Pres low scale})] + \text{Pres low scale}$$

Gauge Case

$$P_f = P_f + \text{Barometric}$$

Manual Case or In Event of Fault

$$P_f = \text{Pressure Default Value}$$

**Temperature Computation:** (can be based on value measured by other input 1 and/or other input 2)

**7.3.3  
Temperature  
Computation**

General Case

$$T_f = [\% \text{ input span} \cdot (\text{Temp full scale} - \text{Temp low scale})] + \text{Temp low scale}$$

Saturated Steam:

$$T_2 = [\% \text{ input span} \cdot (\text{Temp full scale} - \text{Temp low scale})] + \text{Temp low scale}$$

RTD Case

$$T_f = f (\text{measured input resistance})$$

Saturated Steam:

$$T_2 = f (\text{measured input resistance})$$

Manual Case or In Event of Fault

$$T_f = \text{Temperature Default Value}$$

Saturated Steam:

$$T_2 = \text{Temperature Default Value}$$

Delta Temp Case

$$\text{Delta Temp} = T_2 - T_1$$

Flowmeter location = cold

$$\text{Delta Temp} = T_1 - T_2$$

Flowmeter location = hot

**7.3.4  
Density/Viscosity  
Computation**

**Density Computation:**

Water Case

$$\text{density\_water} = \text{density} (T_f)$$

Liquid Case

$$\text{density} = \text{reference density} \cdot (1 - \text{Therm.Exp.Coef} \cdot (T_f - T_{ref}))^2$$

Steam Case

$$\text{density} = 1 / \text{specific volume}(T_f, P_f)$$

Sturated Steam:

$$\text{density} = 1 / \text{specific volume}(T_2 \text{ or } P_2)$$

Superheated Steam:

$$\text{density} = 1 / \text{specific volume}(T_1 \text{ or } P_2)$$

Gas Case

$$\text{density} = \text{reference density} \cdot \frac{P_f}{P_{ref}} \cdot \frac{(T_{ref} + 273.15)}{(T_f + 273.15)} \cdot \frac{Z_{ref}}{Z_f}$$

**NOTE:** For Natural Gas:

$$\frac{Z_{ref}}{Z_f} \text{ is determined by NX-19 when this selection is supplied and selected.}$$

**NOTE:** Therm.Exp.Coef is (x 10<sup>-6</sup>)

**7.3.4 Density/Viscosity Computation**  
(continued)

**Viscosity (cP) Computation:**

Liquid Case

$$\text{cP viscosity} = A \cdot \exp \frac{B}{(T_f + 459.67)}$$

**NOTE:**

$$\text{Viscosity cS} = \frac{\text{viscosity (in cP)}}{\left( \frac{\text{flowing density}}{\text{density of water @ 4°C}} \right)}$$

Gas Case

$$\text{cP viscosity} = A \cdot (T_f + 459.67)^B$$

Steam Case

$$\text{cP viscosity} = f(T_f \text{ and/or } P_f)$$

**NOTE:** If derived from T1 except for Saturated Steam case where it is derived from either T2 or P2

**7.3.5 Corrected Volume Flow Computation**

**Corrected Volume Flow Computation:**

Liquid Case

$$\text{std. volume flow} = \text{volume flow} \cdot (1 - \text{Therm.Exp.Coef.} \cdot (T_f - T_{ref}))^2$$

Gas Case

$$\text{std. volume flow} = \text{volume flow} \cdot \frac{P_f}{P_{ref}} \cdot \frac{(T_{ref} + 273.15)}{(T_f + 273.15)} \cdot \frac{Z_{ref}}{Z_f}$$

**NOTE:** If derived from T1

**NOTE:** For Natural Gas:

$$\frac{Z_{ref}}{Z_f} \text{ is determined by NX-19 when this selection is supplied and selected.}$$

**Natural Gas NX-19 Equation:** The NX-19 (1963) natural gas state equations are widely used in custody transfer applications. Over most normal measurement ranges, 500 to 5000 psia (3.5 to 10.4 MPa) and -10 to 100°F (-23 to 38°C), the NX-19 equation will compute the gas compressibility factor to within 0.2% of the values computed by the newer AGA-8 state equation.

The ranges over which the NX-19 equation applies are:

Pressure $P_G$	To 5000 psig (10.34 MPa gauge)
Temperature $T_f$	-40 to 240°F (-40 to 116°C)
Specific Gravity $G$	0.554 to 1.0
CO <sub>2</sub> and N <sub>2</sub>	0 to 15%

Our Flow Computer uses the Specific Gravity method to first obtain the adjusted temperature and pressure before entering the state equation. This method calculates the adjusted pressure and temperature from the mole fractions of carbon dioxide and nitrogen as

$$P_{adj} = \frac{156.47 P_G}{160.8 - 7.22 G_g + 100X_{CO2} - 39.2X_{N2}} \text{ psig}$$

Where  $X_{CO2}$  and  $X_{N2}$  are the mole fractions of carbon dioxide and nitrogen, respectively. The adjusted temperature is defined by

$$T_{adj} = \frac{226.29 (T_E + 460)}{99.15 + 211.9 G_g - 100X_{CO2} - 168.1X_{N2}} \text{ °F}$$

**7.3.5  
Corrected  
Volume Flow  
Computation  
(continued)**

**Viscosity (cP) Computation:**

Liquid Case

$$\text{cP viscosity} = A \cdot \exp \left( \frac{B}{T_f + 459.67} \right)$$

**NOTE:**

Viscosity cS =  $\frac{\text{viscosity (in cP)}}{\text{density of water @ 4°C}}$

Gas Case

$$\text{cP viscosity} = A \cdot (T_f + 459.67)^B$$

Steam Case

$$\text{cP viscosity} = f(T_f, P_f)$$

**Corrected Volume Flow Computation:**

Liquid Case

$$\text{std. volume flow} = \text{volume flow} \cdot (1 - \text{Therm.Exp.Coef.} \cdot (T_f - T_{ref}))^2$$

Gas Case

$$\text{std. volume flow} = \text{volume flow} \cdot \frac{P_f}{P_{ref}} \cdot \frac{(T_{ref} + 273.15)}{(T_f + 273.15)} \cdot \frac{Z_{ref}}{Z_f}$$

**NOTE:** For Natural Gas:

$\frac{Z_{ref}}{Z_f}$  is determined by NX-19 when this selection is supplied and selected.

**Natural Gas NX-19 Equation:** The NX-19 (1963) natural gas state equations are widely used in custody transfer applications. Over most normal measurement ranges, 500 to 5000 psia (3.5 to 10.4 MPa) and -10 to 100°F (-23 to 38°C), the NX-19 equation will compute the gas compressibility factor to within 0.2% of the values computed by the newer AGA-8 state equation.

The ranges over which the NX-19 equation applies are:

Pressure $P_G$	To 5000 psig (10.34 MPa gauge)
Temperature $T_f$	-40 to 240°F (-40 to 116°C)
Specific Gravity $G$	0.554 to 1.0
CO <sub>2</sub> and N <sub>2</sub>	0 to 15%

Our Flow Computer uses the Specific Gravity method to first obtain the adjusted temperature and pressure before entering the state equation. This method calculates the adjusted pressure and temperature from the mole fractions of carbon dioxide and nitrogen as

$$P_{adj} = \frac{156.47 P_G}{160.8 - 7.22 G_g + 100X_{CO_2} - 39.2X_{N_2}} \quad \text{psig}$$

**7.3.5  
Corrected  
Volume Flow  
Computation  
(continued)**

Where  $X_{CO_2}$  and  $X_{N_2}$  are the mole fractions of carbon dioxide and nitrogen, respectively. The adjusted temperature is defined by

$$T_{adj} = \frac{226.29 (T_F + 460)}{99.15 + 211.9 G_g - 100X_{CO_2} - 168.1X_{N_2}} \quad ^\circ F$$

After calculating the adjusted pressure and temperature, the mixture's pressure and temperature correlations parameters are calculated by

$$P = \frac{P_{adj} + 14.7}{1000} \quad T = \frac{T_{adj}}{500}$$

The compressibility factor is then calculated by first determining

$$\begin{aligned} m &= 0.0330378 T^{-2} - 0.0221323 T^{-3} + 0.0161353 T^{-5} \\ n &= (0.265827 T^{-2} + 0.0457697 T^{-4} - 0.133185 T^{-1}) m^{-1} \\ B &= \frac{3 - mn^2}{9mp^2} \\ b &= \frac{9n - 2mn^3}{54mp^2} - \frac{E}{2mp^2} \\ D &= [b + (b^2 + B^3)^{0.5}]^{1/3} \end{aligned}$$

Where  $E$  is a function of the pressure  $p$  and temperature  $T$  correlation parameters. The equations for  $E$  are given in the following table for the designated regions. The following compressibility  $Z_f$  is determined by

$$Z_f = \frac{1}{B/D - D + n/3p}$$

NX-19 Natural Gas Regions and  $E$  Equations

Ranges		
$P$	$T$	$E$
0 to 2	1.09 to 1.40	$E_1$
0 to 1.3	0.84 to 1.09	$E_2$
1.3 to 2.0	0.88 to 1.09	$E_3$
1.3 to 2.0	0.84 to 0.88	$E_4$
2.0 to 5.0	0.84 to 0.88	$E_5$
2.0 to 5.0	0.88 to 1.09	$E_6$
2.0 to 5.0	1.09 to 1.32	$E_7$
2.0 to 5.0	1.32 to 1.40	$E_8$

$$\begin{aligned} T_a &= T - 1.09 & T_b &= 1.09 - T \\ E_1 &= 1 - 0.00075p^{2.3} \exp(-20T_a) - 0.0011T_a^{0.5}p^2(2.17 + 1.4T_a^{0.5} - p)^2 \\ E_2 &= 1 - 0.00075p^{2.3} [2 - \exp(-20T_b)] - 1.317T_b^4p(1.69 - p^2) \\ E_3 &= 1 - 0.00075p^{2.3} [2 - \exp(-20T_b)] + 0.455(200T_b^6 - 0.03249T_b \\ &\quad + 2.0167T_b^2 - 18.028T_b^3 + 42.844T_b^4)(p - 1.3)[1.69(2)^{1.25} - p^2] \\ E_4 &= 1 - 0.00075p^{2.3} [2 - \exp(-20T_b)] + 0.455(200T_b^6 - 0.03249T_b \\ &\quad + 2.0167T_b^2 - 18.028T_b^3 + 42.844T_b^4)(p - 1.3)[1.69(2)^{1.25 + 80(0.88 - 1)^2} - p^2] \\ E_5 &= E_4 - X & E_6 &= E_3 - X & E_7 &= E_1 - X & E_8 &= E_7 - X_1 \\ X &= A(T - 2) + A_1(p - 2)^2 + A_2(p - 2)^3 + A_3(p - 2)^4 \\ X_1 &= (p - 1.32)^2(p - 2)[3 - 1.483(p - 2) - 0.1(p - 2)^2 + 0.0833(p - 2)^3] \\ A &= 1.7172 - 2.33123T - 1.56796T^2 + 3.47644T^3 - 1.28603T^4 \\ A_1 &= 0.016299 - 0.028094T - 0.48782T^2 - 0.78221T^3 + 0.27839T^4 \\ A_2 &= -0.35978 + 0.51419T + 0.165453T^2 - 0.52216T^3 + 0.19687T^4 \\ A_3 &= 0.075255 - 0.10573T - 0.058598T^2 + 0.14416T^3 - 0.054533T^4 \end{aligned}$$

When NX-19 is used for custody transfer applications, the base compressibility factor is calculated by:

$$Z_b = \left( 1 + \frac{0.00132}{T^{3.25}} \right)^{-2}$$

**7.3.6  
Mass Flow  
Computation**

**Mass Flow Computations:**

$$\text{mass flow} = \text{volume flow} \cdot \text{density}$$

**7.3.7  
Comb. Heat Flow  
Computation**

**Combustion Heat Flow Computations:**

$$\text{combustion heat flow} = \text{mass flow} \cdot \text{combustion heating value}$$

**7.3.8  
Heat Flow  
Computation**

**Heat Flow Computation:**

Steam Heat

$$\text{heat flow} = \text{mass flow} \cdot \text{total heat steam}(T_f, P_f)$$

Steam Net Heat

$$\text{heat flow} = \text{mass flow} \cdot [\text{total heat steam}(T_f, P_f) - \text{heat saturated water}(P_f)]$$

Steam Delta Heat

$$\text{heat flow} = \text{mass flow} \cdot [\text{total heat saturated steam}(P_f) - \text{heat water}(T_f)]$$

**7.3.9  
Sensible Heat  
Flow  
Computation**

**Sensible Heat Flow:**

Special Case for Water

$$\text{heat flow} = \text{mass flow}(T_f) \cdot \text{enthalpy}(T_f)$$

**7.3.10  
Liquid Delta Heat  
Computation**

**Liquid Delta Heat:**

General Case

$$\text{heat flow} = \text{mass flow} \cdot \text{specific heat} \cdot (T_2 - T_f)$$

Water Case

$$\text{heat flow} = \text{mass flow}(T_f) \cdot [\text{enthalpy}(T_2) - \text{enthalpy}(T_f)]$$

**7.3.11  
Expansion Factor  
Computation for  
Square Law Flow-  
meters**

**Expansion Factor Computation for Square Law Flowmeters:**

In the following Equations, delta P is assumed in ("H<sub>2</sub>O), Pf is in PSIA, 27.7 is a PSIA to ("H<sub>2</sub>O) units conversion.

Liquid Case

$$Y = 1.0$$

Gas, Steam Case

Orifice Case

$$Y = 1.0 - (0.41 + 0.35 \cdot B^4) \cdot \frac{\text{delta P}}{\text{isentropic exponent} \cdot P_f \cdot 27.7}$$

V-Cone, Venturi, Flow Nozzle, Wedge Case:

$$R = 1 - \frac{\Delta p}{27.7 \cdot p_f}$$

$$Y = \sqrt{\frac{(1 - \beta^4) \cdot \frac{\kappa}{\kappa - 1} \cdot R^{2/\kappa} \cdot (1 - R^{(\kappa-1)/\kappa})}{[(1 - (\beta^4 \cdot R^{2/\kappa})) \cdot (1 - R)]}}$$

**NOTE:** An equivalent formula is used by V-Cone flowmeter types.

Target, Annubar, Pitot Case:

$$Y = 1.0$$

**7.3.11  
Expansion Factor  
Computation for  
Square Law  
Flowmeters  
(Continued)**

Verabar Case

$$Y_v = 1 + \left( 18093 - .4191(1 - \beta)^2 \right) \cdot \left( \frac{h_w}{27.73 \cdot P_{fa} \cdot \Gamma} \right)$$

Where:

$$\beta = \text{The sensor blockage} = \frac{4 \cdot P_w}{\pi \cdot D}$$

$$\pi = 3.14159$$

$D$  = Internal pipe diameter in inches.

$P_w$  = The sensor's probe width in inches.

$P_w = 0.336''$  for a -05 sensor.

$P_w = 0.614''$  for a -10 sensor.

$P_w = 1.043''$  for a -15 sensor.

$h_w$  = Verabar differential pressure in inches of H<sub>2</sub>O.

$P_{fa}$  = Absolute static pressure (high side of the Verabar) in psia.

$\Gamma = k$  = Isentropic exponent for a real gas or steam.

7.3.11  
Expansion Factor  
Computation for  
Square Law  
Flowmeters  
(continued)

*Accelabar Case*

**For 1 inch Accelabar Body**

$$Y_a = .9824 - .5890 \cdot \left( \frac{h_w}{27.73 \cdot P_{fta} \cdot \gamma} \right)$$

**For 2 inch Accelabar Body**

$$Y_a = .9730 - \left( .5850 \cdot \left( \frac{h_w}{27.73 \cdot P_{fta} \cdot \gamma} \right) \right)$$

Where:

- $Y_a$  = Accelabar gas expansion factor (dimensionless)
- $h_w$  = Differential pressure (inches H<sub>2</sub>O @ 68°F)
- $P_{fta}$  = Flowing Pressure in Accelabar Throat (psia)  
= Flowing pressure in psig + atmospheric pressure in psi
- $\gamma$  = Isentropic Exponent for a real gas

**For 3 inch to 12 inch Accelabar Body**

$$Y_a = 1 - Y_{a-coef} \cdot \left( \frac{h_w}{27.73 \cdot P_{fta} \cdot \Gamma} \right)$$

Where:

- $Y_a$  = General Accelabar gas expansion factor (dimensionless)
- $Y_{a-coef}$  = Accelabar gas expansion factor coefficient (dimensionless)
- $h_w$  = Differential pressure (inches H<sub>2</sub>O @ 68°F)
- $P_{fta}$  = Flowing Accelerator Throat Pressure (psia)  
= Flowing throat pressure in psig + atmospheric pressure in psi
- $\Gamma$  = Isentropic Exponent for a real gas or steam

Accelabar Size	$Y_{a-coef}$
3"	0.7432
4"	0.6986
6"	0.6865
8"	0.6407
10"	0.6095
12"	0.5891



**7.3.12  
Uncompensated  
Flow Computation**

**Uncompensated Flow Computation:**

Pulse, Linear Case

$$\text{volume flow} = \frac{\text{input frequency} \cdot \text{Time Scaling Factor}}{\text{K-Factor} \cdot [1 - \text{Meter Exp.Coeff.} \cdot (T_f - T_{cal})]}$$

where:  $T_f = T_1$  if Superheated Steam  
 $T_f = \text{measured } T_2 \text{ or implied by } P_2$

Analog, Linear Case

$$\text{volume flow} = \frac{\text{Measured Input Flow}}{[1 - \text{Meter Exp.Coeff.} \cdot (T_f - T_{cal})]}$$

Square Law Case

$$\text{volume flow} = \frac{\text{DP Factor}}{[1 - \text{Meter Exp.Coeff.} \cdot (T_f - T_{cal})]} \cdot Y \cdot \left[ \frac{2 \cdot \text{delta } P}{\text{density}} \right]^{1/2}$$

Square Law, Target Flowmeter Case

$$\text{volume flow} = \text{input flow} \cdot \frac{\sqrt{\text{density cal.}}}{\sqrt{\text{density flowing}}}$$

Pulse, Linearization Case

$$\text{volume flow} = \frac{\text{input frequency} \cdot \text{Time Scaling Factor}}{\text{K-Factor(Hz)} \cdot [1 - \text{Meter Exp.Coeff.} \cdot (T_f - T_{cal})]}$$

Analog, Linearization Case

$$\text{volume flow} = \frac{\text{Input Flow} \cdot \text{Correction Factor (Input Flow)}}{[1 - \text{Meter Exp.Coeff.} \cdot (T_f - T_{cal})]}$$

Square Law, Linearization Case

$$\text{volume flow} = \frac{\text{DP Factor(RN)}}{[1 - \text{Meter Exp.Coeff.} \cdot (T_f - T_{cal})]} \cdot Y \cdot \left[ \frac{2 \cdot \text{delta } P}{\text{density}} \right]^{1/2}$$

Pulse, UVC Case

$$\text{volume flow} = \frac{\text{input frequency} \cdot \text{Time Scaling Factor}}{\text{K-Factor (Hz/cstks)} \cdot [1 - \text{Meter Exp.Coeff.} \cdot (T_f - T_{cal})]}$$

Shunt Flow Bypass Flowmeter

$$\text{volume flow} = \frac{\text{input frequency} \cdot 457 \cdot E_{pa} \cdot Y_m}{\sqrt{\text{flowing density}} \cdot \text{DC} \cdot \text{bypass calibration favior}}$$

Gilflo Flowmeter

$$\text{volume flow at flowing conditions} = \text{input flow at design conditions} \cdot \sqrt{\frac{\text{calibration density}}{\text{flowing density}}}$$

**NOTE:** Therm.Exp.Coef is 10<sup>-6</sup>

**7.3.13  
ILVA Flow Meter  
Equations**

ILVA Flowmeter - This meter type requires an initial linearization using the linearization table. In addition, the following specialized corrections are required.

For Gas/Steam Expansion (imperial)       **$Y = 1 - (115.814 \cdot (dp / p) \cdot 0.0001)$**

Where:      Y = gas expansion correction (NOTE: Y=1 for liquid)  
               dp = differential pressure - inches water gauge  
               p = upstream pressure - psia

For Reynolds Number (volumetric calculations for Gas/Steam)

**$Cre = (1 - (n / Qn))^{-1}$**   
**to a maximum value of m**

Where:      Cre = Reynolds number correction (NOTE Cre = 1 for liquid)  
               Qn = nominal water volumetric flowrate (column 6)  
               m = (see table below)  
               n = (see table below)

Meter Size	n	m
DN50	2.53	1.200
DN80	0.64	1.125
DN100	0.21	1.100
DN150	0.13	1.067
DN200	0.07	1.050

The final gas expansion and Reynolds number correction is:       **$Qc = Qn \cdot Y \cdot Cre$**

For Volumetric Calculations: (calculate the density corrected volumetric flowrate):

**$Qd = Qc \cdot (Dn / Da)^{0.5}$**

Where:      Qd = density corrected volumetric flowrate  
               Qc = nominal water volumetric flowrate (column 6) corrected for  
                       Reynolds Number and gas expansion effects.  
               Da = actual flowing density of working fluid  
               Dn = nominal density of water at reference conditions

Once corrected for density a further correction is required to take into account the effect of temperature on the ILVA primary element.

Temperature Compensation

For Volumetric Calculations: Using the value of Qd derived above, the temperature corrected flowrate can be calculated:       **$Qa = ((Ta - Tref) \cdot 0.000189 \cdot Qd) + Qd$**

Where:      Qa = actual volumetric flowrate  
               Qd = density corrected volumetric flowrate (from above)  
               Tref = reference temperature in °C (generally 20°C)  
               Ta = actual flowing temperature of working fluid (in °C)

It is possible to convert from a mass flowrate to a volumetric flowrate and vice versa using the following simple formula:       **$Ma = Qn \cdot Da$**

Where:      Da = actual flowing density of working fluid

**7.4 Computation of the DP Factor**

It is assumed that the user has the printout from a standardized sizing program for the particular device he will be using. Such standardized printouts list all the necessary information which the user will then be prompted for by the instrument or diskette.

It is also important that the user select the flow equation to be used and either select or enter the following items:

- Flowmeter Type
- The fluid type or the fluid properties applicable to the fluid to be measured
- Beta, Meter Exp. Coeff., Inlet Pipe Bore
- Reference Conditions of temperature, pressure, Z and calibration temperature

The user is prompted for the following:

- mass flow or volume flow or corrected volume flow as indicated by the flow equation
- Differential Pressure
- Inlet Pressure
- Temperature
- Density
- Isentropic Exponent

The unit then computes the following results corresponding to the user entry conditions and appropriate methods:

Y

Finally the DP Factor is computed as follows:

Steam Case

$$\text{DP Factor} = \frac{\text{mass flow} \cdot [1 - \text{Meter Exp.Coeff.} \cdot (T_f - T_{cal})]}{Y \cdot [2 \cdot \text{delta P} \cdot \text{density}]^{1/2}}$$

Liquid Case

$$\text{DP Factor} = \frac{\text{volume} \cdot [1 - \text{Meter Exp.Coeff.} \cdot (T_f - T_{cal})]}{\left[ \frac{2 \cdot \text{delta P}}{\text{density}} \right]^{1/2}}$$

Gas Case

$$\text{DP Factor} = \frac{\text{Std.Vol.Flow} \cdot \text{ref density} \cdot [1 - \text{Meter Exp.Coeff.} \cdot (T_f - T_{cal})]}{Y \cdot [2 \cdot \text{delta P} \cdot \text{density}]^{1/2}}$$

**Application Hint:**

The user may reenter this DP Factor multiple times to assist him in assembling the table points of DP Factor and Reynold's Number necessary to construct a 16 point table for the meter run.

**NOTE:** Meter Exp.Coeff is (x10<sup>-6</sup>)

**8. RS-232 Serial Port**

**8.1 RS-232 Port Description:**

The ES761ST2 has a general purpose RS-232 Port which may be used for any one of the following purposes:

- Transaction Printing, Data Logging, Remote Metering by Modem or Two Way Paging (optional), Computer Communication Link, Configuration by Computer, Print System Setup, Print Calibration/Malfunction History

**8.2 Instrument Setup by PC's over Serial Port**

A Diskette program is provided with the ES761ST2 that enables the user to rapidly configure the ES761ST2 using a Personal Computer. Included on the diskette are common instrument applications which may be used as a starting point for your application. This permits the user to have an excellent starting point and helps speed the user through the instrument setup.

**8.3 Operation of Serial Communication Port with Printers**

ES761ST2's RS-232 channel supports a number of operating modes. One of these modes is intended to support operation with a printer in metering applications requiring transaction printing, data logging and/or printing of calibration and maintenance reports.


For transaction printing, the user defines the items to be included in the printed document. The user can also select what initiates the transaction print generated as part of the setup of the instrument. The transaction document may be initiated via a front panel key depression.

In data logging, the user defines the items to be included in each data log as a print list. The user can also select when or how often he wishes a data log to be made. This is done during the setup of the instrument as either a time of day or as a time interval between logging.


The system setup and maintenance report list all the instrument setup parameters and usage for the current instrument configuration. In addition, the Audit trail information is presented as well as a status report listing any observed malfunctions which have not been corrected.

The user initiates the printing of this report at a designated point in the menu by pressing the print key on the front panel.

**8.4 ES761ST2 RS-232 Port Pinout**



- 1 Handshake Line (cd in)
- 2 Transmit (tx)
- 3 Receive (rx)
- 4 Do Not Use
- 5 Ground
- 6 Do Not Use
- 7 RTS out
- 8 Do Not Use
- 9 DC Power Out\*

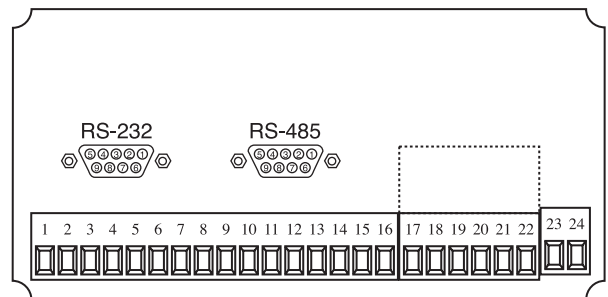

\* 8 VDC Power supplied on Pin 9 to power modem or two way pager

**9. RS-485 Serial Port (optional)**

**9.1 RS-485 Port Description:**

The ES761ST2 has a an optional general purpose RS-485 Port which may be used for any one of the following purposes:

    Accessing Process Parameters

        Rate, Temperatures, Pressures, Density, Time & Date, Setpoints, etc.

    Accessing System Alarms

        System, Process, Self Test, Service Test Errors

    Accessing Totalizers

        Heat, Mass, Corrected Volume, Volume Totalizers and Grand Totalizers

    Executing Various Action Routines

        Reset Alarms, Reset Totalizers, Print Transaction, Reset Error History,

**9.2 General**

The optional RS-485 card utilizes Modbus RTU protocol to access a variety of process parameters and totalizers. In addition, action routines can be executed. For further information, contact factory and request RS-485 Protocol manual.


**9.3 Operation of Serial Communication Port with PC**

The flow computer's RS-485 channel supports a number of Modbus RTU commands. Refer to port pinout (below) for wiring details. Modbus RTU drivers are available from third party sources for a variety of Man Machine Interface software for IBM compatible PC's.

The user reads and writes information from/to the RS-485 using the Modbus RTU commands. The ES761ST2 then responds to these information and command requests.

Process variables and totalizers are read in register pairs in floating point format. Time and date are read as a series of integer register values. Alarms are individually read as coils. Action routines are initiated by writing to coils.

**9.4 ES761ST2 RS-485 Port Pinout**




- 1 Ground
- 2 Ground
- 3 Ground
- 4 TX/RX (+)
- 5 TX/RX (-)
- 6 Do Not Use
- 7 Terminating Resistor (180 Ω)
- 8 TX/RX (+)
- 9 TX/RX (-)

**NOTES:**

4 is internally connected to 8  
5 is internally connected to 9

To terminate end of cable, connect pin 7 to either 4 or 8.

Request *ES761ST2 RS-485 Option with Modbus RTU Protocol* manual for complete details of RS-485

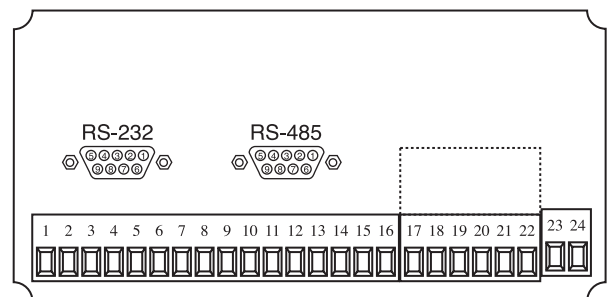

## 10. Flow Computer Setup Software

The ES761ST2 setup program provides for configuring, monitoring and controlling a ES761ST2 unit.

Sample applications are stored in disk files. The setup program calls these *Templates*. You can store the setup from the program's memory to either the ES761ST2 (*Downloading* the file) or to a disk file (*Saving* the file) for later usage. Similarly you can load the setup in program memory from either a disk file (*Opening* a file) or from the ES761ST2 unit (*Uploading* a file).

The program can monitor outputs from the unit while it is running.

The program can reset alarms and totalizers.

The peak demand may be reset when the option is supplied.

For assistance there are mini-helps at the bottom of each screen in the program. There is also context sensitive help available for each screen accessible by pressing the F1 key.

### 10.1 System Requirements:

Windows® XP/Vista/7/8/10

4 MB RAM

3 MB free disk space

Communication Port - RS-232 (A USB to RS232 converter is required for PCs without RS-232 port)

RS-232 Cable -

Mounting Style "P" - Panel Mount units require a cable which matches the available communication port on your PC and a 9 pin male connection for the flow computer serial port.

Mounting Style "W" - Wall Mount units require a cable which matches the available communication port on your PC and a 4 wire connection to the terminal block on flow computer serial port. A RS232 DB 9 female to individual wires may be required in order to connect to the terminal block RS232 connector in this enclosure style.

### 10.2 Cable and Wiring Requirements:

The serial communication port on your PC is either a 25 pin or 9 pin connector. No cabling is supplied with the setup software. A cable must be purchased separately or made by the user. It is recommended to purchase a modem cable which matches the available communication port on your PC and a 9 pin male connection for the flow computer serial port.

### 10.3 Installation for Windows

It is good practice to quit all unnecessary programs running before beginning the installation procedure. In some instances, it may be required that anti-virus programs be disabled.

Software installation can be done either from a file downloaded from our website or from an installation disc provided with the product. To install from the disc, simply open the CD/DVD drive and insert the installation disc.

A setup wizard window should be launched. In case there is none, open the Explorer and navigate to the CD/DVD drive. Double click on the Setup file.

Once the wizard is running, simply follow the prompts until the installation process is completed.

For installation from the Web, launch your browser application and download the setup file to your hard drive.

After completion of the downloading process, run the setup program to execute the setup wizard that will handle the automatic installation of the software.

After the installation procedure has been completed and the setup wizard has terminated, it is best to reboot your machine before launching the newly installed software.

#### 10.4 Using the Flow Computer Setup Software

The setup software window consists of several menu “Tabs”. Each tab is organized into groups containing various configuration and/or monitoring functions. To view the tab windows, simply click on the tab. The previous tab window will be hidden as the new tab window is brought to the foreground.

**Caution:** It is required that the ES761ST2 unit which is being configured be kept in the operating mode while using the setup diskette. If not, uncertainty exists as to what information will be retained when the session is concluded.

#### 10.5 File Tab

The File Tab has three sections. Any of the options on this tab can also be accessed from the File submenu.

The **Template Section** provides for opening and saving templates. The *Save* and *Save As* buttons provide the standard Windows functionality for dealing with files. The *Open* button is used to open existing templates.

The *Open* option allows for creating custom templates using the existing template in memory as the starting point. Assign a new name for this template. The template will be saved under this new name.

A typical scenario using the setup program would be the following:

- Open up a predefined template from the supplied list
- Choose ‘Save As’ to save this to a new file name
- Proceed to customize the template by making any changes that are needed
- Save the template to disk (if you want to reuse this template)
- Download the template to an attached unit.

The **Communications with ES761ST2 Section** allows the user to upload the setup from the unit or download the program’s current template to the unit.

The **Print (report) Section** allows the user to:

1. Configure the current Windows printer through the Select Printer option.
2. Print a Maintenance Report through the PC's printer using the Print Maintenance option.
3. Print the current setup through the PC's printer using Print Setup option.

#### 10.6 Setup Tab

The Setup tab is where the majority of the ES761ST2 instrument setup modifications are done. The Setup tab is divided into five sections.

**System Section:** Parameters, Display, Units

**Input Section:** Flow, Fluid, Compensation Inputs

**Output Section:** Pulse, Currents

**Relay Section:** Relays

**Other Settings Section:** Administration, Communication, Printing

**NOTE:** Many setup items are enabled or disabled depending on previous setup selections, It is important to work your way through the above list in the order shown. Be sure to verify your selections when you are through programming to insure that no settings were changed automatically.



## 10.7 View Tab

The View Tab screen allows for viewing selected group items on the PC in a similar format to that shown on the unit display. Data from the following groups can be viewed in the List of Values section:

- Process Parameters (i.e. rate, temperature)
- Totalizers (i.e. total, grand total)
- Input Signals
- Analog Output
- Error Status
- ES761ST2 Software Version Information

The setup software assumes the current setup has been uploaded from the flow computer into the PC. It is important that the setup program and the ES761ST2 unit are using the same setup information at all times or the data will be inconsistent. It is best to upload or download the setup before using this feature to synchronize the setups.

### Error Log

Data from the error logger is viewed in a separate Error Log section on the screen. To start the viewer, first check the boxes of items to view and then click the start button. The data will appear in the appropriate sections and will be continuously updated. The refresh rate is dependent on the number of items that are being viewed and the baud rate of the connection. Data in the List of Values section can be collapsed by clicking on the 'minus' sign in front of the group title. The data can be expanded by clicking on the 'plus' sign in front of the group title. If a group is collapsed and data in the group changes on refresh, the group will automatically expand. Data in the Error Log section does not expand or collapse. Changing the view items requires stopping the current viewing, checking the new selections and then restarting the viewer.

If communication errors occur while reading data from the ES761ST2 device, the word 'Error' will appear in place of the actual value. If the connection to the ES761ST2 is lost, the viewer will time out with a message saying the device is not responding.

The viewer will attempt to communicate with the ES761ST2 device matching the device ID set in the communications screen. If you are having trouble establishing communication, compare settings for the PC and the flow computer. Also verify the connections between the PC and flow computer.

## 10.8 Misc. Tab

This tab has three sections: Tools, Actions and Options.

The tools section contains various system administration activities such as creating/modifying the initial sign-on screen or create print headers.

The Actions section is used to send commands to the ES761ST2 unit.

Reset Totalizers, Reset Alarms, Simulations, Self Check, Reset Peak Demand (if equipped)

The Options section has the following selections:

Language Translations, Network Card Configuration  
Additional capabilities may be provided in the future.



## 11. Glossary of Terms

### Access Code

A numeric password which is entered by a user attempting to gain entry to change setup parameters.

### AGA-3

A empirical flow equation applicable to orifice and several other square law flowmeters.

### AGA-5

A gas flow equation for computing the combustion heat flow from measured volume flow, temperature and pressure as well as stored gas properties.

### AGA-7

A gas flow equation for pulse producing, volumetric flowmeters which computes the equivalent flow at reference conditions from the measurements made at flowing line conditions.

### Assign Usage

A menu selection during the setup of the instrument which selects the intended usage for the input/output.

### Barometric Pressure

An entry of the average, local atmospheric pressure at the altitude or elevation of the installation. (typically 14.696 psia)

### Beta

A important geometric ratio for a square law flowmeters.

### Calibration

An order sequence of adjustments which must be performed in order for the equipment to operate properly.

### Calibration Temperature

The temperature at which a flow sensor was calibrated on a test fluid.

### Combustion Heat

The energy released by a fluid fuel during combustion .

### Default

A value to be assumed for manual inputs or in the event of a failure in a input sensor.

### Display Damping

An averaging filter constant used to smooth out display bounce.

### DP Factor

A scaling constant for a square law flowmeter.

### Error Log

A historical record which captures errors which have occurred.

### Flow Equation

A recognized relationship between the process parameters for flow, temperature, pressure and density used in flow measurements.

### Galvanic Isolation

Input and or output functions which do not share a conductive ground or common connection between them.

### Gas Cor. Vol Eq.

An equation where the corrected volume flow of gas at STP is computer from measured volume flow, temperature and pressure as well as stored gas properties.

### Gas Comb. Heat Eq.

An equation where the combustion heat flow of gas is computer from measured volume flow, temperature and pressure as well as stored gas properties.

### Gas Mass Eq.

An equation where the mass flow of gas is computer from measured volume flow, temperature and pressure as well as stored gas properties.

### Flowing Z-Factor

The mean Z-Factor under flowing conditions of temperature and pressure for a specific gas.

## 11. Glossary of Terms (Continued)

**Full Scale**

The value of the process variable at the full scale or maximum input signal.

**Inlet Pipe Bore**

The internal pipe diameter upstream of the flow measurement element.

**Isentropic Exponent**

A property of a gas or vapor utilized in orifice meter calculations.

**K-Factor**

The calibration constant for a pulse producing flowmeter expressed in pulses per unit volume

**Linear**

A flow measurement device where the output signal is proportional to flow.

**Linear 16 Pt.**

A mathematical approximation to a nonlinear device where by a correction factor or K-Factor table as a function of input signal is utilized to eliminate flowmeter nonlinearity.

**Low Flow Cutoff**

The value of input signal below which flow rate may be assumed to be 0 and at which totalization will cease.

**Low Scale**

The value of the process variable at the zero input signal.

**Manual**

An entry value to be used as a fixed condition in a equation

**Meter Exp. Coef.**

A coefficient in an equation which may be used to correct for changes in flowmeter housing dimensioned changes with temperature.

**Mole %**

The % composition of an individual gas in a gas mixture.

**NX-19**

A series of equations used to compute the compressibility of natural gas as a function of specific gravity, temperature, pressure and gas composition.

**Protocol**

An agreed upon method of information exchange.

**Print Initiate**

A user specified condition which must be satisfied for a transaction document to be printed.

**Pulse Type**

A menu selectable equivalent pulse output stage.

**Pulse Value**

An output scaling factor defining the equivalent amount of flow total represented by 1 output pulse.

**Ref. Z-Factor**

The Z-Factor for a gas at reference conditions of temperature and pressure.

**Ref. Density**

The density of a fluid at reference conditions of temperature and pressure.

**Relay Function**

The assigned usage for a relay output.

**Relay Mode**

The user's desired operating mode for the relay. Examples: follow, latch, timed pulse, above setpoint, below setpoint

**Safe State**

The state of an instrument's outputs which will occur during a power down state. The state the instrument assumes when the computations are paused.

## 11. Glossary of Terms (Continued)

**Scroll List**

The user's desired display list which can be presented on the two list display on Line 1 and/or L2 when the SCROLL key is depressed.

**Self Check**

A diagnostic sequence of steps a unit performs to verify it's operational readiness to perform it's intended function.

**Service Test**

A diagnostic sequence requiring specialized test apparatus to function to verify system readiness.

**Setpoint**

An alarm trip point.

**Simulation**

A special operating mode for an output feature which enables a service personnel to manually exercise the output during installation or trouble shooting operations.

**Square Law Flowmeters**

Types of measurement devices which measure differential pressure across a known geometry to make a flow measurement.

**SQR LAW (Square Law w/o SQRT)**

A square law flow measurement device equipped with a pressure transmitter with out a integral square root extractor.

**SQR LAW-LIN (Square Law w/ SQRT)**

A square law flow measurement device equipped with a pressure transmitter with integral square root extraction.

**SQR Law 16PT (Square Law 16pt)**

A mathematical approximation to a square law device where the discharge coefficient is represented as a table of DP Factor vs Reynold's Number.

**Steam Delta Heat**

A computation of the net heat of saturated steam equal to the total heat of steam minus the heat of water at the measured actual temperature.

**Steam Heat**

A computation of the total heat of steam.

**Steam Net Heat**

A computation of the net heat of steam equal to the total heat of steam minus the heat of water at the same saturated temperature.

**STP Reference**

The user's desired pressure and/or temperature to be considered as the reference condition in the computation of fluid properties or corrected volume conditions.

**TAG**

An alphanumeric designation for a particular instrument.

**Time Constant**

An averaging filter constant used to reduce bounce on the analog output. The high the number the slower the response, the greater filtering.

**UVC**

Universal Viscosity Curve is a representation of the calibration factor for a turbine flowmeter. It is expressed as a table of K-Factor as a function of Hz/CSTKS.

**Viscosity Coef**

A parameter in an equation which is used to estimate the viscosity as a function of temperature.

## 12. Diagnosis and Troubleshooting


### 12.1 Response of ES761ST2 on Error or Alarm:

Error indications which occur during operation are indicated alternately with the measured values. The ES761ST2 Flow Computer has four types of error:

TYPE OF ERROR	DESCRIPTION
System Alarms	Errors detected due to system failure
Sensor/Process Alarms	Errors detected due to sensor failure or process alarm conditions
Service Test Errors	Errors detected due to problems found during service test. (Service test can only be performed by qualified Factory service technicians because service code and special equipment are needed)
Self Test Errors	Errors detected during self test. (Each time the unit is powered, it runs a self test)

### 12.2 Diagnosis Flow Chart and Troubleshooting

All instruments undergo various stages of quality control during production. The last of these stages is a complete calibration carried out on state-of-the-art calibration rigs. A summary of possible causes is given below to help you identify faults.

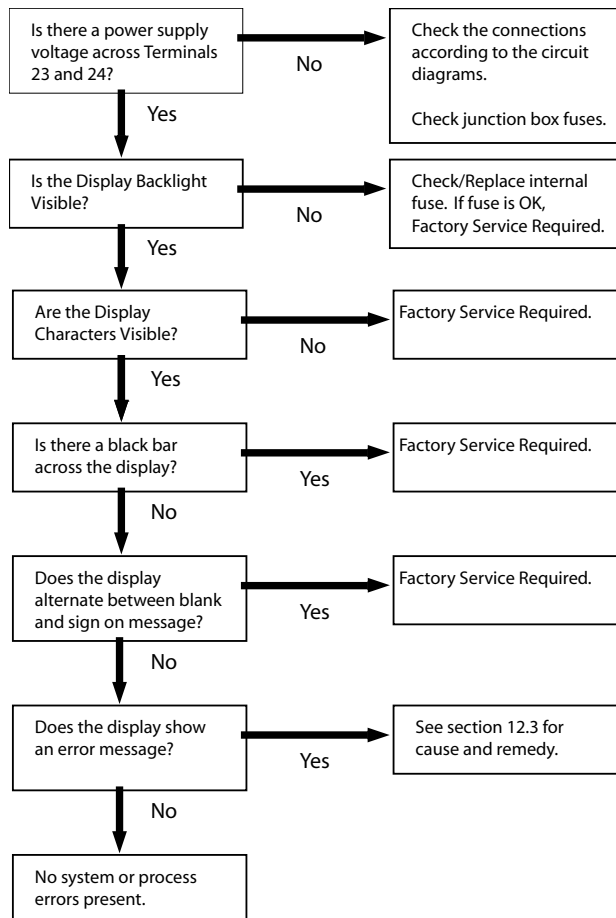

### 12.3 Error Messages:

**NOTE:** The 24 VDC output has a self resetting fuse.

Error Message	Cause	Remedy
<b>POWER FAILURE</b>	Power has been interrupted	Acknowledge Error Remedy not required
<b>WATCHDOG TIMEOUT</b>	Possible transient	Acknowledge Error Remedy not required
<b>COMMUNICATION ERROR</b>	Possible Improper wiring or usage Message Transmission failure.	Check wiring and communication settings / protocol
<b>CALIBRATION ERROR</b>	Operator Error	Repeat Calibration
<b>PRINT BUFFER FULL</b>	Print buffer full, Data may be lost	Check paper and printer connections
<b>WET STEAM ALARM</b>	Temperature or pressure input has gone below the saturated steam range of the internal steam tables	Check application, Insure that all sensors are working properly
<b>OFF FLUID TABLE</b>	Temperature or pressure input has gone below or exceeded the range of the internal steam tables	Check application, Insure that all sensors are working properly
<b>FLOW IN OVERRANGE</b>	Flow input has exceeded input range (if stacked, may be lo or hi transmitter)	Check sensor calibration
<b>INPUT 1 OVERRANGE</b>	Input 1 signal from sensor has exceeded input range	Check sensor calibration
<b>INPUT 2 OVERRANGE</b>	Input 2 signal from sensor has exceeded input range	Check sensor calibration
<b>INPUT 3 OVERRANGE</b>	Input 3 signal from sensor has exceeded input range	Check sensor calibration
<b>FLOW LOOP BROKEN</b>	Open circuit detected on flow input (if stacked, may be lo or hi transmitter)	Check wiring and sensor
<b>LOOP 1 BROKEN</b>	Open circuit detected on input 1	Check wiring and sensor
<b>LOOP 2 BROKEN</b>	Open circuit detected on input 2	Check wiring and sensor
<b>LOOP 3 BROKEN</b>	Open circuit detected on input 3	Check wiring and sensor
<b>RTD 1 OPEN</b>	Open circuit detected on RTD 1 input	Check wiring and RTD
<b>RTD 1 SHORT</b>	Short circuit detected on RTD 1 input	Check wiring and RTD

**12.3 Error Messages: (Continued)**

<b>Error Message</b>	<b>Cause</b>	<b>Remedy</b>
<b>RTD 2 OPEN</b>	Open circuit detected on RTD 2 input	Check wiring and RTD
<b>RTD 2 SHORT</b>	Short circuit detected on RTD 2 input	Check wiring and RTD
<b>PULSE OUT OVERRUN</b>	Pulse output has exceeded the internal buffer	Adjust pulse value or pulse width
<b>Iout 1 OUT OF RANGE</b>	Current output 1 is below or above specified range	Adjust the "0"/ "Full Scale" values or increase/ lower flowrate
<b>Iout 2 OUT OF RANGE</b>	Current output 1 is below or above specified range	Adjust the "0"/ "Full Scale" values or increase/ lower flowrate
<b>TOTALIZER ERROR</b>		
<b>RELAY 1 HI ALARM</b>	Relay 1 is active due to high alarm condition	Not required
<b>RELAY 1 LO ALARM</b>	Relay 1 is active due to low alarm condition	Not required
<b>RELAY 2 HI ALARM</b>	Relay 2 is active due to high alarm condition	Not required
<b>RELAY 2 LO ALARM</b>	Relay 2 is active due to low alarm condition	Not required
<b>RELAY 3 HI ALARM</b>	Relay 3 is active due to high alarm condition	Not required
<b>RELAY 3 LO ALARM</b>	Relay 3 is active due to low alarm condition	Not required
<b>24VDC OUT ERROR</b>	24V output error detected during service test run	By Factory Service
<b>PULSE IN ERROR</b>	Pulse input error detected during service test run	By Factory Service
<b>INPUT 1 Vin ERROR</b>	Error detected on input 1 voltage input during service test run	By Factory Service
<b>INPUT 1 Iin ERROR</b>	Error detected on input 1 current input during service test run	By Factory Service
<b>INPUT 2 Iin/RTD ERROR</b>	Error detected on input 2 during service test run	By Factory Service
<b>INPUT 3 Iin/RTD ERROR</b>	Error detected on input 3 during service test run	By Factory Service

<b>Error Message</b>	<b>Cause</b>	<b>Remedy</b>
<b>PULSE OUT ERROR</b>	Pulse output error detected during service test run	By Factory Service
<b>Iout 1 ERROR</b>	Current output 1 error detected during service test run	By Factory Service
<b>Iout 2 ERROR</b>	Current output 2 error detected during service test run	By Factory Service
<b>RELAY 1 ERROR</b>	Relay 1 error detected during service test run	By Factory Service
<b>RELAY 2 ERROR</b>	Relay 2 error detected during service test run	By Factory Service
<b>RS-232 ERROR</b>	RS-232 error detected during service test run	By Factory Service
<b>A/D MALFUNCTION</b>	Error detected in A/D converter during self test	By Factory Service
<b>PROGRAM ERROR</b>	Error on access to the program memory	By Factory Service
<b>SETUP DATA LOST</b>	All or part of the EEPROM data for setup is damaged or has been overwritten	Re-Enter setup data, If problem persists, Factory service required
<b>TIME CLOCK LOST</b>	The real time clock data was lost during extended power outage	Re-Enter time and date
<b>DISPLAY MALFUNCTION</b>	A display malfunction has been detected.	By Factory Service
<b>RAM MALFUNCTION</b>	Part or all of the internal RAM is damaged	By Factory Service
<b>TRAP ERROR</b>	Steam trap malfunction	Service steam trap
<b>TRAP BLOWING</b>	Steam trap malfunction	Change error delay
<b>DATALOG LOST</b>	Contents of datalog were corrupt and lost	Clear datalog, Clear errors

## Appendix A - Fluid Properties Table

### Fluid Properties Table

#### LIQUID

FLUID	REF. DENSITY (lb./ft <sup>3</sup> )	REF. TEMP. (°F)	COEFF. OF EXPANSION	COMBUSTION HEAT (Btu/lb) LIQUID H <sub>2</sub> O and CO <sub>2</sub>	SPECIFIC HEAT (Btu/lb °F)	LIQ.VISC. ANDREDE's EQUATION COEFF. "A"	VISCOSITY BY ANDREDE's EQUATION COEFF. "B"
AIR	54.56	-317.8	0.0016262	0	0.45	0.172	0
AMMONIA	42.63	-28.2	0.0005704	0	1.05	0.00157	2228.25
ARGON	86.89	-302.6	0.0014861	0	0.45	0.011291	511.34
CO2	65.333	-10.0	0.0012609	0	0.45	0.000001	5305.44
METHANE	26.48	-258.7	0.0010523	23920	0.80	0.006819	526.08
NATURAL GAS	26.48	-258.7	0.0010523	23920	0.80	0.006819	526.08
NITROGEN	50.44	-320.4	0.0014917	0	0.55	0.006524	434.94
OXYGEN	71.21	-297.4	0.0013458	0	0.41	0.019773	340.29
PROPANE	31.671	60	0.0007178	21690	0.6	0.009969	1267.35
Nx-19	26.48	-258.7	0.0010523	23920	0.80	0.006819	526.08
GASOLINE	46.8	60	0.0003703	20400	0.5	0.045617	1432.26
KEROSENE	51.79	60	0.0002681	18400	0.45	0.004378	3245.78
No. 2 FUEL	58.97	60	0.0000885	17970	0.42	0.000453	4946.15
WATER	62.37	60	0.0001015	0	1	0.001969	3315.61
HYDROGEN	4.41874	-432.2	0.0007259	60620.5	2.336	0.003537	48.5432
ETHYLENE	34.085	-127.5	0.00068257	22292	1	0.000238	26665.90
HELIUM	9.14157	-452.1	0.00011477	0	1	0.0033	0

#### GAS

FLUID	REF. DENSITY (lb./ft <sup>3</sup> )	REF. TEMP. (°F)	REF. Z FACTOR (14.696 PSIA)	Z FACTOR AT 100 PSIA and 60°F	SPECIFIC HEAT (Btu/lb °F)	COMBUSTION HEAT (Btu/lb) LIQUID H <sub>2</sub> O and CO <sub>2</sub>	ISENTROPIC EXPONENT	VISCOSITY BY ANDREDE's EQUATION COEFF. "A"	VISCOSITY BY ANDREDE's EQUATION COEFF. "B"
AIR	0.076	60	1	0.997	0.24	0	1.4	0.000138	0.775522
AMMONIA	0.045	60	1	0.955	0.52	0	1.31	0.000013	1.05951
ARGON	0.105	60	1	0.995	0.125	0	1.67	0.00021	0.750757
CO2	0.116	60	1	0.954	0.21	0	1.32	0.000049	0.91136
METHANE	0.042	60	1	0.970	0.55	23920	1.31	0.000018	1.015892
NAT. GAS	0.0456	60	1	0.970	0.55	23920	1.31	0.000018	1.015892
NITROGEN	0.074	60	1	0.998	0.25	0	1.41	0.000202	0.7128734
OXYGEN	0.084	60	1	0.995	0.22	0	1.41	0.000169	0.761811
PROPANE	0.116	60	1	0.870	0.4	21690	1.14	0.00002	0.952092
Nx-19	0.0456	60	1	0.97	0.55	23920	1.31	0.000018	1.015892
HYDROGEN	0.00532	60	1	1.0042	3.42	60620.5	1.405	0.000151	0.647667
ETHYLENE	0.074717	60	1	0.994	0.386	22292	1.244	0.0093	0
HELIUM	0.01055	60	1	1	1.25	0	1.630	0.000209	0.721975



## Appendix B - Setup Menus

**SETUP MENUS**  
 Operator Code Access

**START HERE**
**SYSTEM PARAMETER**

EZ SETUP	ACCESS CODE	FLOW EQUATION	ENTER DATE	ENTER TIME	DAYLIGHT SAVINGS	OPERATOR CODE	TAG #	ORDER CODE	SERIAL #	SENSOR SERIAL #
----------	-------------	---------------	------------	------------	------------------	---------------	-------	------------	----------	-----------------

**DISPLAY**

SCROLL LIST	DISPLAY DAMPING	MAX. DEC. POINT	LANGUAGE
-------------	-----------------	-----------------	----------

**SYSTEM UNITS**

TIME BASE	HEAT FLOW UNIT	HEAT TOTAL UNIT	MASS FLOW UNIT	MASS TOTAL UNIT	COR. VOL. FLOW UNIT	COR. VOL. TOTAL UNIT	VOLUME FLOW UNIT	VOLUME TOTAL UNIT	DEFINITION	TEMPERATURE UNIT	PRESSURE UNIT	DENSITY UNIT	SPEC. ENTHALPY UNIT	LENGTH UNIT
-----------	----------------	-----------------	----------------	-----------------	---------------------	----------------------	------------------	-------------------	------------	------------------	---------------	--------------	---------------------	-------------

**FLUID DATA**

FLUID TYPE	REF. DENSITY	THERM. EXP. COEF.	COMBUSTION HEAT	SPECIFIC HEAT	FLOW Z-FAC-TOR	REF. Z-FAC-TOR	ISENTROPIC EXP.	MOLE % NITROGEN	MOLE % CO2	VISCOSITY COEF. A	VISCOSITY COEF. B
------------	--------------	-------------------	-----------------	---------------	----------------	----------------	-----------------	-----------------	------------	-------------------	-------------------

**FLOW INPUT**

FLOWMETER TYPE	SQUARE LAW FLOWMETER	ILVA SIZE	ACCELERAR SIZE	INPUT SIGNAL	LOW SCALE	FULL SCALE	LOW SCALE HIGH RANGE	FULL SCALE HIGH RANGE	SWITCH UP	SWITCH DOWN	LOW FLOW CUTOFF	CALIBRATION DENSITY	K-FACTOR	PIPE INNER DIAMETER	ENTER BETA
----------------	----------------------	-----------	----------------	--------------	-----------	------------	----------------------	-----------------------	-----------	-------------	-----------------	---------------------	----------	---------------------	------------

**COMPENSATION INPUT**

1	INPUT SIGNAL	LOW SCALE VALUE	FULL SCALE VALUE	DEFAULT VALUE	STP. REFER-ENCE	CALIBRATION TEMP	LOW DELTA T CUTOFF	VIEW INPUT SIGNAL	TRAP ERROR DELAY	TRAP BLOW-ING DELAY
---	--------------	-----------------	------------------	---------------	-----------------	------------------	--------------------	-------------------	------------------	---------------------

2	INPUT SIGNAL	LOW SCALE VALUE	FULL SCALE VALUE	DEFAULT VALUE	STP. REFER-ENCE	BAROMETRIC PRESS	VIEW INPUT SIGNAL
---	--------------	-----------------	------------------	---------------	-----------------	------------------	-------------------

**PULSE OUTPUT**

ASSIGN PULSE OUTPUT	PULSE TYPE	PULSE VALUE	PULSE WIDTH	SIMULATION FREQ.
---------------------	------------	-------------	-------------	------------------

METER EXP. COEF	DP-FACTOR	LOW PASS FILTER	LINEARIZATION	FLOW METER LOCATION	BYPASS CAL. FACTOR
-----------------	-----------	-----------------	---------------	---------------------	--------------------

BYPASS EAM FACTOR	BYPASS DC FACTOR	BYPASS YM FACTOR	VIEW INPUT SIGNAL	VIEW HI RANGE SIGNAL
-------------------	------------------	------------------	-------------------	----------------------

**CURRENT OUTPUT**

1	ASSIGN CURRENT OUTPUT	CURRENT RANGE	LOW SCALE VALUE	FULL SCALE VALUE	TIME CON-STANT	CURRENT OUT VALUE (DISPLAY)	SIMULATION CURRENT
---	-----------------------	---------------	-----------------	------------------	----------------	-----------------------------	--------------------

2	ASSIGN CURRENT OUTPUT	CURRENT RANGE	LOW SCALE VALUE	FULL SCALE VALUE	TIME CON-STANT	CURRENT OUT VALUE (DISPLAY)	SIMULATION CURRENT
---	-----------------------	---------------	-----------------	------------------	----------------	-----------------------------	--------------------

These functions will only appear with appropriate settings in other functions.

**RELAYS**

SELECT RELAY 1, 2, 3	RELAY FUNCTION	RELAY MODE	LIMIT SET-POINT	PULSE VALUE	PULSE WIDTH	HYSTERESIS	RELAY SIMULA-TION	RESET ALARM
----------------------	----------------	------------	-----------------	-------------	-------------	------------	-------------------	-------------

**COMMUNICATION**

RS232 USAGE	DEVICE ID	BAUD RATE	PARITY	HANDSHAKE	PRINT LIST	PRINT INITIATE	DATALOG ONLY	PRINT INTERVAL	PRINT TIME	DATALOG FORMAT	MODEM CONTROL	DEVICE MASTER	SEND INC TOT ONLY	INC ONLY SCALER	CLEAR DIALOG
-------------	-----------	-----------	--------	-----------	------------	----------------	--------------	----------------	------------	----------------	---------------	---------------	-------------------	-----------------	--------------

**NETWORK CARD**

PROTOCOL	DEVICE ID	BAUD RATE	PARITY
----------	-----------	-----------	--------

MODEM AUTO ANSWER	CALL OUT NO	CALL OUT TIME	CALL ON ERROR	NUMBER OF REDIALS	HANGUP IF INACTIVE	PAGER PIN NUMBER	DESTINATION TYPE	REGISTER PAGER	ERROR MASK
-------------------	-------------	---------------	---------------	-------------------	--------------------	------------------	------------------	----------------	------------

**SERVICE & ANALYSIS**

EXAMINE AUDIT TRAIL	ERROR LOG	SOFTWARE VERSION (DISPLAY)	HARDWARE VERSION (DISPLAY)	PRINT SYSTEM SETUP	SELF CHECK
---------------------	-----------	----------------------------	----------------------------	--------------------	------------

CLP PROG-RESS	MAX BLOCK SIZE	INITIALIZE PAGER
---------------	----------------	------------------

# Appendix B- Setup Menus (continued)

## SETUP MENUS Service Code Access

**START HERE**

**SYSTEM PARAMETER**

EZ SETUP	ACCESS CODE	FLOW EQUATION	ENTER DATE	ENTER TIME	DAYLIGHT SAVINGS	OPERATOR CODE	SUPERVISOR CODE	ENGINEERING CODE	TAG #	ORDER CODE	SERIAL #	SENSOR SERIAL#
----------	-------------	---------------	------------	------------	------------------	---------------	-----------------	------------------	-------	------------	----------	----------------

**DISPLAY**

SCROLL LIST	DISPLAY DAMPING	MAX. DEC. POINT	LANGUAGE
-------------	-----------------	-----------------	----------

**SYSTEM UNITS**

TIME BASE	HEAT FLOW UNIT	HEAT TOTAL UNIT	MASS FLOW UNIT	MASS TOTAL UNIT	COR. VOL. FLOW UNIT	COR. VOL. TOTAL UNIT	VOLUME FLOW UNIT	VOLUME TO TAIL UNIT	DEFINITION	TEMPERATURE UNIT	PRESSURE UNIT	DENSITY UNIT	SPEC. ENTHALPY UNIT	LENGTH UNIT
-----------	----------------	-----------------	----------------	-----------------	---------------------	----------------------	------------------	---------------------	------------	------------------	---------------	--------------	---------------------	-------------

**FLUID DATA**

FLUID TYPE	REF. DENSITY	THERM. EXP. COEF.	COMBUSTION HEAT	SPECIFIC HEAT	FLOW Z-FAC-TOR	REF. Z-FAC-TOR	ISENTROPIC EXP.	MOLE % NITROGEN	MOLE % CO2	VISCOSITY COEF. A	VISCOSITY COEF. B
------------	--------------	-------------------	-----------------	---------------	----------------	----------------	-----------------	-----------------	------------	-------------------	-------------------

**FLOW INPUT**

FLOWMETER TYPE	SQUARE LAW FLOWMETER	ILVA SIZE	ACCELERATOR SIZE	INPUT SIGNAL	LOW SCALE	FULL SCALE	LOW SCALE HIGH RANGE	FULL SCALE HIGH RANGE	SWITCH UP	SWITCH DOWN	LOW FLOW CUTOFF	CALIBRATION DENSITY	K-FACTOR	PIPE INNER DIAMETER	ENTER BETA
----------------	----------------------	-----------	------------------	--------------	-----------	------------	----------------------	-----------------------	-----------	-------------	-----------------	---------------------	----------	---------------------	------------

**COMPENSATION INPUT**

1	INPUT SIGNAL	LOW SCALE VALUE	FULL SCALE VALUE	DEFAULT VALUE	STP REFER-ENCE	CALIBRATION TEMP	LOW DELTA T CUTOFF	VIEW INPUT SIGNAL	TRAP ERROR DELAY	TRAP FLOW-ING DELAY
---	--------------	-----------------	------------------	---------------	----------------	------------------	--------------------	-------------------	------------------	---------------------

**PULSE OUTPUT**

2	INPUT SIGNAL	LOW SCALE VALUE	FULL SCALE VALUE	DEFAULT VALUE	STP REFER-ENCE	BAROMETRIC PRESS	VIEW INPUT SIGNAL
---	--------------	-----------------	------------------	---------------	----------------	------------------	-------------------

**CURRENT OUTPUT**

1	ASSIGN CUR-RENT OUT.	CURRENT RANGE	LOW SCALE VALUE	FULL SCALE VALUE	TIME CON-STANT	CURRENT OUT VALUE (DISPLAY)	SIMULATION CURRENT
---	----------------------	---------------	-----------------	------------------	----------------	-----------------------------	--------------------

**RELAYS**

2	ASSIGN CUR-RENT OUT.	CURRENT RANGE	LOW SCALE VALUE	FULL SCALE VALUE	TIME CON-STANT	CURRENT OUT VALUE (DISPLAY)	SIMULATION CURRENT
---	----------------------	---------------	-----------------	------------------	----------------	-----------------------------	--------------------

**RELAYS**

SELECT RELAY 1, 2, 3	RELAY FUNC-TION	RELAY MODE	LIMIT SET-POINT	PULSE VALUE	PULSE WIDTH	HYSTERESIS	RELAY SIMULA-TION	RESET ALARM
----------------------	-----------------	------------	-----------------	-------------	-------------	------------	-------------------	-------------

**COMMUNICATION**

RS232 USAGE	DEVICE ID	BAUD RATE	PARITY	HANDSHAKE	PRINT LIST	PRINT INITIATE	DATALOG ONLY	PRINT INTERVAL	PRINT TIME	DATALOG FORMAT	MODEM CONTROL	DEVICE MASTER	SEND INC TOT ONLY	INC ONLY SCALER	CLEAR DATALOG
-------------	-----------	-----------	--------	-----------	------------	----------------	--------------	----------------	------------	----------------	---------------	---------------	-------------------	-----------------	---------------

**NETWORK CARD**

PROTOCOL	DEVICE ID	BAUD RATE	PARITY
----------	-----------	-----------	--------

**SERVICE & ANALYSIS**

EXAMINE AUDIT TRAIL	ERROR LOG	SOFTWARE VERSION (DISPLAY)	HARDWARE VERSION (DISPLAY)	CALIBRATION (DISPLAY)	RESTORE FACTORY CALIBRATION	NEXT CALIBRA-TION	PRINT MAINT. REPORT	PRINT SYSTEM SETUP	SELF CHECK	SERVICE TEST
---------------------	-----------	----------------------------	----------------------------	-----------------------	-----------------------------	-------------------	---------------------	--------------------	------------	--------------

**SERVICE & ANALYSIS**

MODEM AUTO ANSWER	CALL OUT NO	CALL OUT TIME	CALL ON ERROR	NUMBER OF REDIALS	HANGUP IF INACTIVE	PAGER PIN NUMBER	DESTINATION TYPE	REGISTER PAGER	ERROR MASK
-------------------	-------------	---------------	---------------	-------------------	--------------------	------------------	------------------	----------------	------------

**SERVICE & ANALYSIS**

CLIP PROG-RESS	MAX BLOCK SIZE	INITIALIZE PAGER
----------------	----------------	------------------

These functions will only appear with appropriate settings in other functions.

**WARRANTY**

This product is warranted against defects in materials and workmanship for a period of two (2) years from the date of shipment to Buyer.

The Warranty is limited to repair or replacement of the defective unit at the option of the manufacturer. This warranty is void if the product has been altered, misused, dismantled, or otherwise abused.

ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, ARE EXCLUDED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

**DECODING PART NUMBER**

Example	ES761ST2	L	1	0	P	10
Series:	_____					
<b>ST2</b> = Flow Computer						
Display Type:	_____					
L= LCD						
V= VFD						
Input Type:	_____					
1= 85 to 276 VAC						
3= 24 VDC						
Network Card:	_____					
0= None						
1= RS-485/Modbus						
Mounting:	_____					
P= Panel Mount						
N= NEMA 4 Wall Mount						
W= NEMA 12/13 Wall Mount w/ Clear Cover						
E= Explosion Proof (No Button Access)						
X= Explosion Proof (with Button Access)						
Options:	_____					
3 = Three Relays						
Accessories:						
KEPS-KEP1-32 = 32 Bit OPC/DDE Server for KEP RS-232 Protocol						
KEPS-MBS-32 = 32 Bit Modbus RTU OPC/DDE server						
TWP = Industrial Two Way Pager Transceiver						
MPP200N = Industrial Wall Mount Modem						
P1000 = Hand Held Printer						
CA-285 = RS-232 to RS-485 Converter						