



TCNM-ACM-102R Mounting Instructions



Avoid any contact with the deflection mirror, mirrored rotor, the lenses, or other optical components; otherwise the performance of the reader will be reduced.

Step	Description
------	-------------

- | | |
|---|---|
| 1 | Remove the TCNM-AD/EX 0° scanning window from the scanner by unscrewing the two cover screws. |
|---|---|



TCNM-AD/EX Scanner Without Deflection Mirror

- | | |
|---|---|
| 2 | Clean the mirror surface and reading window with a clean soft cloth and alcohol before closing the scanner. |
|---|---|




Mounting Deflection Mirror

- | | |
|---|---|
| 3 | Mount the TCNM-ACM-102R 102° scanning window so that the opening face is at 90° with respect to the scanner body. Tighten the two cover screws. |
|---|---|



TCNM-AD/EX Scanner With Deflection Mirror

The reading position with respect to the scanner is shown for each mirror.

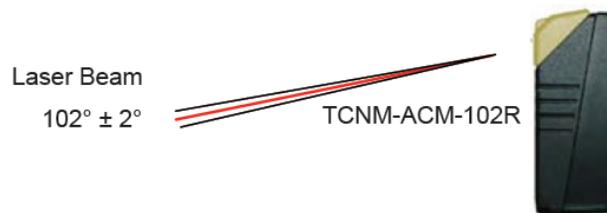

Laser Beam Output Position