# ES762-ST2 FLOW COMPUTER





#### **KESSLER-ELLIS PRODUCTS**

10 Industrial Way East Eatontown, NJ 07724 800-631-2165 • 732-935-1320

Fax: 732-935-9344







### **Contents**

_	<u>Goritorito</u>	_
1.	Introduction	
	1.1 Unit Description:	
	1.2 Opecinications.	2
2.0	) Installation	
	2.1 Mounting Diagram:	
	2.2 Mounting Procedure:	8
3 (	) Applications	q
٥.٠	3.1 Steam Mass	9
	3.2 Steam Heat	.10
	3.3 Steam Net Heat	
	3.4 Steam Delta Heat	
	3.5 Gas Mass	
	3.7 Liquid Mass	
	3.8 Liquid Combustion Heat	
	3.9 Liquid Sensible Heat	.17
	3.10 Liquid Delta Heat	.18
A (	) Wiring	40
4.(	4.1 Terminal Locations:	
	4.2 Terminal Designations:	
	4.3 Typical Wiring:	
	4.4 Typical Wiring - Steam Applications:	.20
	4.5 Typical Wiring - Chilled Water Applications:	20
5	UNIT OPERATION	21
٥.	5.1 Front Panel Operation Concept for Operate Mode	.21
	5.2 General Operation	.22
	5.3 Password Protection	.22
	5.4 Relay Operation	
	5.5 Pulse Output	22
	5.6 Analog Outputs	
	5.8 RS-232 Serial Port Operation	
	5.8.1 PC Communications:	.23
	5.8.2 Operation of RS-232 Serial Port with Printers:	23
	5.8.3 Operation of RS-232 Serial Port with Modems	
	5.9 RS-485 Serial Port Operation	23
	5.10 Pause Computations Prompt	23
6.	PROGRAMMING	
	6.1 Front Panel Operation Concept for Program Mode	.24
	6.2 EZ SETUP	
	6.3 detailed menu description	
	6.5 DISPLAY	
	6.6 SYSTEM UNITS	
	6.7 FLUID DATA	.42
	6.8 FLOW INPUT	
	6.9 OTHER INPUT	
	6.10 PULSE OUTPUT	
	6.11 CURRENT OUTPUT	
	6.13 COMMUNICATION	72
	6.14 NETWORK CARD	
	6.15 Auxiliary totalizers	.80
	6.16 SERVICE & ANALYSIS	.82



### **Contents**

7. Principle Of Operation	88
7.1 General:	88
7.2 Square Law Flowmeter Considerations:	88
7.3 Flow Equations:	88
7.3.1 Flow Input Computation	88
7.3.2 Pressure Computation	89
7.3.3 Temperature Computation	89
7.3.4 Density/Viscosity Computation	
7.3.5 Mass Flow Computation	90
7.3.6 Comb. Heat Flow Computation	90
7.3.7 Heat Flow Computation	
7.3.8 Sensible Heat Flow Computation	
7.3.9 Liquid Delta Heat Computation	
7.3.10 Expansion Factor Computation for Square Law Flowmeters	
7.3.11 Uncompensated Flow Computation	
7.3.12 ILVA Flow Meter Equations	
7.4 Computation of the DP Factor	96
8. RS-232 Serial Port	
8.1 RS-232 Port Description:	
8.2 Instrument Setup by PC's over Serial Port	
8.3 Operation of Serial Communication Port with Printers	
8.4 ES762-ST2 RS-232 Port Pinout	97
0. DC 405 Carial Dart (antional)	00
9. RS-485 Serial Port (optional)	90
9.2 General	
9.3 Operation of Serial Communication Port with PC	
9.4 ES762-ST2 with RS-485 & Modbus RTU Protocol	
9.4 E3702-312 With N3-403 & Modbus N10 F10t0c01	93
10. Flow Computer Setup Software	104
10.1 System Requirements:	104
10.2 Cable and Wiring Requirements:	
10.3 Installation for Windows™	104
10.4 Using the Flow Computer Setup Software	104
10.5 File Tab.	
10.6 Setup Tab	
10.7 View Tab	
10.8 Misc. Tab	
11. Glossary of Terms	107
40 Blooming and The Block of the	440
12. Diagnosis and Troubleshooting	110
12.1 Response of ES762-ST2 on Error or Alarm:	
12.2 Diagnosis Flow Chart and Troubleshooting	
12.3 Error Messages:	111
Appendix A - Fluid Properties Table	44.4
Appendix A - Fluid Floperties Table	114
Appendix B - Setup Menus	115
/ WESTIMIA B SOLUB INCHUS	





#### SAFETY INSTRUCTIONS

#### The following instructions must be observed.

- This instrument was designed and is checked in accordance with regulations in force EN 60950 ("Safety of information technology equipment, including electrical business equipment").
   A hazardous situation may occur if this instrument is not used for its intended purpose or is used incorrectly. Please note operating instructions provided in this manual.
- The instrument must be installed, operated and maintained by personnel who have been properly trained. Personnel must read and understand this manual prior to installation and operation of the instrument.
- The manufacturer assumes no liability for damage caused by incorrect use of the instrument or for modifications or changes made to the instrument.

#### **Technical Improvements**

 The manufacturer reserves the right to modify technical data without prior notice.



#### 1. Introduction

#### 1.1 Unit Description:

The ES-762 Flow Computer primarily satisfies the instrument requirements for a variety of flowmeter types in liquid, steam and heat applications. Multiple flow equations are available in a single instrument with many advanced features. Two auxiliary current and four totalizer inputs are provided for secondary measurements.

The alphanumeric display offers measured parameters in easy to understand format. Manual access to measurements and display scrolling is supported

The versatility of the Flow Computer permits a wide measure of versatility within the instrument package. The various hardware inputs and outputs can be "soft" assigned to meet a variety of common application needs. The user "soft selects" the usage of each input/output while configuring the instrument. Multichannel auxiliary inputs can gather other information from site.

#### Applications Include:

Steam Mass, Steam Heat, Chilled Water Only, Heated Water Only including Low DeltaT cutoff.

The isolated analog output can be chosen to follow the volume flow, heat flow, mass flow, temperature, pressure, or density by means of a menu selection. Most hardware features are assignable by this method.

The user can assign the standard RS-232 Serial Port for external data logging, transaction printing, or for connection to a modem for remote meter reading.

A Service or Test mode is provided to assist the user during start-up system check out by monitoring inputs and exercising outputs. The system setup can also be printed.

#### 1.2 Specifications:

#### **Environmental**

Operating Temperature: 0 to +50 C Storage Temperature: -40 to +85 C Humidity: 0-95% Non-condensing Materials: UL, CSA, VDE approved

#### Display

Type: 2 lines of 20 characters

Types: Backlit LCD and VFD ordering options

Character Size: 0.3" nominal

User selectable label descriptors and units of measure

#### Keypad

Keypad Type: Membrane Keypad Keypad Rating: Sealed to Nema 4

Number of keys: 16

#### **Enclosure**

Enclosure Options: Panel & Wall Mounting Styles

Size: See Dimensions

Depth behind panel: 6.5" including mating connector

Type: DIN

Materials: Plastic, UL94V-0, Flame retardant

Bezel: Textured per matt finish

#### **Power Input**

The factory equipped power option is internally fused. An internal line to line filter capacitor is provided for added transient suppression. MOV protection for surge transient is also supported

Universal AC Power: 85 to 276 Vrms, 50/60 Hz DC Power Option: 24 VDC (16 to 48 VDC)

Power Consumption
AC Power: 6.5 V/A
DC Power: 300 mA max.

#### Flow Meter Types:

Linear: Vortex, Turbine, Positive Displacement, Magnetic, GilFlo, ILVA, Ultrasonic, Mass Flow and others

Square Law: Orifice, Venturi, Nozzle, V-Cone, Wedge, Averaging Pitot, Target, Accelabar and others

Multi-Point Linearization: May be used with all flowmeter types. Including: 16 point, UVC and dynamic compensation.

#### Flow Inputs for Primary Flow Computations:

#### **Analog Input:**

Accuracy: 0.02% FS at 20° C

Ranges

Voltage: 0-10 VDC, 0-5 VDC, 1-5 VDC

Current: 4-20 mA, 0-20 mA,

4-20 mA stacked, 0-20 mA stacked

Basic Measurement Resolution: 16 bit

Update Rate: 4 updates/sec

Automatic Fault detection: Signal over/under-range,

Current Loop Broken

Calibration: Operator assisted learn mode

Extended calibration: Learns Zero and Full Scale of each

range

Fault Protection:

Fast Transient: 500 V Protection (capacitive clamp)

Reverse Polarity: No ill effects

Over-Voltage Limit: 50 VDC Over voltage protection Over-Current Protection: Internally current limited protected to 24VDC

#### **Pulse Inputs:**

Number of Flow Inputs: one Input Impedance: 10 k  $\Omega$  nominal Trigger Level: (menu selectable)

High Level Input

Logic On: 2.5 to 30 VDC Logic Off: 0 to 2 VDC Low Level Input (mag pickup)

Selectable sensitivity: 10 mV and 100 mV Minimum Count Speed: 0.25 Hz (to maintain rate display)

Maximum Count Speed: Selectable: 0 to 50 kHz

Overvoltage Protection: 50 VDC



#### Secondary Totalizer Aux. Inputs:

Input Type: Contact Closure / Pulse

Number of Contact Closure / Pulse Inputs: four (4)

Input Impedance: 4.7 k Ω nominal

Trigger Level:
High Level Input

Logic On: 4 to 30 VDC
Logic Off: 0 to 1 VDC
Maximum Count Speed: 25 Hz
Excitation Voltage: 5 VDC
Overvoltage Protection: 30 VDC

User defined: units, scaling, rollover limit, labels

Uses: Cold Water, Natural Gas, Hot Water, Electric kW-Hr

#### Temperature, Pressure, Density, and Aux 3/4 Inputs

The compensation inputs usage are menu selectable for temperature, temperature 2, pressure, density or not used. In addition, two auxiliary inputs are provided for secondary measurements.

Calibration: Operator assisted learn mode

Operation: Ratiometric

Accuracy: 0.02% FS at 20° C (current input) Basic Measurement Resolution: 16 bit Update Rate: 2 updates/sec minimum

Automatic Fault detection:

Signal Over-range/under-range

Current Loop Broken

RTD short RTD open

Reverse Polarity: No ill effects

**Over-Current Limit** 

(current input) Internally limited to protect input to 24 VDC)

Available Input Ranges (menu selectable)

Current: 4-20 mA, 0-20 mA (4 inputs) Resistance: 100 Ohms DIN RTD (2 inputs) 100 Ohm DIN RTD (DIN 43-760, BS 1904):

Three Wire Lead Compensation

Internal RTD linearization learns ice point resistance

1 mA Excitation current with reverse polarity

protection

Temperature Resolution: 0.01 C

Accuracy: 0.5° C

#### Stored Information (ROM)

Steam Tables (saturated & superheated),

Fluid Properties: Water, or Generic with user entries of fluid

properties

### User Entered Stored Information (EEPROM / Nonvolatile RAM)

Transmitter Ranges, Signal Types

Fluid Properties

(reference density, expansion factor, specific heat, viscosity, isentropic exponent, combustion heating value)

Units Selections (English/Metric)

#### **Excitation Voltage**

24 VDC @ 140 mA (fault protected)

#### **Relay Outputs**

The relay outputs usage is menu assignable to (Individually for each relay) Hi/Lo Rate Alarm, Hi/Lo Temperature Alarm, Hi/Lo Pressure Alarm, Pulse Output (pulse options), Aux.3, Aux.4, Wet Steam or General purpose warning (security), Aux Totals 1, 2, 3, 4.

Number of relays: 2

Contact Style: Form C contacts Contact Ratings: 240 V, 5 amp

#### **Analog Outputs**

The analog outputs are menu assignable to correspond to the Uncompensated Volume Rate, Aux.3, Aux.4, Mass Rate, Heat Rate, Temperature, Density, or Pressure.

Number of Outputs: 2

Type: Isolated Current Sourcing (shared common) Available Ranges: 0-20 mA, 4-20 mA (menu selectable)

Resolution: 16 bit

Accuracy: 0.05% FS at 20 Degrees C

Update Rate: 5 updates/sec

Temperature Drift: Less than 200 ppm/C

Maximum Load: 1000 ohms

Compliance Effect: Less than .05% Span

60 Hz rejection: 40 dB minimum

EMI: No effect at 3 V/M

Calibration: Operator assisted Learn Mode

Averaging: User entry of DSP Averaging constant to cause

a smooth control action

**Listing:** CE Compliant, UL, C-UL Pending

#### **Serial Communication**

The serial port can be used for printing, datalogging, modem connection and communication with a computer. Power is provided for KEP's MPP2400N (modem) communication accessory.

RS-232:

Device ID: 01-99

Baud Rates: 300, 1200, 2400, 9600

Parity: None, Odd, Even

Handshaking: None, Software, Hardware

Print Setup: Configurable print list and formatting, Compatible with external dataloggers.

RS-485:

Device ID: 01-247

Baud Rates: 300, 1200, 2400, 4800, 9600, 19200

Parity: None, Odd, Even

Protocol: Modbus RTU (Half Duplex)

#### **Data Logging**

The data logger captures print list information to internal storage for approximately 5000 transactions. This information can be used for later uploading or printing. Storage format is selectable for Comma-Carriage Return or Printer formats.



#### **Isolated Pulse output**

The isolated pulse output is menu assignable to Uncompensated Volume Total, Heat Total or Mass Total, Aux Totals 1, 2, 3, 4.

Pulse Output Form (menu selectable): Open Collector NPN or

24 VDC voltage pulse
Nominal On Voltage: 24 VDC
Maximum Sink Current: 25 mA
Maximum Source Current: 25 mA
Maximum Off Voltage: 30 VDC
Saturation Voltage: 0.4 VDC
Pulse Duration: User selectable

Pulse output buffer: 8 bit

**Fault Protection** 

Reverse polarity: Shunt Diodes

Over-current Protected Over-voltage Protected

#### **Real Time Clock**

The Flow Computer is equipped with a battery backed non-volatile real time clock with display of time and date.

Format:

24 hour format for time Day, Month, Year for date

#### Measurement

The Flow Computer can be thought of as making a series of measurements of flow, temperature/density and pressure sensors and then performing calculations to arrive at a result(s) which is then updated periodically on the display. The analog outputs, the pulse output, and the alarm relays are also updated. The cycle then repeats itself.

#### Step 1: Update the measurements of input signals-

Raw Input Measurements are made at each input using equations based on input signal type selected. The system notes the "out of range" input signal as an alarm condition.

#### Step 2: Compute the Flowing Fluid Parameters-

The temperature, pressure, viscosity and density equations are computed as needed based on the flow equation and input usage selected by the user.

#### Step 3: Compute the Volumetric Flow-

Volumetric flow is the term given to the flow in volume units. The value is computed based on the flowmeter input type selected and augmented by any performance enhancing linearization that has been specified by the user.

### Step 4: Compute the Corrected Volume Flow at Reference Conditions-

In the case of a corrected liquid or gas volume flow calculation, the corrected volume flow is computed as required by the selected compensation equation.

#### Step 5: Compute the Mass Flow-

All required information is now available to compute the mass flow rate as volume flow times density. A heat flow computation is also made if required.

#### Step 6: Check Flow Alarms-

The flow alarm functions have been assigned to one of the above flow rates during the setup of the instrument. A comparison is now made by comparing the current flow rates against the specified hi and low limits.

#### Step 7: Compute the Analog Output-

This designated flow rate value is now used to compute the analog output.

#### Step 8: Compute the Flow Totals by Summation-

A flow total increment is computed for each flow rate. This increment is computed by multiplying the respective flow rate by a time base scaler and then summing. The totalizer format also includes provisions for total rollover.

#### Step 9: Pulse Output Service-

The pulse output is next updated by scaling the total increment which has just been determined by the pulse output scaler and summing it to any residual pulse output amount.

#### Step 10: Update Display and Printer Output-

The instrument finally runs a task to update the various table entries associated with the front panel display and serial outputs.

#### **Instrument Setup**

The setup is password protected by means of a numeric lock out code established by the user. The help line and units of measure prompts assure easy entry of parameters.

An EZ Setup function is supported to rapidly configure the instrument for first time use. A software program is also available which runs on a PC using a RS-232 Serial for connection to the Flow Computer. Illustrative examples may be down loaded in this manner.

The standard setup menu has numerous subgrouping of parameters needed for flow calculations. There is a well conceived hierarchy to the setup parameter list. Selections made at the beginning of the setup automatically affect offerings further down in the lists, minimizing the number of questions asked of the user.

In the setup menu, the flow computer activates the correct setup variables based on the instrument configuration, the flow equation, and the hardware selections made for the compensation transmitter type, the flow transmitter type, and meter enhancements (linearization) options selected. All required setup parameters are enabled. All setup parameters not required are suppressed.

Also note that in the menu are parameter selections which have preassigned industry standard values. The unit will assume these values unless they are modified by the user.

Most of the process input variables have available a "default" or emergency value which must be entered. These are the values that the unit assumes when a malfunction is determined to have occurred on the corresponding input.



It is possible to enter in a nominal constant value for temperature or density, or pressure inputs by placing the desired nominal value into the default values and selecting "manual". This is also a convenience when performing bench top tests without simulators.

The system also provides a minimum implementation of an "audit trail" which tracks significant setup changes to the unit. This feature is increasingly being found of benefit to users or simply required by Weights and Measurement Officials in systems used in commerce, trade, or "custody transfer" applications.

#### Simulation and Self Checking:

This mode provides a number of specialized utilities required for factory calibration, instrument checkout on start-up, and periodic calibration documentation.

A service password is required to gain access to this specialized mode of operation. Normally quality, calibration, and maintenance personnel will find this mode of operation very useful.

Many of these tests may be used during start-up of a new system. Output signals may be exercised to verify the electrical interconnects before the entire system is put on line.

The following action items may be performed in the Diagnostic Mode:

Print Calibration/Maintenance Report
View Signal Input (Voltage, Current, Resistance, Frequency)
Examine Audit Trail
Perform a Self Test
Perform a Service Test
View Error History
Perform Pulse Output Checkout / Simulation
Perform Relay Output Checkout / Simulation
Perform Analog Output Checkout / Simulation

Calibrate Analog Inputs using the Learn Feature Calibrate Analog Output using the Learn Feature

Schedule Next Maintenance Date

Note that a calibration of the analog input/output will advance the audit trail counters since it effects the accuracy of the system.

#### **Operation of Steam Trap Monitor**

In applications on Saturated Steam, the otherwise unused Compensation Input may be connected to a steam trap monitor that offers the following compatible output signal levels:

4mA = trap cold

12 mA = trap warm and open (blowing)

20 mA = trap warm and closed

In normal operation a steam trap is warm and periodically opens and closes in response to the accumulation of condensate. A cold trap is indication that it is not purging the condensate, a trap that is constantly blowing is an indication that it is stuck open. To avoid a false alarm, the Supertrol-2 permits the user to program a

delay, or time period, which should be considered normal for the trap to be either cold, or open. An alarm will only be activated if the trap is detected as continuously being in the abnormal states for a time period greater than this TRAP ERROR DELAY time.

The user selects to use the Compensation Input for Trap Monitoring by selecting "4-20mA TRAP STATUS as the INPUT SIGNAL for OTHER INPUT1.

The user can program the ERROR DELAY time in HH:MM format into both the TRAP ERROR DELAY (cold trap error) menu and the TRAP BLOWING DELAY (trap stuck open) menu.

The ST2 will warn the operator of a TRAP ERROR when an abnormal condition is detected. The error can be acknowledged by pressing the ENTER key. However, the problem may reassert itself if there is a continued problem with the steam trap.

In addition, the event is noted in the ERROR LOG.

It is also possible for the user to program a trap malfunction as one of the conditions worthy of a CALL OUT of a problem by selecting this error in the ERROR MASK.

The Data-Logging option of the ST2 can also be used to log the performance of the trap by storing the % of time the trap has been cold, and/or blowing open during the datalog interval.

#### **Datalogging Option**

The Datalogging Option for the ST2 permits the user to automatically store sets of data items as a record on a periodic basis. A datalog record may be stored as the result of either a PRINT key depression, or an INTERVAL, or a TIME OF DAY request for a datalog.

The user defines the list of items to be included in each datalog by selecting these in the PRINT LIST menu located within the COMMUNICATIONS SUBMENU.

The user selects what will trigger a datalog record being stored in the PRINT INITIATE menu. The choices are PRINT KEY, INTERVAL, and TIME OF DAY.

The user can select the datalog store interval in a HH:MM format in the PRINT INTERVAL menu.

The user can also select the store time of day in a 24 hr HH:MM format in the PRINT TIME menu.

The user can also define whether he just wants the data stored into the datalogger, or if he wants the data both stored in the datalogger and sent out over the RS232 port in the DATALOG ONLY menu.

The user can define the format he wishes the data to be output in using the DATALOG FORMAT menu. Choices are PRINTER and DATABASE. PRINTER format will output the data records in a form suitable to dump to a printer. DATABASE format will output the values in a CSV, or Comma Separated Variable with Carriage return delimiting of each record.



A number of serial commands are also included to access and manipulate information stored with in the datalogger. Among these RS232 command capabilities are the following actions:

Clear Data Logger

Send all Data in Datalogger

Send Only New Data since Datalogger was last Read

Send Data for the date included in the request

Send the column heading text for the CSV data fields

Send the column units of measure text for the CSV data fields

Store one new record into datalogger now

Read Number of New Records in the datalogger

Read number of records currently in the datalogger

Read the maximum number of records capacity of the datalogger

Move Pointer Back N records

**Dump Record at Pointer** 

Dump records newer than pointer

Dump data from N records back

The datalogger option is used in conjunction with the RS-232 port in remote metering applications.

The technical details associated with the serial commands are listed in Universal Serial Protocol Manual available upon request.

#### **RS-232 Serial Port**

The Flow Computer has a general purpose RS-232 Port which may be used for any one of the following purposes:

Transaction Printing
Data Logging
Remote Metering by Modem
Computer Communication Link
Configuration by Computer
Print System Setup
Print Calibration/Malfunction History

#### Instrument Setup by PC's over Serial Port

A Diskette program is provided with the Flow Computer that enables the user to rapidly configure the Flow Computer using an Personnel Computer. Included on the diskette are common instrument applications which may be used as a starting point for your application. This permits the user to have an excellent starting point and helps speed the user through the instrument setup.

#### **Operation of Serial Communication Port with Printers**

The Flow Computer's RS-232 channel supports a number of operating modes. One of these modes is intended to support operation with a printer in metering applications requiring transaction printing, data logging and/or printing of calibration and maintenance reports.

For transaction printing, the user defines the items to be included in the printed document. The user can also select what initiates the transaction print generated as part of the setup of the instrument. The transaction document may be initiated via a front panel key depression.

In data logging, the user defines the items to be included in each data log as a print list. The user can also select when

or how often he wishes a data log to be made. This is done during the setup of the instrument as either a time of day or as a time interval between logging.

The system setup and maintenance report list all the instrument setup parameters and usage for the current instrument configuration. In addition, the Audit trail information is presented as well as a status report listing any observed malfunctions which have not been corrected.

The user initiates the printing of this report at a designated point in the menu by pressing the print key on the front panel.

#### **Operating Serial Communication Port with Modems**

The ST2 offers a number of capabilities that facilitate its use with modems. The ST2's RS232 port can be connected to a modem in order to implement a remote metering system that uses either the phone companies standard phone lines or cellular telephone system. In addition to remote meter readings, the serial commands may also be used to examine and/or make setup changes to the unit, and to check for proper operation or investigate problems. Several hundred commands are supported. A compatible industrial modem accessory and interconnecting cabling is offered in the MPP2400N specifically designed for use with the ST2.

The ST2 and Modem can be used together to create systems with one or more of the following capabilities:

- Poll the Supertrol-2 unit for information from a remote PC
- Call Out from the Supertrol-2 unit to a remote PC on a scheduled reading time and/or crisis basis
- Some combination of the above two descriptions where the unit is polled by one PC and calls into to a different PC if a problem is detected.

In fact, up to five ST-2 units can share the same modem. Each ST2 must have a unique DEVICE ID. This multidropping of flow computers on a single modem is popular when there are several flow computers mounted near each other.

In most applications using modem communications, the ST2's RS232 USAGE is first set equal to MODEM. Each Supertrol-2 on a shared modem cable is given a unique serial device address or DEVICE ID. The BAUD RATE is commonly set to 2400, the PARITY set to NONE, and the HANSHAKING set to NONE to complete the basic setup. The remote PC's communication settings are chosen to match these.

The level of complexity of the Supetrol-2 to Modem connection can range from simple to more complex.

In a simple system a remote PC will call into the telephone number of the modem. The modem will answer the call, and establish a connection between the Supertrol-2 and the remote PC. An exchange of information can now occur. The Supertrol-2 will act as a slave and respond to commands and requests for information from the remote MASTER PC. The MASTER PC will end the exchange by handing up.



However, it is more common that the Supertrol-2 will be used to control the modem. In these applications the following communication menu settings would be used:

RS232 USAGE = MODEM

DEVICE ID, BAUD RATE, PARITY, and HANDSHAKING are set

MODEM CONTROL = YES

DEVICE MASTER = YES (When multidropping several ST2's, only one unit will be the DEVICE MASTER)

MODEM AUTO ANSWER = YES (This instructs the unit to answer incoming calls)

HANG UP IF INACTIVE = YES (This instructs the unit to hang up the line if no activities occur within several minutes). Set to NO when sharing a modem on a multidrop connection.

A more complex form of a remote metering system can be implemented where the Supertrol-2 will initiate a call to contact the remote PC at a scheduled time and/or in the event of a problem that has been detected. In these applications the Supertrol-2 has additional setup capabilities including:

The ST2 must have a unique identifier assigned to it (using the TAG NUMBER)

Call Out Telephone number must be entered in the CALL OUT NUMBER

The scheduled call out time for the daily reading must be entered in CALL OUT TIME

A decision must be made whether the unit will be used to call on error(s) in CALL ON ERROR

The particular error conditions to call out on must be defined in the ERROR MASK

The NUMBER OF REDIALS to be attempted if line is busy must be entered in that cell

HANG UP IF INACTIVE= YES will disconnect the call if remote computer does not respond.

Consult the Universal Serial Commands User Manual for details on the individual commands supported by the Supertrol-2. Contact the KEP Flow Applications Group for a discussion on the remote metering system capabilities you are considering.

NOTE: Some modems can be configured in advance to answer incoming calls, terminate phone connections if communications is lost. In such applications there may be no need for the Supertrol-2 to be functioning to "control" the modem. Setting the RS233 USAGE = COMPUTER will likely work.


#### RS-485 Serial Port (optional)

The RS-485 serial port can be used for accessing flow rate, total, pressure, temperature, density and alarm status information. The port can also be used for changing presets and acknowledging alarms.



#### 2.0 Installation

#### 2.1 Mounting Diagram:

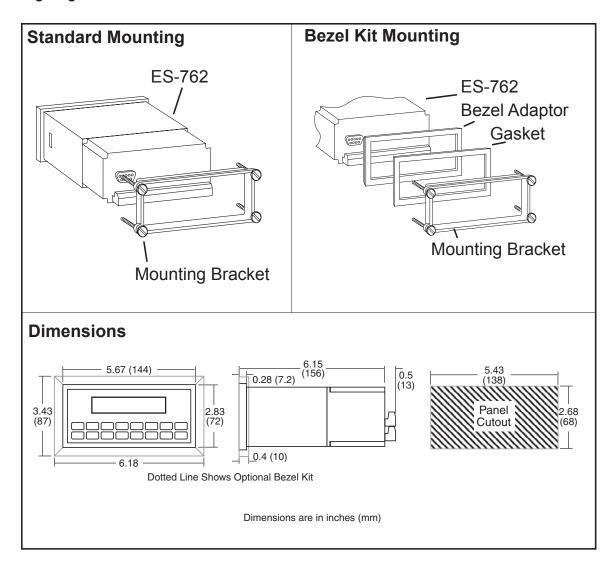

#### 2.2 Mounting Procedure:

#### **General Mounting Hints:**

The ES-762 Flow Computer should be located in an area with a clean, dry atmosphere which is relatively free of shock and vibration. The unit is installed in a 5.43" (138mm) wide by 2.68" (68mm) high panel cutout. (see Mounting Dimensions) To mount the Flow Computer, proceed as follows:

- a. Prepare the panel opening.
- b. Slide the unit through the panel cutout until the it touches the panel.
- c. Install the screws (provided) in the mounting bracket and slip the bracket over the rear of the case until it snaps in place.
- d. Tighten the screws firmly to attach the bezel to the panel. 3 in. lb. of torque must be applied and the bezel must be parallel to the panel.

**NOTE:** To seal to NEMA4X / IP65 specifications, supplied bezel kit must be used and panel cannot flex more than 0.010".

When the optional bezel kit is used, the bezel adaptor must be sealed to the case using an RTV type sealer to maintain NEMA4X / IP65 rating.



#### 3.0 Applications

#### STEAM MASS

#### 3.1 Steam Mass

#### Measurements:

A flowmeter measures the actual volume flow in a steam line. A temperature and/or pressure sensor is installed to measure temperature and/or pressure. Measurements are also made on Auxilary analog inputs 3 and 4, as well as totalization on Auxilary Pulse Inputs 1,2,3,4.

#### Calculations:

- · Density and mass flow are calculated using the steam tables stored in the flow computer.
- With square law device measurement the actual volume is calculated from the differential pressure, taking into account temperature and pressure compensation.
- Saturated steam requires either a pressure or temperature measurement with the other variable calculated using the saturated steam curve.
- · Totalization with scaling and rollover limits on Auxiliary Inputs 1,2,3 and 4
- · Optional steam trap monitoring using Compensation Input 1.
- If Aux 3 and Aux 4 are both assigned to the same scale (such as PRESSURE psig) the a calculation of Delta P (Aux3-Aux4) is also made and is available for viewing and other informative and assignable uses.

#### Input Variables:

Superheated Steam: Flow, temperature and pressure Saturated Steam: Flow, temperature or pressure

#### **Output Results:**

Display Results

Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density, AUX 3, AUX 4, Delta P (AUX 3 - AUX 4), Auxiliary Totals-1,2,3,4, peak demand, demand last hour, time/date stamp

Analog Output

Mass or Volume Flow Rate, Temperature, Pressure Density, Peak Demand, Demand Last Hour, AUX 3, AUX 4, Delta P (AUX 3 - AUX 4)

Pulse Output

Mass or Volume Total, Auxiliary Totals-1,2,3,4


Relay Outputs


Mass or Volume Flow Rate , Total, Pressure, Temperature, Alarms, Peak Demand, Demand Last Hour, AUX 3, AUX 4, Delta P (AUX 3 - AUX 4), Auxiliary Totals-1,2,3,4

#### **Applications:**

Monitoring mass flow and total of steam. Flow alarms are provided via relays and datalogging is available via analog (4-20mA) and serial outputs.

## Steam Mass Illustration

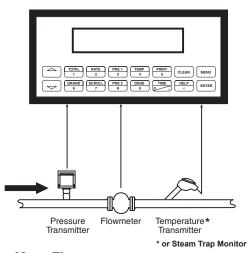

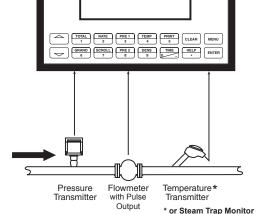

#### **Calculations**

#### **Mass Flow**

Mass Flow = volume flow • density (T, p)



#### STEAM HEAT

#### 3.2 Steam Heat

#### Measurements:

A flowmeter measures the actual volume flow in a steam line. A temperature and/or pressure sensor is installed to measure temperature and/or pressure. Measurements are also made on Auxiliary analog inputs 3 and 4, as well as totalization on Auxiliary Pulse Inputs 1,2,3,4.

#### Calculations:

- Density, mass flow and heat flow are calculated using the steam tables stored in the flow computer. The heat is defined as the enthalpy of steam under actual conditions with reference to the enthalpy of water at T=0°C.
- With square law device measurement the actual volume is calculated from the differential pressure, taking into account temperature and pressure compensation.
- Saturated steam requires either a pressure or temperature measurement with the other variable calculated using the saturated steam curve.
- · Optional steam trap monitoring using compensation input.
- If Aux 3 and Aux 4 are both assigned to the same scale (such as PRESSURE psig) the a calculation of Delta P (Aux3-Aux4) is also made and is available for viewing and other informative and assignable uses.

#### Input Variables:

Superheated Steam: Flow, temperature and pressure Saturated Steam: Flow, temperature or pressure

#### **Output Results:**

· Display Results

Heat, Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density, AUX 3, AUX 4, Delta P (AUX 3 - AUX 4), Auxiliary Totals-1,2,3,4, peak demand, demand last hour, time/date stamp

Analog Output

Heat, Mass or Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour, AUX 3, AUX 4, Delta P (AUX 3 - AUX 4)

Pulse Output

Heat, Mass or Volume Total, Auxiliary Totals-1,2,3,4


Relay Outputs

Heat, Mass or Volume Flow Rate , Total, Pressure, Temperature Alarms, Peak Demand, Demand Last Hour, AUX 3, AUX 4, Delta P (AUX 3 - AUX 4), Auxiliary Totals-1,2,3,4

#### **Applications:**

Monitoring heat flow and total heat of steam. Flow alarms are provided via relays and datalogging is available via analog (4-20mA) and serial outputs.

## Steam Heat Illustration

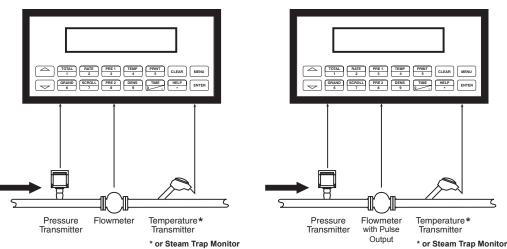

#### **Calculations**

#### **Heat Flow**

Heat Flow = Volume flow • density (T, p) • Sp. Enthalpy of steam (T, p)

**NOTE:** when using Mass Flowmeter: Heat Flow = Heat flow • Mass flow • Sp. Enthalpy of steam (T, p)



#### STEAM NET HEAT

#### 3.3 Steam Net Heat

#### Measurements:

A flowmeter measures the actual volume flow in a steam line. A temperature and a pressure sensor are installed to measure temperature and/or pressure. All measurement are made on the steam side of a heat exchanger. Measurements are also made on Auxiliary analog inputs 3 and 4, as well as totalization on Auxiliary Pulse Inputs 1,2,3,4.

#### Calculations:

- Density, mass flow and net heat flow are calculated using the steam tables stored in the flow
  computer. The net heat is defined as the difference between the heat of the steam and the heat of
  the condensate. For simplification it is assumed that the condensate (water) has a temperature
  which corresponds to the temperature of saturated steam at the pressure measured upstream
  of the heat exchanger.
- With square law device measurement the actual volume is calculated from the differential pressure, taking into account temperature and pressure compensation.
- Saturated steam requires either a pressure or temperature measurement with the other variable calculated using the saturated steam curve.
- Optional steam trap monitoring using compensation input.
- If Aux 3 and Aux 4 are both assigned to the same scale (such as PRESSURE psig) the a
  calculation of Delta P (Aux3-Aux4) is also made and is available for viewing and other informative
  and assignable uses.

#### Input Variables:

Superheated Steam: Flow, temperature and pressure Saturated Steam: Flow, temperature or pressure

#### **Output Results:**

Display Results

Heat, Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density, AUX 3, AUX 4, Delta P (AUX 3 - AUX 4), Auxiliary Totals-1,2,3,4, peak demand, demand last hour, time/date stamp

Analog Output

Heat, Mass or Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour, AUX 3, AUX 4, Delta P (AUX 3 - AUX 4)

Pulse Output

Heat, Mass or Volume Total, Auxiliary Totals-1,2,3,4


Relay Outputs

Heat, Mass or Volume Flow Rate, Total, Pressure, Temperature Alarms, Peak Demand, Demand Last Hour, AUX 3, AUX 4, Delta P (AUX 3 - AUX 4), Auxiliary Totals-1,2,3,4

#### Applications:

Monitoring the thermal energy which can be extracted by a heat exchanger taking into account the thermal energy remaining in the returned condensate. For simplification it is assumed that the condensate (water) has a temperature which corresponds to the temperature of saturated steam at the pressure measured upstream of the heat exchanger.

## Steam Net Heat Illustration

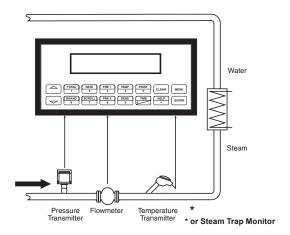

#### **Calculations**

#### **Net Heat Flow**

Net Heat Flow = Volume flow • density  $(T, p) \cdot [E_p(T, p) - E_w(T_{S(p)})]$ 

**NOTE:** when using Mass Flowmeter:

Heat Flow = Net Heat flow • Mass flow •  $[E_p(T, p) - E_w(T_{S(p)})]$ 

= Specific enthalpy of steam = Specific enthalpy of water

T<sub>s(a)</sub> = Calculated condensation temperature

(= saturated steam temperature for supply pressure)



#### STEAM DELTA HEAT

#### 3.4 Steam Delta Heat

#### Measurements:

Measures the actual flow and pressure of saturated steam (or pressure and temperature if superheated steam) in the supply piping as well as the temperature of the condensate in the condensate piping of the heat exchanger. Measurements are also made on Auxiliary analog inputs 3 and 4, as well as totalization on Auxiliary Pulse Inputs 1,2,3,4.

#### Calculations:

- Calculates density, mass flow as well as the delta heat between the saturated steam (supply) and condensation (return) using physical characteristic tables of steam and water stored in the flow computer.
- With square law device measurement the actual volume is calculated from the differential pressure, taking into account temperature and pressure compensation.
- The saturated steam temperature in the supply line is calculated from the pressure measured there if saturated steam is selected.
- If Aux 3 and Aux 4 are both assigned to the same scale (such as PRESSURE psig) the a
  calculation of Delta P (Aux3-Aux4) is also made and is available for viewing and other informative
  and assignable uses.

#### Input Variables:

Supply: Flow and pressure (saturated steam) or Flow, Pressure, Temperature (super heated

steam)

Return: Temperature (condensate)

#### **Output Results:**

Display Results

Heat, Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density, AUX 3, AUX 4, Auxiliary Totals-1,2,3,4, peak demand, demand last hour, time/date stamp

Analog Output

Heat, Mass or Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour, AUX 3, AUX 4, Delta P (AUX 3 - AUX 4)

Pulse Output

Heat, Mass or Volume Total, Auxiliary Totals-1,2,3,4


Relay Outputs

Heat, Mass or Volume Flow Rate , Total, Pressure, Temperature Alarms, Peak Demand, Demand Last Hour, AUX 3, AUX 4, Delta P (AUX 3 - AUX 4), Auxiliary Totals-1,2,3,4

#### Applications:

Calculate the steam mass flow and the heat extracted by a heat exchanger taking into account the thermal energy remaining in the condensate.

#### Steam Delta Heat Illustration

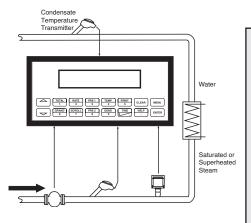

#### NOTE:

#### For Saturated Steam Case:

Steam Pressure is measured with Pressure Input on terminal 11

Condensate Temperature is measured with Temperature Input on Terminal 7

#### For Superheated Steam Case:

Steam Pressure is measured with Pressure Input on terminal 11

Steam Temperature is measured with Temperature Input on Terminal 7

Condensate Temperature is measured with Auxiliary Input 4 on Terminal 8

#### **Calculations**

#### Delta Heat Flow

Net Heat Flow = Volume flow • density (p) •  $[E_D(p) - E_W(T)]$ 

**NOTE:** when using Mass Flowmeter: Net Heat Flow = Mass flow •  $[E_p(p,t)-E_w(T)]$ 

E<sub>D</sub> = Specific enthalpy of steam E<sub>D</sub> = Specific enthalpy of water

Note: Assumes a closed system.



#### **GAS MASS**

#### 3.5 Gas Mass

#### Measurements:

A flowmeter measures the actual flow in a gas line. Temperature and pressure sensors are installed to measure temperature and pressure. Measurements are also made on Auxiliary analog inputs 3 and 4, as well as totalization on Auxiliary Pulse Inputs 1,2,3,4.

#### Calculations:

- Density and mass flow are calculated using gas characteristics stored in the flow computer.
- With square law device measurement the actual volume is calculated from the differential pressure, taking into account temperature and pressure compensation.
- If Aux 3 and Aux 4 are both assigned to the same scale (such as PRESSURE psig) the a
  calculation of Delta P (Aux3-Aux4) is also made and is available for viewing and other informative
  and assignable uses.

#### **Output Results:**

· Display Results

Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density, AUX 3, AUX 4, Auxiliary Totals-1,2,3,4, peak demand, demand last hour, time/date stamp

Analog Output

Mass or Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour, AUX 3, AUX 4

Pulse Output

Mass or Volume Total, Auxiliary Totals-1,2,3,4


Relay Outputs


Mass or Volume Flow Rate, Total, Pressure, Temperature, Density Alarms, Peak Demand, Demand Last Hour, AUX 3, AUX 4, Auxiliary Totals-1,2,3,4

#### **Applications:**

Monitoring mass flow and total of gas. Flow alarms are provided via relays and datalogging is available via analog (4-20mA) and serial outputs.

## Gas Mass Illustration

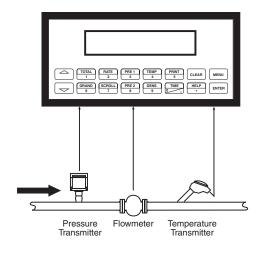

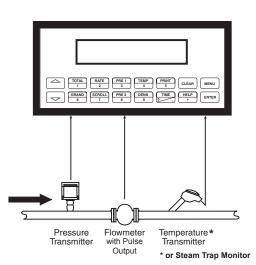

#### **Calculations**

#### **Mass Flow**

Mass Flow = Actual Volume Flow • 
$$\rho_{ref}$$
 •  $\frac{P}{P_{ref}}$  •  $\frac{T_{ref}}{T}$  •  $\frac{Z_{ref}}{Z}$ 

**NOTE:** when using Mass Flowmeter:

Mass Flow = M

p<sub>ref</sub> = Reference density
T<sub>ref</sub> = Reference temperature
P<sub>ref</sub> = Reference pressure
Z<sub>ref</sub> = Reference Z-factor

M = Mass flow



## GAS COMBUSTION HEAT

#### 3.6 Gas Combustion Heat

#### Measurements:

A flowmeter measures the actual volume flow in a gas line. Temperature and pressure sensors are installed to measure temperature and pressure. Measurements are also made on Auxilary analog inputs 3 and 4, as well as totalization on Auxilary Pulse Inputs 1,2,3,4.

#### **Calculations:**

- Density, mass flow and combustion heat are calculated using gas characteristics stored in the flow computer.
- With square law device measurement the actual volume is calculated from the differential pressure, taking into account temperature and pressure compensation.
- If Aux 3 and Aux 4 are both assigned to the same scale (such as PRESSURE psig) the a
  calculation of Delta P (Aux3-Aux4) is also made and is available for viewing and other informative
  and assignable uses.

#### **Output Results:**

Display Results

Heat, Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density, AUX 3, AUX 4, Auxiliary Totals-1,2,3,4, peak demand, demand last hour, time/date stamp

Analog Output

Heat, Mass or Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour, AUX 3, AUX 4

Pulse Output

Heat, Mass or Volume Total, Auxiliary Totals-1,2,3,4


Relay Outputs

Heat, Mass or Volume Flow Rate, Total, Pressure, Temperature Alarms, Peak Demand, Demand Last Hour, AUX 3, AUX 4, Auxiliary Totals-1,2,3,4

#### Applications:

Calculate the energy released by combustion of gaseous fuels.

#### Gas Combustion Heat

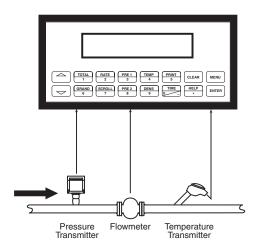

#### **Calculations**

#### **Combustion Heat Flow**

Combustion Energy = 
$$C \cdot \rho_{ref} \cdot Q \cdot \frac{P}{P_{ref}} \cdot \frac{T_{ref}}{T} \cdot \frac{Z_{ref}}{Z}$$

**NOTE:** when using Mass Flowmeter:

Combustion Energy = C • M

C = Specific combustion heat

 $\rho_{ref}$  = Reference density

Q = Volume flow M = Mass flow



#### **Liquid Mass**

#### 3.7 Liquid Mass

#### Measurements:

Actual volume flow is measured by the flow element (DP transmitter, Flowmeter). Temperature is measured by the temperature transmitter. A pressure transmitter can be used to monitor pressure. Pressure measurement does not affect the calculation. A density transmitter may be used in place of a temperature transmitter for direct density measurement. Measurements are also made on Auxiliary analog inputs 3 and 4, as well as totalization on Auxiliary Pulse Inputs 1,2,3,4.

#### Calculations:

- The density and mass flow are calculated using the reference density and the thermal expansion coefficient of the liquid (see "FLUID DATA" submenu)
- If Aux 3 and Aux 4 are both assigned to the same scale (such as PRESSURE psig) the a calculation of Delta P (Aux3-Aux4) is also made and is available for viewing and other informative and assignable uses.

#### **Output Results:**

Display Results

Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density, AUX 3, AUX 4, Auxiliary Totals-1,2,3,4, peak demand, demand last hour, time/date stamp

Analog Output

Mass or Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour, AUX 3, AUX 4

Pulse Output

Mass or Volume Total, Auxiliary Totals-1,2,3,4


· Relay Outputs

Mass or Volume Flow Rate, Total, Temperature, Pressure, Density Alarms, Peak Demand, Demand Last Hour, AUX 3, AUX 4, Auxiliary Totals-1,2,3,4

#### **Applications**

Monitoring mass flow and total of any liquid. Flow alarms are provided via relays and datalogging is available via analog (4-20mA) and serial outputs.

## Liquid Mass Illustration

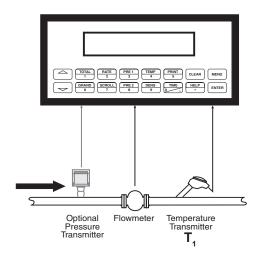

#### NOTE:

A density transmitter may be used for direct density measurement.

#### **Calculations**

#### **Volume Flow**

As calculated in section 3.8

#### Mass Flow

Mass Flow = volume flow •  $(1-a • (T_1-T_{ref}))^2 • ref. density$ 

 $\alpha$  = Thermal expansion coefficient • 10<sup>-6</sup>



#### LIQUID COMBUSTION 3.8 Liquid Combustion Heat **HEAT**

#### Measurements:

Actual volume flow is measured by the flow element (DP transmitter, Flowmeter). Temperature is measured by the temperature transmitter. A pressure transmitter can be used to monitor pressure. Pressure measurement does not affect the calculation. Measurements are also made on Auxiliary analog inputs 3 and 4, as well as totalization on Auxiliary Pulse Inputs 1,2,3,4.

#### Calculations:

- The density, mass flow and combustion heat are calculated using the fluid characteristics stored in the flow computer. (see "FLUID DATA" submenu)

  If Aux 3 and Aux 4 are both assigned to the same scale (such as PRESSURE psig) the a
- calculation of Delta P (Aux3-Aux4) is also made and is available for viewing and other informative and assignable uses.

#### **Output Results:**

· Display Results

Combustion Heat, Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density, AUX 3, AUX 4, Auxiliary Totals-1,2,3,4, peak demand, demand last hour, time/date stamp

**Analog Output** 

Combustion Heat, Mass or Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour, AUX 3, AUX 4

Pulse Output

Combustion Heat, Mass or Volume Total, Auxiliary Totals-1,2,3,4


Relay Outputs

Combustion Heat, Mass or Volume Flow Rate, Total, Temperature, Pressure Alarms, Peak Demand, Demand Last Hour, AUX 3, AUX 4, Auxiliary Totals-1,2,3,4

#### Applications:

Calculate the energy released by combustion of liquid fuels

#### **Liquid Combustion Heat Illustration**

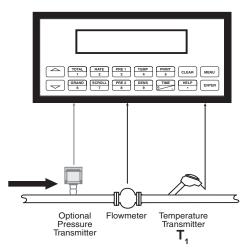

#### Calculations

#### **Volume Flow**

As calculated in section 3.8

#### Heat Flow

Heat Flow = C • volume flow •  $(1-\alpha • (T_4-T_{ref}))^2$  • ref. density

**NOTE:** when using Mass Flowmeter:

Heat Flow = C • M

Thermal expansion coefficient • 10<sup>-6</sup>

С Specific combustion heat

M Mass flow



## LIQUID SENSIBLE HEAT

#### 3.9 Liquid Sensible Heat

#### Measurements:

Actual volume flow is measured by the flow element (DP transmitter, Flowmeter). Temperature is measured by the temperature transmitter. A pressure transmitter can be used to monitor pressure. Pressure measurement does not affect the calculation. Measurements are also made on Auxilary analog inputs 3 and 4, as well as totalization on Auxilary Pulse Inputs 1,2,3,4.

#### Calculations:

- The density, mass flow and sensible heat are calculated using the fluid characteristics stored in the flow computer. (see "FLUID DATA" submenu)
- If Aux 3 and Aux 4 are both assigned to the same scale (such as PRESSURE psig) the a calculation of Delta P (Aux3-Aux4) is also made and is available for viewing and other informative and assignable uses.

#### **Output Results:**

Display Results

Sensible Heat, Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature, Pressure, Density, AUX 3, AUX 4, Auxiliary Totals-1,2,3,4, peak demand, demand last hour, time/date stamp

Analog Output

Sensible Heat, Mass or Volume Flow Rate, Temperature, Pressure, Density, Peak Demand, Demand Last Hour, AUX 3, AUX 4

Pulse Output

Sensible Heat, Mass or Volume Total, Auxiliary Totals-1,2,3,4


· Relay Outputs

Sensible Heat, Mass or Volume Flow Rate, Total, Temperature, Pressure Alarms, Peak Demand, Demand Last Hour, AUX 3, AUX 4, Auxiliary Totals-1,2,3,4

#### Applications:

Calculate the energy stored in a condensate with respect to water at 32°F (0°C).

#### Liquid Sensible Heat Illustration

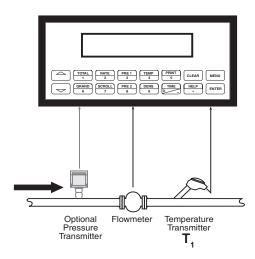

#### **Calculations**

#### **Volume Flow**

As calculated in section 3.8

#### **Heat Flow**

Heat Flow = C • volume flow • 
$$(1-• (T_1-T_{ref}))^2$$
 • ref. density •  $(T_1-32)$ 

**NOTE:** when using Mass Flowmeter:

Heat Flow = 
$$C \cdot M \cdot (T_1 - 32)$$

 $\alpha$  = Thermal expansion coefficient • 10<sup>-6</sup>

C = Specific heat M = Mass flow



#### LIQUID DELTA HEAT

#### 3.10 Liquid Delta Heat

#### Measurements:

Actual volume flow is measured by the flow element (DP transmitter, Flowmeter). Temperature of the supply and return lines are measured by the temperature transmitters. Measurements are also made on Auxiliary analog inputs 3 and 4, as well as totalization on Auxiliary Pulse Inputs 1,2,3,4.

#### Calculations:

- The density, mass flow and delta heat are calculated using values of the heat carrying liquid stored in the flow computer. (see "FLUID DATA" submenu)
- If Aux 3 and Aux 4 are both assigned to the same scale (such as PRESSURE psig) the a
  calculation of Delta P (Aux3-Aux4) is also made and is available for viewing and other informative
  and assignable uses.

#### **Output Results:**

· Display Results

Heat, Mass or Volume Flow Rate, Resettable Total, Non-Resettable Total, Temperature1, Temperature2, Delta Temperature, Density, AUX 3, AUX 4, Delta P (AUX 3 - AUX 4), Auxiliary Totals-1,2,3,4, peak demand, demand last hour, time/date stamp

Analog Output

Heat, Mass or Volume Flow Rate, Temperature1, Temperature2, Delta Temperature, Density, Peak Demand, Demand Last Hour, AUX 3, AUX 4

· Pulse Output

Heat, Mass or Volume Total, Auxiliary Totals-1,2,3,4


Relay Outputs

Heat, Mass or Volume Flow Rate, Total, Temperature Alarms, Peak Demand, Demand Last Hour, AUX 3, AUX 4, Auxiliary Totals-1,2,3,4

#### Applications:

Calculate the energy which is extracted by a heat exchanger from heat carrying liquids.

## Liquid Delta Heat Illustration

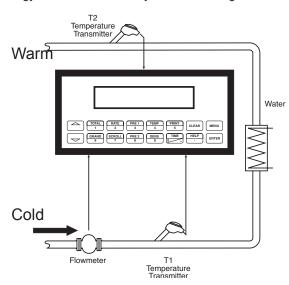

#### **Calculations**

#### Water

Heat = Volume Flow • 
$$\rho(T1)$$
 •  $[h(T_2) - h(T_1)]$   
or Heat = Mass Flow •  $[h(T_2) - h(T_1)]$ 

#### Other heat carrying liquids

Heat = C • volume flow • 
$$(1-\alpha \cdot (T_1-T_{ref}))^2 \cdot \rho_{ref} \cdot (T_2-T_1)$$
  
or Heat = Mass flow • C •  $(T_2-T_1)$ 

WHERE: Delta T > Low Delta T Cutoff

 $\alpha$  = Thermal expansion coefficient • 10<sup>-6</sup>

C = Mean specific heat

 $\rho(T1)$  = Density of water at temperature T<sub>1</sub>

h(T1) = Specific enthalpy of water at temperature T<sub>1</sub> h(T2) = Specific enthalpy of water at temperature T<sub>2</sub>


 $\rho_{ref}$  = Reference density  $T_{ref}$  = Reference temperature



#### 4.0 Wiring

#### 4.1 Terminal Locations:

#### **RS-485 Terminal Block (TB option)**

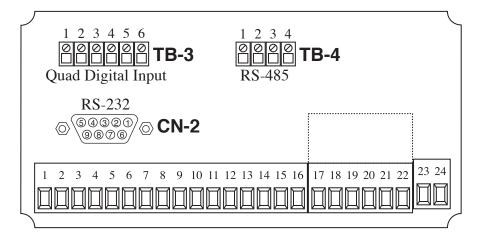

#### 4.2 Terminal Designations:

#### **Main Terminal**

1	DC OUTPU	Γ			FLOW IN
2	PULSE IN I	in (	+) Vin	(+)	
3		-	lin (	+)	AUX - 3
4	COMMON				
5	RTD EXCIT	(+)	Т	EMI	PERATURE
6	RTD SENS	(+)	,	,	IN
7	RTD SENS	(-)	lin (	+)	
8	lin (+)				AUX - 4
9	RTD EXCIT	(+)			PRESSURE
10	RTD SENS	(+)			(TEMP 2)
11	RTD SENS	(-)	lin (	+)	IN
12	PULSE OUT	Pι	JT (+)		
13	PULSE OUT	PL	JT (-)		
14	ANALOG O	JTF	PUT 1	(+)	
15	ANALOG O	JTF	PUT 2	(+)	
16	ANALOG O	JTF	PUT C	OM	MON (-)
17	NO				
18	COM RLY1				
19	NC				
20	NC	$\neg$			
21	COM RLY2				
22	NO				
23	AC LINE	D	C (+)	PC	WER IN
24	AC LINE	D	C (-)		, , , _

#### **RS-232**

<u>Term</u>

#### **DB9 Connector (CN-2) Designation**

1	Handshake Line (cd in)	
2	Transmit (tx)	
3	Receive (rx)	
4	Do Not Use	
5	Ground	
6	Do Not Use	
7	RTS out	* 8 VDC Power supplied on
8	Do Not Use	Pin 9 to power modem
9	DC Power Out*	· ··· · · · · · · · · · · · · · · · ·

#### RS-485

#### Terminal Block (TB-4) (optional)


<u>Term</u>	<u>Designation</u>
1	COM
2	Terminating Resistor
	(Connect to TX+ to terminate line
3	TX+
4	TX-

#### **Quad Digital Input (TB-3)**

<u>Term</u>	<u>Designation</u>
1	Input 1 (Totalizer Input)
2	Input 2
3	Input 3
4	Input 4
5	5Vdc Out
6	Common



#### 4.3 Typical Wiring:

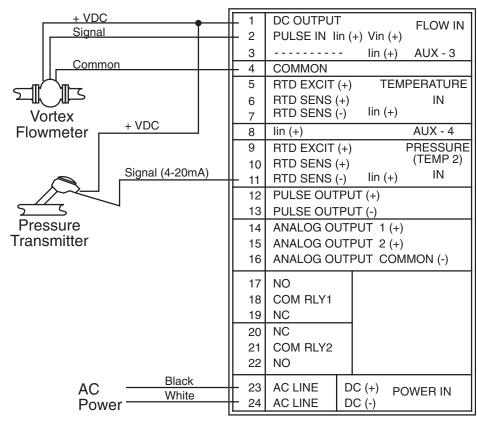

#### NOTE 1:

The Pulse Input impedance on the ES-762 has been lowered to  $2.7 K\Omega$  to work with 4 terminal Vortex flowmeters.

#### NOTE 2:

For stacked DP use low range DP on terminal 2; high range DP on terminal 3; AUX 3 is not supported.

#### NOTE 3:

For steam delta heat EQ, when used with super heated steam only, steam temperature on TEMP IN condensate temperature on AUX-4. For saturated steam, condensate temperature on TEMP IN terminals.

#### 4.4 Typical Wiring - Steam Applications:

For use with 2-wire passive transmitters wire as follows:

Input	Connect(+)	Connect(–)
DP Transmitter	terminal 1	terminal 2
Static Pressure	terminal 1	terminal 11
AUX 3	terminal 1	terminal 3
AUX 4	terminal 1	terminal 8 — See NOTE 3 when using
Flowing Temperature	terminal 1	terminal 7 — Steam Delta Heat EQ.

#### 4.5 Typical Wiring - Chilled Water Applications:


For use with 2-wire passive transmitters wire as follows:

Input	Connect(+)	Connect(-)
DP Transmitter	terminal 1	terminal 2
Return Temperature	terminal 1	terminal 11
AUX 3	terminal 1	terminal 3
AUX 4	terminal 1	terminal 8
Flowing Temperature	terminal 1	terminal 7



#### 5. UNIT OPERATION

#### 5.1 Front Panel Operation Concept for Operate Mode

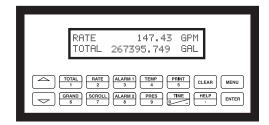

How To Use On-Line Help

#### HELP

On-line help is provided to assist the operator in using this product. The help is available during OPERATE and SETUP modes simply by pressing the HELP key. The HELP key is used to enter decimals when entering numeric values.

How To View Process Values

#### **VIEWING PROCESS VALUES**

In the OPERATE mode, several keys have a special, direct access feature, to display an item of interest (i.e. RATE, TOTAL, ALARM SETPOINT, etc.). Press the key to view your choice. Press the  $\Delta$   $\nabla$  keys to view other items in that group.

How To Clear The Totalizer

#### **CLEARING TOTALIZER**

To clear the totalizers, you must press the TOTAL Function Key to select the totalizer group. Press the  $\Delta$   $\nabla$  keys to select the desired totalizer. Once the desired totalizer is displayed, press the CLEAR key to reset the total. The operator will be prompted to verify this action and to enter a password if the unit is locked.

How To Clear The Grand Total

#### **CLEARING GRAND TOTAL**

To clear the grand totalizers, you must press the GRAND Function Key and use the  $\Delta$   $\nabla$  keys to select the desired grand total. Once the grand total is selected, press the CLEAR key to reset the grand total. The operator will be prompted to verify this action and to enter service password if the unit is locked.

How To Enter Alarm Setpoints

#### **ALARM SETPOINT KEYS**

ALARM 1 & ALARM 2 keys are used to view and/or change the alarm setpoints. To view the setpoints, simply press the desired Alarm setpoint key once. Rapidly press the alarm setpoint keys several times for direct editing of the alarm setpoints. The operator will be prompted to enter password if the unit is locked. Press CLEAR, "###", ENTER to enter value.

How To Activate The Scrolling Display List

#### **SCROLL**

Press the Scroll key to activate the scrolling display list. See section 6 to setup the display list.

How To Use The Print Key

#### PRINT

The PRINT key is used to print on demand when the communication port is set for printer. When the PRINT key is pressed, a user defined list of data (TOTAL, RATE, ALARM SETPOINT, etc.) is sent to the RS-232 port. A timed message of "PRINTING" will be displayed to acknowledge the print request.

How To Use The Menu Key

#### **MENU KEY**

The MENU key is used to view/enter the Instrument Setup and Service Mode. Press the MENU key to access the Setup and Service modes. (See section 6 for Setup mode). The MENU key is also used for a "Pop-Back" function. When the MENU key is pressed, the display will "Pop-Back" to the current submenu heading. Multiple MENU key depressions will return the unit to the Operate Mode.

How To Acknowledge Alarms

#### **ACKNOWLEDGING ALARMS**

Most alarm messages are self-clearing. Press the ENTER key to acknowledge and clear latching alarms.

NOTE: Some keys and functions are password protected. Enter the password to gain access. The passwords are factory set as follows:

**Private = 1000, Service = 2000** 



### General Operation

#### 5.2 General Operation

This instrument is used primarily to monitor flowrate and accumulated total. The inputs can be software configured for a variety of flowmeter, temperature and pressure sensors. The standard output types include: Pulse, Relay, Analog and RS-232 The unit can display the flowrate, total and process variables. RS-485 is an available option for a second communication channel.

#### **Password Protection**

#### 5.3 Password Protection

After an Private and/or Service Code is entered in the "System Parameters" Submenu Group. (see section 6.3, Private Code and Service Code sub-menus), the unit will be locked. The unit will prompt the user for the password when trying to perform the following functions:

Clear Totals

Clear Grand Totals (service code required)

Edit a Setup Menu Item

Edit Alarm Setpoints (ALARM 1 & ALARM 2 Keys)

The Service Code should be reserved for service technicians. The Service Code will allow access to restricted areas of the Service and Test menus. Changes in these areas may result in lost calibration information.

#### **Relay Operation**

#### 5.4 Relay Operation

Two relay alarm outputs are standard. The relays may also be used for pulse outputs. The relays can be assigned to trip according to various rate, total, temperature or pressure readings. The relays can be programmed for low/high alarms, latch or unlatch, or as relay pulse outputs.

ALARM SETPOINT 1 (RLY1) and ALARM SETPOINT 2 (RLY2) are easily accessible by pressing the ALARM 1 or ALARM 2 key on the front panel.

#### **Pulse Output**

#### 5.5 Pulse Output

The isolated pulse output is menu assignable to any of the available totals. The pulse output duration and scaling can be set by the user. The pulse output is ideal for connecting to remote totalizers or other devices such as a PLC. See section 1.2 for electrical specifications.

#### **Analog Outputs**

#### 5.6 Analog Outputs

The analog outputs are menu assignable to correspond to any of the process parameters. The outputs are menu selectable for 0-20 mA or 4-20 mA. The analog outputs are ideal for "trend" tracking using strip chart recorders or other devices.

#### Function Keys Display Grouping

#### 5.7 Function Keys; Display Grouping

TOTAL Press the keys to view HEAT TOTAL, MASS TOTAL, CORRECTED

VOLUME TOTAL, VOLUME TOTAL, AUX TOTALS 1, 2, 3, 4

GRAND TOTAL Press the keys to view GRAND HEAT, GRAND MASS, GRAND

CORRECTED VOLUME, GRAND VOLUME, AUX TOTALS 1, 2, 3, 4

RATE Press the keys to view HEAT, MASS, CORRECTED VOLUME,

VOLUME, PEAK DEMAND, DEMAND LAST HOUR

TEMPERATURE Press the \_\_\_\_, keys to view TEMPERATURE 1, TEMPERATURE 2, DELTA

TEMPERATURE, DENSITY, AUX 3, AUX 4

PRESSURE Press the keys to view PRESSURE, DIFFERENTIAL PRESSURE, , Y,

SPECIFIC ENTHALPY, AUX 3, AUX 4, AUX 3 - AUX 4

TIME Press the keys to view TIME/DATE, PEAK TIME/DATE,

ACCUMULATIVE POWER LOSS TIME, TIME OF LAST POWER OUTAGE,

TIME POWER WAS LAST RESTORED



### RS-232 Serial Port Operation

#### 5.8 RS-232 Serial Port Operation

The RS-232 serial port can be used for programming (using the Setup Disk) or for communicating to printers and computers in the Operating Mode (Run Mode). Enhanced uses include remote metering by modem.

#### **PC Communications**

#### 5.8.1 PC Communications:

The Setup Disk also allows the user to query the unit for operating status such as Flow Rate, Flow Total, Temperature, Pressure, Alarm Setpoints, etc. In this mode of operation the RS232 port is assumed connected to a computer. The ST2 will act as a slave and answer requests from the PC. See the Universal Protocol Users Manual for a complete listing of the commands set supported. A DDE/OPC Server is also available for use in exchanging information with DDE Clients such as Spread Sheets, Database Programs, and HMI software.

#### RS-232 Serial Port Operation of RS-232 Serial Port with Printers

#### 5.8.2 Operation of RS-232 Serial Port with Printers:

#### Transaction Printing

For transaction printing, the user defines the items to be included in the printed document (see section 6.13 COMMUNICATION, Print List). The transaction document can be initiated by pressing the PRINT key.

#### **Data Logging**

The user can select when (time of day) or how often (print interval) the data log is to be made (see section 6.13 COMMUNICATION, Print Initiate). Information will be stored to the datalogger and optionally output to the RS-232 port.

#### System Setup and Maintenance Report

The system setup and maintenance report lists all of the instrument setup parameters and usage for the current instrument configuration. The audit trail information and a status report is also printed. This report is initiated in the Service and Analysis Group (see section 6.15 SERVICE & ANALYSIS, Print System Setup).

### Operation of RS-232 Serial Port with Modems

#### 5.8.3 Operation of RS-232 Serial Port with Modems

Modem

In this mode of operation the RS232 port is assumed to be connected to KEP's MPP2400N or similar telephone modem. The ST2 is responsible for communicating to a remote computer through the modem to perform such actions as:

Answer incoming calls, process requests for information or action items or data log contents or change setup parameters, call out daily readings to designed phone number, call out to designated phone number in the case of a designated exception or malfunction in the unit, terminating telephone calls if a connection is lost.

#### RS-485 Serial Port Operation

#### 5.9 RS-485 Serial Port Operation

The RS-485 serial port is intended to permit operation of the flow computer in a RS-485 network. Access is limited to reading process variables, totalizers, error logs and to executing action routines such as clearing totalizers, alarms, and changing setpoints.

#### Pause Computations Prompt

#### **5.10 Pause Computations Prompt**

The user will be prompted with a "Pause Computations" message when making significant setup changes to the instrument. Pausing computations is necessary to make any significant changes. With computations paused, all outputs assume a safe state equal to that of an unpowered unit. Computations resume when exiting the setup menu.




#### 6. PROGRAMMING

#### 6.1 Front Panel Operation Concept for Program Mode

The ES762-ST2 is fully programmable through the front panel. The instrument setup menu structure is based on a number of topical submenu groups with one submenu group for each instrument function. Each submenu contains all of the individual settings associated with that function. During the instrument setup, setup topics are shown on the bottom line of the display while the detailed selection options are shown on the top line. A help menu is available for each menu item.

Please review the following key usage summary before attempting to setup the instrument.

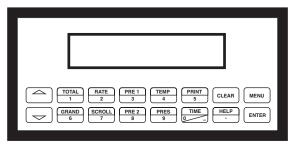

**CAUTION:** When the computations are paused the instrument outputs will go to a safe state which is the same as if the unit lost power. All calculations stop.

#### **Key Usage Summary:**



#### **MENU KEY**

Pressing the MENU key while in the "HOME" position will select the view setup parameters mode. Thereafter, the MENU key is used to "pop up" one menu level (i.e. return to the start of the submenu group). The unit will "pop up" one level for each time the MENU key is pressed until finally returning to the "HOME" position of showing the "scroll" display list.



#### **UP & DOWN ARROW KEYS**

Use the UP and DOWN arrow keys to navigate through the submenu groups. The up and down arrow keys are also used to view the next/previous selection in a selection list within a submenu cell. When entering text characters, the UP and DOWN arrow keys are used to scroll through the available character sets for each individual character location. Press the ENTER key to accept the character and advance to the next character.



#### **HELP KEY**

On-line help is available to assist the user during instrument setup. A quick help is provided at each setup step. Press the HELP key to display a help message for the current setup selection. This key is also used to enter decimals during numeric entry sequences.



#### NUMERIC ENTRY KEYS

The keys labeled "0 - 9", "-", ".", CLEAR and ENTER are used to enter numerical values. A leading 0 will assume that you intend to enter a minus "-" sign. The standard numeric entry sequence is: CLEAR, "###", ENTER.Numeric entry values are bounded or clamped by minimum and maximum permitted values.



#### **CLEAR KEY**

The CLEAR key is used to clear numeric values to "0".

### Enter Key

#### **ENTER KEY**

The ENTER key is used to accept the current value and advance to the next selection (Successfully terminate the current numeric entry sequence).



6.2 ΕZ **SETUP** 

### **EZ SETUP** The EZ Setup routine is a quick and easy way to configure the most commonly used instrument functions. We recommend first completing the EZ Setup routine for the flow equation and meter type for your initial application. The setup can then be customized using the complete submenu groups described later in this chapter. Caution: Entering the EZ Setup mode automatically sets many features to a default value (without prompting the user). This may cause any previously programmed information to be lost or reset. Selection: YES, NO Display: EZ SETUP? PAUSE COMPUTATIONS The "Pause Computations" warning message informs the user that all computations are halted while programming EZ Setup. Select the desired units of measure. Selection: METRIC, ENGLISH Display: **ENGLISH**

### **FLOW EQUATION**

**EZ SETUP** 

**EZ Setup** 

Example: Steam Mass

UNITS

**Vortex Flowmeter** 

Select the flow equation appropriate for your application.

UNITS?

#### Selection:

Note:



STEAM MASS, STEAM HEAT, STEAM NET HEAT, STEAM DELTA HEAT, GAS MASS, GAS COMBUSTION HEAT, LIQUID MASS, LIQ. COMBUSTION HEAT, LIQUID SENSIBLE HEAT. LIQUID DELTA HEAT

Display: STEAM MASS FLOW EQUATION

25



6.2 EZ SETUP (Continued)

	EZ SETUP
Fluid Type	Select the type of fluid appropriate for your application.
	Selection:
	SATURATED STEAM, SUPERHEATED STEAM
	Display: SATURATED STEAM FLUID TYPE
FLOWMETER TYPE	Select the flowmeter type used in your application.
	Selection:
	LINEAR, SQR LAW, SQR LAW-LIN., LINEAR 16 PT, SQR LAW 16 PT, SQR LAW-LIN. 16 PT, LINEAR UVC, GILFLO, GILFLO 16 PT, BYPASS, ILVA 16 POINT, MASS
	<b>Display:</b> LINEAR FLOWMETER TYPE
INPUT SIGNAL	Select the appropriate input signal.
	Selection:
	4-20 mA, 0-20 mA, 0-5 Vdc, 1-5 Vdc, 0-10 Vdc, DIGITAL: 10 mV LEVEL, DIGITAL: 100 mV LEVEL, DIGITAL: 2.5 V LEVEL, 4-20mA STACKED, 0-20mA STACKED, 4-20mA LINEAR MANIFOLD, 0-20mA LINEAR MANIFOLD
	<b>Display:</b> DIGITAL 2.5 V LEVEL INPUT SIGNAL
K-FACTOR	Enter the K-Factor for the flowmeter.
	Input:
	Number with floating decimal point: 0.0001999999
	<b>Display:</b> 123.67 P/ft3 K-FACTOR
INPUT SIGNAL	Select the appropriate pressure input signal.
(PRESSURE)	Selection:
	MANUAL PRESSURE, 4-20 PRESSURE (ABS.), 0-20 PRESSURE (ABS.), 4-20 PRESSURE (G), 0-20 PRESSURE (G)
	Display: 4-20 PRESSURE (ABS.) INPUT SIGNAL



6.2 EZ SETUP (Continued)

#### **EZ SETUP**

## FULL SCALE VALUE (PRESSURE)

Enter the full scale value for the pressure input signal.

Input:



Number with fixed decimal point:

000.000 ... 999.999

Display: 580.000 psia

FULL SCALE VALUE

## **DEFAULT VALUE** (PRESSURE)

Enter the default value for the pressure input signal.

Input:



Number with fixed decimal point:

000.000 ... 999.999

Display: 14.696 psia

DEFAULT VALUE

**NOTE:** After the last entry has been saved, the display

automatically returns to the HOME position. The "EZ Setup" routine is completed and the flow computations are

resumed.

6.3 DETAILED MENU DESCRIPTION

#### **DETAILED MENU DESCRIPTION**

The menu organization for the unit is depicted in Appendix B. The first depiction is that available with the operator password. The second is that available with supervisor password.

Please reference Appendix B while reviewing the detailed descriptions for each menu location in the following sections.



#### 6.4 SYSTEM PARAMETERS

	SYSTEM PARAMETERS	
EZ SETUP	The EZ Setup routine is a quick and easy way to configure the most commonly used instrument functions.	
	Reference: Refer to Section 6.2 for EZ Setup Programming.	
	Caution:  Entering the EZ Setup mode automatically sets many features to default values without informing the user. This may cause any previously programmed information to be lost or reset	
	Selection:	
	YES, NO	
	Display: EZ SETUP? NO PAUSE COMPUTATIONS	
	Note:  The "Pause Computations" warning message informs the user that all computations are halted while programming EZ Setup.	
ACCESS CODE	This is the menu location where the operator can unlock the unit by entering the correct password (operator or supervisor code), or lock the unit by entering the incorrect password.	
	Selection:	
	0 - 9999	
	Display: 0 ACCESS CODE	
1		



	SYSTEM PARAMETERS
FLOW EQUATION	The Flow Equation sets the basic functionality of the unit. Choose the Flow Equation for your particular application.
	Note:  Various setup data is only available depending on the flow equation selected. The flow equation also determines the assignment of the inputs.
	Caution:  Select the flow equation as the first step. We recommend using the EZ Setup to select the proper flow equation. The user can then enter the submenu groups and make additional changes as desired.
	Selection:
	GAS COMBUSTION HEAT, GAS MASS, STEAM DELTA HEAT, STEAM NET HEAT, STEAM HEAT, STEAM MASS, LIQUID DELTA HEAT, LIQUID SENSIBLE HEAT, LIQ. COMBUSTION HEAT, LIQUID MASS,
	<b>Display:</b> STEAM MASS FLOW EQUATIONS
ENTER DATE	Enter the date in this format: Day - Month - Year.
	Note:  After prolonged breaks in the power supply (several days) or upon initial start-up of the unit, the date and time must be reset. This does not apply to units with the datalogger option.
	Input:  CLEAR Flashing selections can be changed. Store and Confirm entries with the ENTER key
	Display: 08 FEB 1996 ENTER DATE
DAYLIGHT SAVINGS TIME	The "Daylight Savings" mode allows the unit to automatically adjust the time according to daylight savings time change
	Note: Select "Yes" to enable the Daylight Savings Mode
	Selection:
	Yes, No
	Display: Yes DAYLIGHT SAVINGS



#### **SYSTEM PARAMETERS**

#### **ENTER TIME**

Enter the actual time in this format: Hours - Minutes

#### Note:

After prolonged breaks in the power supply (several days) or upon initial start-up of the unit, the date and time must be reset.

#### Input:



Flashing selections can be changed. Store and Confirm entries with the ENTER key

Display:

13:24 ENTER TIME

#### **PRIVATE CODE**

#### **Special Note:**

After returning to the run mode, program editing is automatically locked after 60 seconds as long as no keys are pressed The program editing can also be disabled by entering a number other than the private code at the Access Code prompt.

A personal code may be defined. This code is used to enable program editing.

#### Note:

- The private code is factory set to 1000
- Entering a private code of "0" will always enable program editing (Turns automatic lock off)

#### Input:



Maximum 4 digit number: 0...9999
Store and Confirm entries with the ENTER key

#### Display:

1000

PRIVATE CODE

#### **SERVICE CODE**

#### Note:

The Service Code will allow access to the same information as the Private Code with the following additional functions:

- Change the Service Code
- Change the Order Code
- Change the Serial No.
- Clear Grand Total
- · Clear Errors in Error Log
- View & Perform calibration in Service & Analysis Menu
- Restore Factory Calibration Information in Service & Analysis Menu
- · Set Next Calibration Date
- Print Maint.Report
- · Perform Service Test

A personal service code may be defined. This code is used to enable program menus that are normally reserved for factory and service personnel.

(i.e.: Service & Analysis Submenu Group)

#### Note:

- The service code is factory set to 2000
- The service code submenu will only appear if the service code was entered for the "Access Code".

#### Input:



Maximum 4 digit number: 0...9999 Store and Confirm entries with the ENTER key

Display:

2000

SERVICE CODE



#### **SYSTEM PARAMETERS**

#### **ENGINEERING CODE**

#### Note:

The Engineering Code will allow access to the same information as the Private Code with the following additional functions:

- Change the Service Code
- · Change the Order Code
- Change the Serial No.
- · Clear Grand Total
- · Clear Errors in Error Log
- View & Perform calibration in Service & Analysis Menu
- Restore Factory Calibration Information in Service & Analysis Menu
- · Set Next Calibration Date
- · Print Maint.Report
- · Perform Service Test

A personal enginerring code may be defined. This code is used to enable program menus that are normally reserved for engineering

(i.e.: Service & Analysis Submenu Group)

#### Note:

personnel.

- The engineering code is factory set to 3000
- The engineering code submenu will only appear if the engineering code was entered for the "Access Code".

#### Input:



Maximum 4 digit number: 0...9999
Store and Confirm entries with the ENTER key

Display:

3000

SERVICE CODE

#### **TAG NUMBER**

A personalized tag can be entered for unit I.D. purposes.

#### Note:

- · Maximum of 10 characters.
- Spaces are considered characters and must be confirmed by pressing the ENTER key.

#### Input:



Alphanumeric characters for each of 10 positions 1...9; A...Z;\_, <, =, >, ?, etc.

Flashing selections can be changed. Store and Confirm entries with the ENTER key.

Display: FT101

TAG NUMBER



	SYSTEM PARAMETERS
ORDER CODE	The order code (part number) of the unit can be entered. This will help in identifying what options were ordered.
	<ul> <li>Note:</li> <li>The order number is set at the factory and should only be altered if options are added in the field by an authorized service technician.</li> <li>Maximum of 10 characters.</li> </ul>
	Input:
	Alphanumeric characters for each of 10 positions 19; AZ;
	Flashing selections can be changed. Store and Confirm entries with the ENTER key
	Display: ST2V10P ORDER CODE
SERIAL NUMBER	The serial number of the unit is assigned at the factory.
	Note:  Maximum of 10 characters.
	Input:
	Alphanumeric characters for each of 10 positions 19; AZ;
	Display: SN 12345 SERIAL NUMBER
SERIAL-NO. SENS.	The serial number or tag number of the flowmeter can be entered.
	Note:  Maximum of 10 characters.
	Input:
	Alphanumeric characters for each of 10 positions 19; AZ;_, <, =, >, ?, etc.
	Flashing selections can be changed. Store and Confirm entries with the ENTER key.
	Display: SN 12345 SERIAL-NO. SENS.



#### 6.5 DISPLAY

#### **DISPLAY**

#### **SCROLL LIST**

Select the variable that are to be displayed in the "HOME position" during normal operation. Each variable can be assigned to line 1 (L1), line 2 (L2) or NO (removed from scroll list).

#### Note:

- To initiate the scroll list press the SCROLL key. The list will be displayed in groups of two, each group is displayed for approximately 3 to 4 seconds.
- Any alarm messages will be displayed periodically, alternating throughout the scroll list.

#### **Selection (with Prompt):**



CHANGE? YES, NO

ADD TO LIST? L1, L2, NO

#### Variable Selection:

HEAT FLOW, MASS FLOW, VOLUME FLOW, TEMP.1, TEMP.2, DELTA T, PRESSURE, DENSITY, SPEC. ENTHALPY, TIME, DATE, HEAT TOTAL, HEAT GRAND TOTAL, MASS TOTAL, MASS GRAND TOTAL, VOLUME TOTAL, VOL. GRAND TOTAL, PEAK DEMAND, DEMAND LAST HOUR, PEAK DEMAND TIME, PEAK DEMAND DATE, AUX 3, AUX 4, AUX 3-4, AUX TOTALS 1, 2, 3, 4

**Note:** Variable selection will vary depending on Flow Equation selected and options supplied.

Display: ADD TO LIST? L1 HEAT FLOW?



#### 6.5 DISPLAY (Continued)

#### **DISPLAY**

## DISPLAY DAMPING

The "display damping" constant is used to stabilize fluctuating displays. The higher the constant, the less fluctuation will be displayed.

Note:

Relay response time is affected by the value entered for display damping. The larger the display damping value, the slower the relay response time will be. This is intended to prevent false triggering of the relays. Enter a display damping factor of zero (0) for fastest response time.

Note:

• Factory setting: 1

#### Input:



2 digits max; 0...99

Display:

CONSTANT? 1
DISPLAY DAMPING

#### MAX. DEC. POINT

Enter the number of decimal places for numerical values.

#### Note:

- The number of decimal places applies to all displayed variables and totalizers. (Except Aux Totals 1, 2, 3, 4)
- The number of decimal places is automatically reduced if there is insufficient space available on the display for large numbers.
- The number of decimal places set here does not affect the functions set in the programming setup.

#### Selection:



0, 1, 2, 3 or 4 (decimal places)

Display:

MAX. DEC. POINT

## TOTAL ROLLOVER

Some customer software can not handle very large numbers (such as 999,999,999) without going to scientific notation (such as 9.999999E8). This menu can be used to force the totalizers to roll over at a lower numerical value (such as 999,999).

#### Input:



Maximum 9 digit number: 0...999999999 Store and Confirm entries with the ENTER key

Display:

99999999 TOTAL ROLLOVER LIMIT



#### 6.6 SYSTEM UNITS

	SYSTEM UNITS
TIME BASE	Select "one" unit of time to be used as a reference for all measured or derived and time-dependant process variables and functions such as:  • flowrate (volume/time; mass/time) • heat flow (amount of energy/time) etc.
	Selection:
	/s (per second), /m (per minute), /h (per hour), /d (per day)  Display:
HEAT FLOW UNIT	Select the unit for heat flow (amount of energy, combustion heat).
	Note:  The unit selected here also applies to the following:  • Zero and full scale value for current.  • Relay setpoints
	Selection:
	kBtu/time base, kW, MJ/time base, kCal/time base, MW, tons, GJ/h, Mcal/h, Gcal/h, Mbtu/h, Gbtu/h
	<b>Display:</b> kBtu/h HEAT FLOW UNIT
HEAT TOTAL UNIT	Select the unit of heat for the particular totalizer.
	Note:  The unit selected here also applies to the following:  • Pulse value for pulse output  • Relay setpoints
	Selection:
	kBtu, kWh, MJ, kCal, MWh, tonh,GJ, Mcal, Gcal, Mbtu, Gbtu
	Display: kBtu HEAT FLOW UNIT



## **SYSTEM UNITS MASS FLOW UNIT** Select the unit of mass flowrate (mass/time base). Note: The unit selected here also applies to the following: • Zero and full scale value for current Relay setpoints Selection: lbs/time base, kg/time base, g/time base, t/time base, tons(US)/time base, tons(long)/time base Display: lbs/h MASS FLOW UNIT **MASS TOTAL UNIT** Select the unit of mass for the particular totalizer. Note: The unit selected here also applies to the following: • Pulse value for pulse output · Relay setpoints Selection: lbs, kg, g, t, tons(US), tons(long), hlbs, Klbs, Mlbs Display: lbs MASS TOTAL UNIT



#### **SYSTEM UNITS**

#### COR.VOL. FLOW UNIT

Select the unit of corrected volumetric flowrate (corrected volume/time base).

#### Note:

The unit selected here also applies to the following:

- Zero and full scale value for current
- Relay setpoints

Corrected Volume = volume measured under operating conditions converted to volume under reference conditions.

#### Selection:

The available selections will change depending on the flow equation selected.



bbl/time base, gal/time base, l/time base, hl/time base, dm³/time base, ft³/time base, m³/time base, scf/time base, Nm³/time base, Nl/time base, igal/time base, mcf/time base

All units listed above apply to corrected volume.

Display: scf/h

COR. VOL. FLOW UNIT



#### **SYSTEM UNITS**

#### **VOLUME FLOW UNIT**

Select the unit for volumetric flowrate.

#### Note:

The unit selected here also applies to the following:

- · Zero and full scale value for current
- · Relay setpoints

#### Selection:

The available selections will change depending on the flow equation selected.



bbl/time base, gal/time base, l/time base, hl/time base, dm³/time base, ft³/time base, m³/time base, acf/time base, igal/time base

All units listed above apply to the actual volume measured under operating conditions.

Display:

ft3/h

VOLUME FLOW UNIT

#### **VOLUME TOTAL UNIT**

Select the unit for uncorrected volume totalizer.

#### Note:

The unit selected here also applies to the following:

- Pulse value for pulse output
- · Relay setpoints

#### Selection:

The available selections will change depending on the flow equation selected.



bbl, gal, l, hl, dm3, ft3, m3, acf, igal

All units listed above apply to the actual volume measured under operating conditions.

Display: ft3



#### **SYSTEM UNITS**

#### **DEFINITION bbl**

VOLUME TOTAL UNIT

In certain countries the ratio of gallons (gal) per barrels (bbl) can vary according to the fluid used and the specific industry. Select one of the following definitions:

- US or imperial gallons
- · Ratio gallons/barrel

#### Selection:.



US: 31.0 gal/bblfor beer (brewing)

US: 31.5 gal/bblfor liquids (normal cases) US: 42.0 gal/bblfor oil (petrochemicals)

US: 55.0 gal/bbl for filling tanks

imp: 36.0 gal/bbl for beer (brewing) imp: 42.0 gal/bbl for oil (petrochemicals)

Display: US: 31.0 gal/bbl

DEFINITION bbl

#### **TEMPERATURE UNIT**

Select the unit for the fluid temperature.

#### Note:

The unit selected here also applies to the following:

- Zero and full scale value for current
- Relay setpoints
- · Reference conditions
- · Specific heat

#### Selection:



°C (Celsius), °F (Fahrenheit),

°K (Kelvin), °R (Rankine)

Display:

oF

TEMPERATURE UNIT



#### **SYSTEM UNITS**

#### **PRESSURE UNIT**

Select the unit for process pressure.

#### Note:

The unit selected here also applies to the following:

- Zero and full scale value for current
- Relay setpoints
- · Reference conditions

Differential pressure is in mbar for Metric selections Differential pressure is in "H<sub>2</sub>O f or English selections

#### Selection:



bara, kpaa, kc2a, psia, barg, psig, kpag, kc2g

#### Definitions:

bara bar

kpaa kpa Absolute pressure kc2a kg/cm² ("a" for absolute)

psia psi

barg bar Gauge pressure compared to

kpag kpa atmospheric pressure

kc2g kg/cm<sup>2</sup> ("g" for gauge)

psig psi

Gauge pressure differs from absolute pressure by the atmospheric pressure, which can be set in the submenu group "OTHER INPUT".

Display: psia

PRESSURE UNIT

#### **DENSITY UNIT**

Select the unit for the density of the fluid.

#### Note:

The unit selected here also applies to the following:

- Zero and full scale value for current
- Relay setpoints

#### Selection:



kg/m³, kg/dm³, #/gal, #/ft³ (# = lbs = 0.4536 kg)

Display: #/ft3

DENSITY UNIT



	SYSTEM UNITS
SPEC. ENTHALPY UNIT	Select the unit for the combustion value (spec. enthalpy).
	Note:  The unit selected here also applies to the following:  • Specific thermal capacity  (kWh/kg → kWh/kg - °C)
	Selection:
	btu/#, kWh/kg, MJ/kg, kCal/kg (# = lbs = 0.4536 kg)
	Display: Btu/# SPEC. ENTHALPY UNIT
LENGTH UNIT	Select the unit for measurements of length.
	Selection:
	in, mm
	Display: in
	LENGTH UNIT



#### 6.7 FLUID DATA

#### **FLUID DATA**

#### **FLUID TYPE**

Select the fluid. There are three types:

#### 1. Steam / Water

All information required for steam and water (such as saturated steam curve, density and thermal capacity) is permanently stored in the flow computer.

#### 2. Fluid Displayed

Preset information for other fluids (such as air and natural gas) is stored in the flow computer and can directly adopted by the user.

If the preset values need to be changed to fit your specific process conditions, then proceed as follows:

Select the fluid (air or natural gas) and press the ENTER key (this sets all of the preset values).

Re-select the submenu group "FLUID TYPE", now choose "GENERIC" and ENTER. Now the preset values for the previously selected fluid can be altered.

#### 3. Generic Fluid

Select the setting "GENERIC" for the Fluid type submenu. The characteristics of any fluid can now be defined by the user.

#### Selection:



GENERIC, WATER, SATURATED STEAM, SUPERHEATED STEAM, DRY AIR, HUMID AIR, HUMID GAS, NATURAL GAS, NATURAL GAS (NX-19), HYDROGEN, ARGON, METHANE, NITROGEN, CARBON DIOXIDE, PROPANE, OXYGEN, ETHANE, HELIUM

Display: GENERIC

FLUID TYPE

#### **REF. DENSITY**

Select the density for a generic fluid at reference temperature and pressure (see "STP REFERENCE" in "OTHER INPUT" submenu group).

#### Input:



Number with floating decimal point: 0.0001...10000.0

**Display:** .0760 #/ft3

REF. DENSITY



#### **FLUID DATA**

#### THERM. EXP. COEF.

Enter the thermal expansion coefficient for a generic liquid. The coefficient is required for the temperature compensation of volume with various flow equations (i.e. Liquid Mass or Corrected Liquid Volume).

#### Input:



Number with floating decimal point: 0.000...100000 (e-6)

The thermal expansion coefficient can be calculated as follows:

$$c = \frac{1 - \sqrt{\frac{\rho(T_1)}{\rho(T_0)}}}{T_1 - T_0} + 10^6$$

c Thermal expansion coefficient

 $T_0, T_1$  Temperatures at known points (see below)  $\rho(T_0, T_1)$  Density of the liquid at temperature  $T_0$  or  $T_1$ 

For optimum accuracy, choose the reference temperatures as follows:

T<sub>0</sub>: midrange temperature

T<sub>1</sub>: choose a second point at or near the maximum process temperature

10<sup>6</sup>

The value entered is internally multiplied by a factor of  $10^{-6}$  (display: e-6/temp. unit) since the value to be entered is very small.

**Display:** 104.300 (e-6/oF)

THERM.EXP.COEF.

#### **COMBUSTION HEAT**

Enter the specific combustion heat for generic fuels.

#### Input:



Number with floating decimal point: 0.000...100000

Display: 1000.000 kBtu/lbs

COMBUSTION HEAT

#### **SPECIFIC HEAT**

Enter the specific heat capacity for generic fluids. This value is required for calculating the delta heat of liquids.

#### Input:



Number with floating decimal point: 0.000...10.000

Display: 10.000 kBtu/lbs-°F

SPECIFIC HEAT



### **FLUID DATA** FLOW. Z-FACTOR Enter a Z-factor for the gas at operating conditions. The Z-factor indicates how different a "real" gas behaves from an "ideal gas" which exactly obeys the "general gas law" (P x V/T = constant; Z=1). The further the real gas is from its condensation point, the closer the Z-factor approaches "1". Note: • The Z-factor is used for all gas equations. • Enter the Z-factor for the average process conditions (pressure and temperature). Input: Number with fixed decimal point: 0.1000...10.0000 Display: 1.000 FLOW. Z-FACTOR **REF. Z-FACTOR** Enter a Z-factor for the gas at reference conditions. Note: The Z-factor is used for all gas equations. • Define the standard conditions in the submenu "STP REFERENCE" (OTHER INPUT submenu group). Input: Number with fixed decimal point: 0.1000...10.0000 Display: 1.000 REF. Z-FACTOR ISENTROPIC EXP. Enter the isentropic exponent of the fluid. The isentropic exponent describes the behavior of the fluid when measuring the flow with a square law flowmeter. The isentropic exponent is a fluid property dependent on operating conditions. Note: Select one of the "SQR LAW" selections in "FLOWMETER TYPE" of submenu group "FLOW INPUT" to activate this function. Input: Number with fixed decimal point: 0.1000...10.0000 Display: 1.4000 ISENTROPIC EXP.



# VISCOSITY COEF. A Enter the Viscosity coefficient A for the anticipated fluid. This information is needed by the viscosity computation for UVC and for Reynolds Number calculations. Note: Select "SQUARE LAW 16PT" or "LINEAR UVC" in "FLOWMETER TYPE" to activate this function. Number with fixed decimal point: 0.000000...1000000 Display: 0.000444 VISCOSITY COEF. A



#### **FLUID DATA**

#### VISCOSITY COEF. B

Enter the Viscosity coefficient B for the anticipated fluid. This information is needed by the viscosity computation for UVC and for Reynolds Number calculations.

#### Note:

Select "SQUARE LAW 16PT" or "LINEAR UVC" in "FLOWMETER TYPE" to activate this function.

## Input:

Number with fixed decimal point: 0.000000...1000000

**Display:** 0.3850 VISCOSITY COEF. B

Computation of Viscosity Coef. A and B

#### Computation of Viscosity Coef. A and B

The flow computer solves an equation which computes the viscosity as a function of temperature. Two parameters must be entered for this calculation to be performed. These are the setup parameters Viscosity Coef. A and Viscosity Coef. B. A table listing these values for common fluids is available from KEP.

Alternately, if your intended fluid is not listed, the Viscosity Coef. A and B can be derived from two known temperature/viscosity pairs. Begin by obtaining this information for you intended fluid. Convert these known points to units of Degrees F and centipoise (cP)

The information is now in a suitable form to compute the Viscosity Coef. A and Viscosity Coef. B using the following equation based on the fluid state.

For a liquid, A and B are computed as follows:

B = 
$$\frac{(T1 + 459.67) \cdot (T2 + 459.67) \cdot \ln [ cP1/cP2]}{(T2 + 459.67) - (T1 + 459.67)}$$
A = 
$$\frac{cP1}{exp [B/(T1 + 459.67)]}$$

For a gas, A and B are computed as follows:

$$B = \frac{\ln [cP2/cP1]}{\ln [(T2 + 459.67)/(T1 + 459.67)]}$$

$$A = \frac{cP1}{(T1 + 459.67)^{B}}$$
**NOTE:** cS =  $\frac{cP}{Density (in kg/l)}$ 

## % RELATIVE HUMIDITY

Enter the % Relative Humidity in the anticipated gas mixture. This information is needed to more accurately compute the density of a Humid gas.



Number with fixed decimal point: 0.000000...100.0000

Display: 0.3850 % RELATIVE HUMIDITY



## 6.8 FLOW INPUT

#### **FLOW INPUT**

#### **FLOWMETER TYPE**

Select the flowmeter type. The flow equation (see SYSTEM PARAMETERS) and the flowmeter selected here determine the basic operation of the flow computer.

#### Selection:

LINEAR



Volumetric flowmeter with linear pulse or analog

output.

SQR LAW Differential pressure transmitter without square root

extraction, with analog output.

SQR LAW-LIN. Differential pressure transmitter with square root

extraction and analog output.

LINEAR 16 PT\* Volumetric flowmeter with nonlinear pulse or analog

output; with 16 point linearization table.

SQR LAW 16 PT\* Differential pressure

transmitter without square root extraction, with analog

output and 16 point linearization table.

SQR LAW-LIN. 16 PT\* Differential pressure

transmitter with square root extraction, analog output

and 16 point linearization table.

LINEAR UVC Volumetric Turbine flowmeter with UVC calibration

curve documentation and pulse output.

LINEAR MANIFOLD Linear manifold consists of 2 linear flowmeters used in

conjunction with an external bypass/diverter value. It may be used with turbine, PD, Mag, Vortex flowmeters equipped with analog outputs to extend the allowable

turndown range.

GILFLO Gilflo flowmeters are special purpose differential

pressure type flowmeters with an analog output where

the differential pressure is linear with flow.

GILFLO 16PT Gilflo 16 PT flowmeters are special purpose differential

pressure type flowmeters with an analog output where the differential pressure is approximately linear with flow, but can be further enhanced by a 16 point

linearization table.

BYPASS is a selection for use with Bypass(Shuntflow)

flowmeters equipped with a pulse output.

ILVA 16 PT flowmeters are special purpose differential

pressure type flowmeters with an analog output where the differential pressure is approximately linear with flow, but can be further enhanced by a 16 point

linearization table.

MASS FLOW METER Flowmeter type such as Coriolis, or Thermal

Flowmeter whose output is directly proportional to mass flow. Multivariable transmitters whose output is proportional to a computed mass flow rate can also

use this meter type selection.

\* A linearization table must be entered by user. (see "LINEARIZATION" submenu).

Display:

LINEAR FLOWMETER TYPE



	FLOW INPUT	
SQUARE LAW FLOWMETER	Select the type of square law flowmeter instrument.	er to be used with the
	Note:  This selection will only appear selections were made in "FLO"	
	Selection: ORIFICE, V-CONE, ANNUBAI NOZZLE, BASIC SQRLAW/TA ACCELABAR	
	Display: ORIFICE SQUARE LAW FLOWMET	rer
ILVA METER SIZE	Select the size of the ILVA flowmeter.	
	Selection: DN50, DN80, DN100, DN150,	DN200
ACCELABAR SIZE	Select the size of the Accelabar flowm	eter.
	Selection: 1 inch, 2 inch, 3 inch, 4 inch, 6	inch, 8 inch, 10 inch, 12 inch
INPUT SIGNAL	Select the type of measuring signal pro	oduced by the flowmeter.
	Selection: DIGITAL, 10 mV LEVEL	Voltage pulses, 10mV
	DIGITAL, 100 mV LEVEL	trigger threshold. Voltage pulses, 100mV
	DIGITAL, 2.5 V LEVEL	trigger threshold. Voltage pulses, 2.5V trigger threshold.
	4-20 mA 0-20 mA 4-20 mA STACKED 0-20 mA STACKED	4-20 mA current signal 0-20 mA current signal 4-20 mA current signal 0-20 mA current signal
	0-5 V 1-5 V 0-10 V	0-5 V voltage signal 1-5 V voltage signal 0-10 V voltage signal
	Display: 4-20 mA INPUT SIGNAL	



#### **FLOW INPUT**

#### **LOW SCALE**

Set the low scale value for the analog input signal.

The value entered here must be identical to the value set for the flowmeter.

#### Note:

- For flowmeters with analog/linear output, the flow computer uses the selected system units for volumetric flowrate.
- The units for differential pressure flowmeters are dependent on the system units selected for pressure:
- Imperial units [inches H2O]
- Metric units: [mbar]

#### Input:



Number with floating decimal point: 0.000...999999

Display: .000 ft3/h LOW SCALE VALUE

#### **FULL SCALE**

Set the full scale value for the analog input signal.

The value entered here must be identical to the value set for the flowmeter.

#### Note:

- For flowmeters with analog/linear output, Target, generic square law and Gilflo flowmeters, the flow computer uses the selected system units for volumetric flowrate.
- The units for differential pressure flowmeters are dependent on the system units selected for pressure:
- Imperial units [inches H2O]
- Metric units: [mbar]



Number with floating decimal point: 0.000...999999

Display: 10000.00 ft3/h FULL SCALE VALUE

#### LOW SCALE-HI RANGE

Set the low scale value for the high range transmitter analog input signal.

The value entered here must be identical to the value set for the flowmeter.

#### Note:



- The units for differential pressure flowmeters are dependent on the system units selected for pressure:
- Imperial units [inches H2O]
- Metric units: [mbar]

#### Input:

Number with floating decimal point: 0.000...999999

Display: .000 ft3/h

LOW SCALE-HIGH RANGE



	FLOW INPUT
FILL SCALE HI	Cat the full eagle value for the high range transmitter angles input
FULL SCALE-HI RANGE	Set the full scale value for the high range transmitter analog input signal.  The value entered here must be identical to the value set for the flowmeter.
	Note:  • The units for differential pressure flowmeters are dependent on the system units selected for pressure:  - Imperial units [inches H2O]  - Metric units: [mbar]
	Number with floating decimal point: 0.000999999
	Display: 10000.00 ft3/h FULL SCALE VALUE
SWITCH UP DP	Enter the value of delta P at which the unit will begin using the hi range delta P pressure transmitter signal.
	Input:
	Number with floating decimal point: 0.000999999
	<b>Display:</b> 0.000 in H2O SWITCH UP DP
SWITCH DOWN DP	Enter the value of delta P at which the unit will begin using the lo range delta P pressure transmitter signal.
	Input:
	Number with floating decimal point: 0.000999999
	<b>Display:</b> 0.000 in H2O SWITCH UP DP
LOW FLOW CUTOFF	Enter the low flow cutoff. This is used as a switchpoint for creep suppression. This can be used to prevent low flows from being registered.
	Input:  TOTAL  1  2  Number with floating decimal point: 0.000999999
	Display: .000 ft3/h LOW FLOW CUTOFF



#### **FLOW INPUT**

#### K-FACTOR

Enter the K-Factor of the flowmeter.

#### Note:

 The K-Factor is expressed in pulses per unit volume (as defined by "total units")

#### Input:



Number with floating decimal point: 0.001...999999

Display: .000 ft3/h

#### INLET PIPE BORE

LOW FLOW CUTOFF

Enter the inlet pipe diameter or bore for the piping section upstream of the flow measurement device.

#### Input:



Number with floating decimal point: 0.001...1000.00

Display: 4.090 in

INLET PIPE BORE

#### **ENTER BETA**

Enter the geometric ratio for the square law device being used. This value is given by the manufacturer of the orifice plate, or other square law device.

#### Note:

"Beta" is only required for measuring gas or steam with some square law flowmeters.

#### Input:



Number with fixed decimal point: 0.0000...1.0000

**Display:** 1.0000

ENTER BETA

#### **CAL. DENSITY**

Enter the calibration density. This is the fluid density upon which the flowmeter's calibration is based.

#### Input:



Number with floating decimal point in requested units: 0.000...10.000

**Display:** 8.3372 (#/gal)

CAL. DENSITY



#### **FLOW INPUT**

METER EXP. COEF.

The flowmeter pipe expands depending on the temperature of the fluid. This affects the calibration of the flowmeter.

This submenu allows the user to enter an appropriate correction factor. This is given by the manufacturer of the flowmeter. This factor converts the changes in the measuring signal per degree variation from calibration temperature. The calibration temperature is entered into the flow computer to 70 F / 21  $^{\circ}$ C.

Some manufacturers use a graph or a formula to show the influence of temperature on the calibration of the flowmeter. In this case use the following equation to calculate the meter expansion coefficient:

$$K_{\text{me}} = \frac{1 - \frac{Q(T)}{Q(T_{CAL})}}{T - T_{CAL}} \cdot 1,000,000$$

 $K_{ME}$  Me Q(T) Vo

Meter expansion coefficient

Volumetric flow at temperature T resp. T<sub>CAL</sub>

 $\begin{array}{ll} {\sf T} & {\sf Average~process~temperature} \\ {\sf T}_{\sf CAL} & {\sf Calibration~temperature} \end{array}$ 

Note:

- This correction should be set in either the flowmeter or in the flow computer.
- Entering the value "0.000" disables this function
- · Value can be calculated from Fa factor

Input:



Number with floating decimal point: 0.000...999.9 (e-6/°X)

Display:

27.111 (E-6/oF) METER EXP. COEF.



#### **FLOW INPUT**

#### **DP FACTOR**

The DP-Factor describes the relationship between the flowrate and the measured differential pressure. The flowrate is computed according to one of the three following equations, depending on the selected flow equation:

Steam (or gas) mass flow:

$$M = \frac{K_{DP} \cdot \varepsilon_1 \cdot \sqrt{2 \cdot \Delta p \cdot \rho}}{1 - K_{MF} \cdot (T - T_{CAL})}$$

Liquid volume flow:

$$Q = \frac{K_{DP} \cdot \sqrt{(2 \cdot \Delta p)/\rho}}{(1 - K_{ME} \cdot (T - T_{CAL}))}$$

Gas corrected volume flow:

$$Q_{REF} = \frac{K_{DP} \cdot \varepsilon_1 \cdot \sqrt{2 \cdot \Delta p \cdot \rho}}{\rho_{REF} \cdot (1 - K_{ME} \cdot (T - T_{CAL}))}$$

Mass flow M

Volumetric flow Q

 $\mathbf{Q}_{\text{REF}}$  Corrected volumetric flow

K<sub>DP</sub> DP-Factor

Gas expansion factor (Y<sub>4</sub>) Operating temperature T<sub>CAL</sub> Calibration temperature Differential pressure

Density at flowing conditions

Meter expansion coefficient x 10<sup>-6</sup>

Reference density



#### **FLOW INPUT**

## **DP FACTOR** (Continued)

The DP-Factor  $(K_{DP})$  can be entered manually or the flow computer can compute it for you. The information necessary for this calculation can be found on the sizing sheet from a flowmeter sizing program.

#### Note:

The following data must be entered before the flow computer can compute the DP-Factor.

Flow equation
 Fluid Data
 Beta
 Meter expansion coef. ref
 STP Ref. temperature\*, pressure
 Inlet Pipe Bore
 see "SYSTEM PARAMETER"
 see "FLUID DATA"
 see "FLOW INPUT"
 see "FLOW INPUT"
 see "OTHER INPUT"
 see "FLOW INPUT"

see "OTHER INPUT"

8. Calibration Temp.

#### **Entries:**



CHANGE FACTOR? NO CHANGE FACTOR? YES

If "YES" the flow computer will prompt you further:



COMPUTE FACTOR? NO COMPUTE FACTOR? YES

If "NO": Enter DP FACTOR

If "YES": You will be prompted for the following:



ENTER DELTA P
ENTER FLOWRATE
ENTER DENSITY
ENTER TEMPERATURE
ENTER INLET PRESSURE
ENTER ISENTROPIC EXP

<sup>\*</sup> only for gas flow equations.



#### **FLOW INPUT**

**DP FACTOR** (Continued)

The flow computer will then compute the gas expansion factor  $(\varepsilon_1)$ ,  $(Y_1)$  using one of the following equation:

Orifice Case:

$$Y_1 = \varepsilon_1 = 1 - \left[ (0.41 + 0.35 \beta^4) \cdot \frac{\Delta p}{\kappa \cdot p_1 \cdot 27.7} \right]$$

V-Cone, Venturi, Flow Nozzle, Wedge Case:

$$R = 1 - \frac{\Delta p}{27.7 \cdot p_1}$$

$$Y_{1} = \varepsilon_{1} = \sqrt{\frac{(1 - \beta^{4}) \cdot \frac{\kappa}{\kappa - 1} \cdot R^{2/\kappa} \cdot (1 - R^{(\kappa - 1)/\kappa})}{[(1 - (\beta^{4} \cdot R^{2/\kappa})) \cdot (1 - R)]}}$$

Annubar, Pitot, Target Case;

$$Y_1 = \epsilon_1 = 1.0$$

 $\begin{array}{ll} \epsilon_{_1} & \text{Gas expansion factor} \\ \beta & \text{BETA (geometric ratio)} \\ \Delta p & \text{Differential pressure} \\ \kappa & \text{Isentropic exponent} \\ p_{_1} & \text{Inlet pressure (absolute)} \end{array}$ 

**NOTE:** 27.7 is a units conversion constant from the absolute inlet pressure units to the differential pressure units. (27.7 is for psia to "H2O, use other units conversions as required.).



#### **FLOW INPUT**

**DP FACTOR** (Continued)

Verabar Case

$$Y_v = 1 + \left(18093 - .4191(1 - \beta)^2\right) \cdot \left(\frac{h_w}{27.73 \cdot P_{fa} \cdot \Gamma}\right)$$

Where:

 $\beta$  = The sensor blockage =  $\frac{4 \cdot P_{w}}{\pi \cdot D}$ 

 $\pi = 3.14159$ 

D = Internal pipe diameter in inches.

 $P_{w}$  = The sensor's probe width in inches.

 $P_{w} = 0.336$ " for a -05 sensor.

 $P_{w} = 0.614$ " for a -10 sensor.

 $P_{w}$  = 1.043" for a -15 sensor.

 $h_w$  = Verabar differential pressure in inches of H<sub>2</sub>O.

 $P_{\it fa}~$  = Absolute static pressure (high side of the Verabar) in psia.

 $\Gamma$  = k = Isentropic exponent for a real gas or steam.

#### Accelabar Case

See equations on page 93



#### **FLOW INPUT**

**DP FACTOR** (Continued)

The DP-Factor  $(K_{DP})$  is then computed using one of the following equations:

Steam:

$$K_{DP} = \frac{M \cdot (1 - K_{ME} \cdot (T - T_{CAL}))}{\epsilon_1 \cdot \sqrt{2 \cdot \Delta p \cdot \rho}}$$

Liquid:

$$K_{DP} = \frac{Q \cdot (1 - K_{ME} \cdot (T - T_{CAL}))}{\sqrt{\frac{2 \cdot \Delta p}{\rho}}}$$

Gas:

$$\mathsf{K}_{\mathsf{DP}} = \ \frac{\mathsf{Q}_{\mathsf{REF}} \boldsymbol{\cdot} \rho_{\mathsf{REF}} \boldsymbol{\cdot} (1 - \mathsf{K}_{\mathsf{ME}} \boldsymbol{\cdot} (\mathsf{T} - \mathsf{T}_{\mathsf{CAL}}))}{\epsilon_1 \boldsymbol{\cdot} \sqrt{2 \boldsymbol{\cdot} \Delta p \boldsymbol{\cdot} \rho}}$$

DP-Factor Mass flow Volumetric flow

Corrected volumetric flow Gas expansion factor Operating temperature  $\mathsf{T}_{\mathsf{CAL}}$ Calibration temperature Differential pressure Δр Density at flowing conditions ρ

Reference density

 $\rho_{\mathsf{REF}}$ 

#### Note:

The computation accuracy can be enhanced by entering up to 16 values for Reynold's Number DP-Factor in a linearization table (see "LINEARIZATION"). Each DP-Factor can be calculated using the above procedure. For every calculation, a sizing sheet is required. The results have to be entered in the linearization table afterwards.

#### **LOW PASS FILTER**

Enter the maximum possible frequency of a flowmeter with a digital output. Using the value entered here, the flow computer selects a suitable limiting frequency for low pass filter to help suppress interference from higher frequency signals.

#### Input:



Max. 5 digit number: 10...40000 (Hz):

Display: 40000 Hz

LOW PASS FILTER



#### **FLOW INPUT**

#### **LINEARIZATION**

With many flowmeters, the relationship between the flowrate and the output signal may deviate from an ideal curve (linear or squared). The flow computer is able to compensate for this documented deviation using a linearization table.

The appearance of the linearization table will vary depending on particular flowmeter selected.

#### Linear flowmeters with pulse output

The linearization table enables up to 16 different frequency & K-factor pairs. The frequency and corresponding K-factor are prompted for each pair of values. Pairs are entered in ascending order by frequency.

#### Linear Flowmeters with pulse outputs and a UVC Curve:

The linearization table enables up to 16 different Hz/cstks and K-Factor points. The Hz/cstks and corresponding K-Factors are prompted for each pair of values. Pairs are entered in ascending order by Hz/cstks.

#### Linear flowmeters with analog output (excluding Gilflo, ILVA)

The linearization table enables up to 16 different flowrate & correction factor pairs. The flowrate and corresponding correction factor are prompted for each pair of values. The correction factor  $(C_f)$  is determined as follows.

$$C_f = \frac{\text{actual flowrate}}{\text{displayed flowrate}}$$

#### Linear/squared DP transmitters with analog output

The linearization table enables up to 16 different Reynold's Number an DP factor pairs. The Reynold's Number and corresponding DP factor are prompted for each pair of values.

#### Selection:



CHANGE TABLE? NO CHANGE TABLE? YES

If "YES" the linearization table sequence of prompts will begin.

Example (for linear flowmeters with analog output)

Enter flow rate: FLOW ft3/h 3.60 POINT 0

Entry of corresponding correction factor: COR.FACTOR 1.0000 POINT 0

#### Note:

Enter "0" for the value of a pair (other than point 0) to exit the linearization table routine and use the values stored up to that point.



т	FLOW INPUT
FLOWMETER LOCATION	Enter the Flowmeter Location (Liquid Delta Heat EQ. Only)
	Selection:
	Hot, Cold:
	Display: COLD FLOWMETER LOCATION
BYPASS CAL. FACTOR	Enter the Bypass Calibration Factor.
FACTOR	Input:
	Max. 6 digit number: 0.000001999999
	Display: 1.000000 BYPASS CAL. FACTOR
BYPASS EAm FACTOR	Enter the Bypass EAm Factor.
	Input:
	Max. 6 digit number: 0.000001999999
	Display: 1.000000 BYPASS EAM FACTOR
BYPASS DC	Enter the Bypass DC Factor.
FACTOR	Input:
	Max. 6 digit number: 0.110.0
	Display: 1.000000 BYPASS DC FACTOR
BYPASS Ym FACTOR	Enter the Bypass Ym Factor.
FACTOR	Input:
	Max. 6 digit number: 0.0011.0
	Display: 1.000000 BYPASS YM FACTOR
VIEW INPUT SIGNAL	This feature is used to see the present value of the flow input signal. The type of electrical signal is determined by the flowmeter input signal type selection.
	<b>Display:</b> 150 Hz VIEW INPUT SIGNAL
VIEW HIGH RANGE SIGNAL	This feature is used to see the present value of the high range flow input signal. The type of electrical signal is determined by the flowmeter input signal type selection.
	Display: 4 mA  VIEW HIGH RANGE SIGNAL



#### 6.9 OTHER INPUT

#### **OTHER INPUT**

#### **SELECT INPUT**

In addition to the flow input, the flow computer provides two other inputs for temperature, density and/or pressure signals. In this submenu, select the particular input which is to be configured in the following submenus. Input 1 may also be used in conjunction with a steam trap monitor.

#### Selection:



- 1 (input 1: Temperature or Steam Trap Monitor)
- 2 (input 2: Pressure, Temperature 2, Density)
- 3 (input 3: Differential Pressure, Pressure, Temperature)
- 4 (input 4: Differential Pressure, Pressure, Temperature)

#### Display:

SELECT INPUT

#### **INPUT SIGNAL**

Determine the type of measuring signal produced by the temperature, pressure or density sensor.

#### Note:

When saturated steam is measured with only a pressure sensor, "INPUT 1 NOT USED" must be selected. If only a temperature sensor is used, "INPUT 2 NOT USED" must be selected.

#### Selection:

Input 1 (Temperature):



INPUT 1 NOT USED, RTD TEMPERATURE, 4-20 TEMPERATURE, 0-20 TEMPERATURE, MANUAL TEMPERATURE\*, 4-20 mA TRAP STATUS

Input 2 (Process pressure, Temperature 2, Density):



INPUT 2 NOT USED, 4-20 PRESSURE (G), 0-20 PRESSURE (G), MANUAL PRESSURE\*, 4-20 PRESSURE (ABS.), 0-20 PRESSURE (ABS.), RTD TEMPERATURE 2, 4-20 TEMPERATURE 2, 0-20 TEMPERATURE 2, MANUAL TEMPERAT. 2\*, 4-20 DENSITY, 0-20 DENSITY, MANUAL DENSITY\*

#### Input 3, 4:



INPUTS 3 & 4 NOT USED, 0-20 DIFFERENTIAL PRESSURE 4-20 DIFFERENTIAL PRESSURE,

0-20 PRESSURE (G), 4-20 PRESSURE (G), 4-20 PRESSURE (ABS.), 0-20 PRESSURE (ABS.),

0-20 TEMPERATURE, 4-20 TEMPERATURE

t this setting if a user defined fixed value for the corresponding

Display: 4-20 TEMPERATURE INPUT SIGNAL

<sup>\*</sup> Select this setting if a user defined fixed value for the corresponding measuring value is required.



#### 6.9 OTHER INPUT (Continued)

#### **OTHER INPUT**

#### **LOW SCALE VALUE**

Set the low scale value for the analog current input signal (value for 0 or 4 mA input current). The value entered here must be identical to the value set in the pressure, temperature or density transmitter.

#### Input:



Number with fixed decimal point: -9999.99...+9999.99

Display: 32.00 of

LOW SCALE VALUE

#### **FULL SCALE VALUE**

Set the full scale value for the analog current input signal (value for 20 mA input current). The value entered here must be identical to the value set in the pressure, temperature or density transmitter.

#### Input:



Number with fixed decimal point: -9999.99...+9999.99

Display: 752.00 of FULL SCALE VALUE

#### **DEFAULT VALUE**

A fixed value can be defined for the assigned variable (pressure, temperature, density). The flow computer will use this value in the following cases:

- In case of error (i.e. defective sensors). The flow computer will continue to operate using the value entered here.
- if "MANUAL TEMPERATURE", "MANUAL PRESSURE" or "MANUAL DENSITY" was selected for "INPUT SIGNAL".

#### Input:



Number with fixed decimal point: -9999.99...+9999.99

Display: 70.00 of

DEFAULT VALUE

#### STP REFERENCE

Define the STP reference conditions (standard temperature and pressure) for the variable assigned to the input. Presently, standard conditions are defined differently depending on the country and application.

#### Input:



Number with fixed decimal point: -9999.99...+9999.99

Display: 60.00 of

STP REFERENCE



#### 6.9 OTHER INPUT (Continued)

#### **OTHER INPUT** BAROMETRIC PRESS. Enter the actual atmospheric pressure. When using gauge pressure transmitters for determining gas pressure, the reduced atmospheric pressure above sea level is then taken into account. Input: Number with floating decimal point: 0.0000...10000.0Display: 1.013 bara BAROMETRIC PRESS. CALIBRATION TEMP. Enter the temperature at which the flowmeter was calibrated. This information is used in the correction of temperature induced effects on the flowmeter body dimensions. Input: Number with fixed decimal point: -9999.99...+9999.99 Display: 68.00 of CALIBRATION TEMP. This feature is used to see the present value of the compensation **VIEW INPUT SIGNAL** input signal. The type of electrical signal is determined by the compensation input signal type selection. Display: 20 mA VIEW INPUT SIGNAL TRAP ERROR DELAY Enter the TRAP ERROR DELAY (cold trap error) in HH:MM format. An alarm will only be activated if the trap is detected as continuously being in the abnormal states for a time period greater than this TRAP ERROR DELAY Display: HH:MM TRAP ERROR DELAY Enter the TRAP BLOWING DELAY (trap stuck open) in HH:MM format. TRAP BLOWING **DELAY** An alarm will only be activated if the trap is detected as continuously being in the abnormal states for a time period greater than this TRAP BLOWING DELAY time. Display: HH:MM TRAP BLOWING DELAY



6.10 PULSE OUTPUT

## **PULSE OUTPUT**

ASSIGN PULSE OUT-PUT Assign the pulse output to a measured or calculated totalizer value.

Selection:



HEAT TOTAL, MASS TOTAL, ACTUAL VOLUME TOTAL, AUX TOTALS 1, 2, 3, 4

Display: ACTUAL VOLUME TOTAL

ASSIGN PULSE OUTPUT



#### 6.10 PULSE OUTPUT (Continued)

#### **PULSE OUTPUT**

**PULSE TYPE** The pulse output can be configured as required for an external

device (i.e. remote totalizer, etc.).

ACTIVE: Internal power supply used (+24V).


PASSIVE: External power supply required.

POSITIVE: Rest value at 0V (active high).


**NEGATIVE:** Rest value at 24V (active low) or external

power supply.


#### Active:

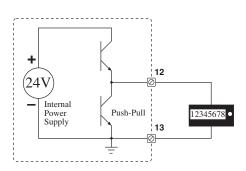


#### Passive:



#### **Positive Pulse:**



#### **Negative Pulse:**



#### Selection:



PASSIVE-NEGATIVE, PASSIVE-POSITIVE, ACTIVE-NEGATIVE, ACTIVE-POSITIVE

Display: PASSIVE/POSITIVE

PULSE TYPE



#### 6.10 PULSE OUTPUT (Continued)

#### **PULSE OUTPUT**

#### **PULSE VALUE**

Define the flow quantity per output pulse. This is expressed in units per pulse (i.e. ft<sup>3</sup> / pulse).

#### Note:

Ensure that the max. flowrate (full scale value) and the pulse value entered here agree with one another. The max. possible output frequency is 50Hz. The appropriate pulse value can be determined as follows:

Pulse value >

estimated max. flowrate (full scale)/sec required max. output frequency

#### Input:



Number with floating decimal point: 0.001...10000.0

Display:

1.000 ft3/P PULSE VALUE

#### **PULSE WIDTH**

Set the pulse width required for external devices. The pulse width limits the max. possible output frequency of the pulse output. For a certain output frequency, the max permissible pulse width can be calculated as follows:

Pulse width <

\_\_\_\_\_1

2 • max. output frequency (Hz)

#### Input:



Number with floating decimal point:

0.01...9.999 s (seconds)

Display:

.01 s

PULSE WIDTH

#### SIMULATION FREQ.

Frequency signals can be simulated in order to check any instrument that is connected to the pulse output. The simulated signals are always symmetrical (50/50 duty cycle).

#### Note:

- The simulation mode selected affects the frequency output. The flow computer is fully operational during simulation.
- Simulation mode is ended immediately after exiting this submenu.

#### Selection:



OFF, 0.0 Hz, 0.1 Hz, 1.0 Hz, 10 Hz, 50 Hz

Display:

OFF

SIMULATION FREQ>



#### 6.11 CURRENT OUTPUT

	CURRENT OUTPUT
SELECT OUTPUT	Select the current output to be configured. The flow computer offers two current outputs.
	Selection:
	1 (Current output 1) 2 (Current output 2)
	Display: 1 SELECT OUTPUT
ASSIGN CURRENT OUT	Assign a variable to the current output.
331	Selection:
	HEAT FLOW, MASS FLOW, COR. VOLUME FLOW, VOLUME FLOW, TEMPERATURE, TEMPERATURE 2, DELTA TEMPERATURE, PRESSURE, DENSITY, PEAK DEMAND, DEMAND LAST HOUR, AUX3, AUX4
	Display: VOLUME FLOW ASSIGN CURRENT OUT.
CURRENT RANGE	Define the 0 or 4 mA low scale current value. The current for the scaled full scale value is always 20 mA.
	Selection:
	0-20 mA, 4-20 mA, NOT USED
	Display: 4-20 mA CURRENT RANGE
LOW SCALE	Set the low scale value to the 0 or 4 mA current signal for the variable assigned to the current output.
	Input:
	Number with floating decimal point: -999999+999999
	Display: .000 ft3/h LOW SCALE VALUE
FULL SCALE	Set the full scale value to the 20 mA current signal for the variable assigned to the current output.
	Input: Number with floating decimal point: -999999+999999
	<b>Display:</b> 1000.00 ft3/h FULL SCALE VALUE



6.11 CURRENT OUTPUT (Continued)

	CURRENT OUTPUT
TIME CONSTANT	Select the time constant to determine whether the current output signal reacts quickly (small time constant) or slowly (large time constant) to rapidly changing values (i.e. flowrate). The time constant does not affect the behavior of the display.
	Input:
	Max. 2 digit number: 099
	Display: 1 TIME CONSTANT
CURRENT OUT VALUE	Display the actual value of the current output.
	Display: 0.000 mA CURRENT OUT VALUE
SIMULATION CURRENT	Various output currents can be simulated in order to check any instruments which are connected.
	<ul> <li>Note:</li> <li>The simulation mode selected affects only the selected current output. The flow computer is fully operational during simulation.</li> <li>Simulation mode is ended immediately after exiting this submenu.</li> </ul>
	Selection:
	OFF, 0 mA, 2 mA, 4 mA, 12 mA, 20 mA, 25 mA
	Display: OFF SIMULATION CURRENT



#### 6.12 RELAYS

#### **RELAYS**

#### **SELECT RELAY**

Set relay output to be configured. Two or three relay outputs are available.

#### Selection:



1 (Relay 1) 2 (Relay 2)

Display:

SELECT RELAY

#### **RELAY FUNCTION**

Both relays (1 and 2, and optional 3rd relay) can be assigned to various functions as required:

#### **Alarm functions**

Relays activate upon exceeding limit setpoints. Freely assignable to measured or calculated variables or totalizers.

#### Malfunction

Indication of instrument failure, power loss, etc.

#### **Pulse output**

The relays can be defined as additional pulse outputs for totalizer values such as heat, mass, volume or corrected volume.

#### Wet steam alarm

The flow computer can monitor pressure and temperature in superheated steam applications continuously and compare them to the saturated steam curve. When the degree of superheat (distance to the saturated steam curve) drops below 5 °C, the relay switches and the message "WET STEAM ALARM" is displayed.

#### NOTE:

Relay response time is affected by the value entered for display damping. The larger the display damping value, the slower the relay response time will be. This is intended to prevent false triggering of the relays. Enter a display damping factor of zero (0) for fastest relay response time.

#### Selection:

Different selections are available depending on the flow equation and type of transmitter selected.



HEAT TOTAL, MASS TOTAL, ACTUAL VOLUME TOTAL, HEAT FLOW, MASS FLOW, COR. VOL. FLOW, AUX TOTAL 1, 2, 3, 4 VOLUME FLOW, TEMPERATURE 2, DELTA TEMPERATURE, PRESSURE, DENSITY, WET STEAM ALARM, MALFUNCTION, PEAK DEMAND, DEMAND LAST HOUR, AUX 3, AUX 4, AUX 3-4

Display: VOLUME FLOW

RELAY FUNCTION



# 6.12 RELAYS (Continued)

# **RELAYS**

#### **RELAY MODE**

Set when and how the relays are switched "ON" and "OFF". This defines both the alarm conditions and the time response of the alarm status.

#### Selection:



HI ALARM, FOLLOW LO ALARM, FOLLOW HI ALARM LATCH LO ALARM LATCH RELAY PULSE OUTPUT

#### Note:

 For relay functions "MALFUNCTION" and "WET STEAM ALARM". There is no difference between the modes "HI......" and "LO......":

(i.e. HI ALARM FOLLOW = LO ALARM FOLLOW, HI ALARM LATCH = LOW ALARM LATCH)

 Relay mode "RELAY PULSE OUTPUT" defines the relay as an additional pulse output.

Display: HI ALARM, FOLLOW

RELAY MODE

#### LIMIT SETPOINT

After configuring a relay for "Alarm indication" (limit value), the required setpoint can be set in this submenu. If the variable reaches the set value, the relay switches and the corresponding message is displayed.

Continuous switching near the setpoint can be prevented with the "HYSTERESIS" setting.

#### Note:

- Be sure to select the units (SYSTEM UNITS) before entering the setpoint in this submenu.
- Normally open or normally closed contacts are determined when wiring.

# Input:



Number with floating decimal point: -999999...+999999

**Display:** 99999.0 ft3/h

LIMIT SETPOINT



# 6.12 RELAYS (Continued)

# **RELAYS**

#### **PULSE VALUE**

Define the flow quantity per output pulse if the relay is configured for "RELAY PULSE OUTPUT".. This is expressed in units per pulse (i.e. ft³ / pulse).

#### Note:

Ensure that the max. flowrate (full scale value) and the pulse value entered here agree with one another. The max. possible output frequency is 5Hz. The appropriate pulse value can be determined as follows:

Pulse value > <u>estimated max. flowrate (full scale)/sec</u> required max. output frequency

Input:



Number with floating decimal point: 0.001...1000.0

Display: 1.000 ft3/P PULSE VALUE

#### **PULSE WIDTH**

Enter the pulse width. Two cases are possible:

# Case A: Relay set for "MALFUNCTION" or limit value

The response of the relay during alarm status is determined by selecting the pulse width.

- Pulse width = 0.0 s (Normal setting) Relay is latched during alarm conditions.
- Pulse width = 0.1...9.9 s (special setting)
   Relay will energize for selected duration, independent of the cause of the alarm. This setting is only used in special cases (i.e. for activating signal horns).

# Case B: Relay set for "RELAY PULSE OUTPUT"

Set the pulse width required for the external device. The value entered here can be made to agree with the actual flow amount and pulse value by using the following:

Pulse width < 1 ... 2 • max. output frequency (Hz)

Input:



Number with floating decimal point: 0.01...9.99 s (pulse output)

0.00...9.99 s (all other configurations)

Display: .01 s
PULSE WIDTH

70



# 6.12 RELAYS (Continued)

	RELAYS
HYSTERESIS	Enter a hysteresis value to ensure that the "ON" and "OFF" switchpoints have different values and therefore prevent continual and undesired switching near the limit value.
	Input:
	Number with floating decimal point: 0.000999999
	<b>Display:</b> 0.000 psia HYSTERESIS
RESET ALARM	The alarm status for the particular relay can be cancelled here if (for safety reasons) the setting ", LATCH" has been selected in the submenu "RELAY MODE". This ensures that the user is actively aware of the alarm message.
	<ul> <li>When in the HOME position, press the ENTER key to acknowledge and clear alarms.</li> <li>The alarm status can only be permanently cancelled if the cause of the alarm is removed.</li> </ul>
	Selection:
	RESET ALARM? NO RESET ALARM? YES
	Display: RESET? NO RESET ALARM
SIMULATE RELAY	As an aid during start-up, the relay output may be manually controlled independent of it's normal function.
	Selection:
	NORMAL, ON, OFF
	Display: NORMAL SIMULATE RELAY



# 6.13 COMMUNICATION

	COMMUNICATION
	COMMUNICATION
RS-232 USAGE	The flow computer can be connected via RS-232 interface to a personal computer or printer.
	Selection:
	COMPUTER, PRINTER, MODEM
	<b>Display:</b> COMPUTER RS-232 USAGE
DEVICE ID	Enter the unique unit I.D. tag number for the flow computer if a number of flow computers are connected to the same interface.
	Selection:
	Max. 2 digit number: 099
	Display: 1 DEVICE ID
BAUD RATE	Enter the baud rate for serial communication between the flow computer and a personal computer, modem or printer.
	Selection:
	9600, 2400, 1200, 300
	Display: 9600 BAUD RATE
PARITY	Select the desired parity. The setting selected here must agree with the parity setting for the computer, modem or printer.
	Selection:
	NONE, ODD, EVEN
	Display: NONE PARITY
HANDSHAKE	The control of data flow can be defined. The setting required is determined by the handshaking of the printer.
	Selection:
	NONE, HARDWARE
	Display: NONE HANDSHAKE



#### COMMUNICATION **PRINT LIST** Select the variables or parameters which are to be logged or printed via the RS-232 interface. Selection (Procedure): CHANGE? NO **CHANGE? YES** If YES selected, the available variables are displayed one after another. Only some of the following options are available depending on the flow equation selected: ENTER Store option advance to next PRINT HEADER? NO(YES) **INSTRUMENT TAG?** NO(YES) NO(YES) FLUID TYPE? TIME? NO(YES) DATE? NO(YES) TRANSACTION NO.? NO(YES) **HEAT FLOW?** NO(YES) **HEAT TOTAL?** NO(YES) **HEAT GRAND TOTAL?** NO(YES) MASS FLOW? NO(YES) MASS TOTAL? NO(YES) MASS GRAND TOTAL? NO(YES) **VOLUME FLOW?** NO(YES) **VOLUME TOTAL?** NO(YES) VOL. GRAND TOTAL? NO(YES) TEMPERATURE? NO(YES) **TEMPERATURE 2?** NO(YES) **DELTA TEMPERATURE?** NO(YES) PROCESS PRESSURE? NO(YES) NO(YES) **DENSITY?** SPEC. ENTHALPY? NO(YES) DIFF. PRESSURE? NO(YES) **ERRORS?** NO(YES) ALARMS? NO(YES) PEAK DEMAND? NO(YES) DEMAND LAST HOUR? NO(YES) PEAK TIME STAMP? NO(YES) PEAK DATE STAMP? NO(YES) TRAP MONITOR? NO(YES) NO(YES) **AUX 1 TOTAL? GRAND AUX 1 TOTAL?** NO(YES) AUX 3? NO(YES) AUX 4? NO(YES) AUX 2 TOTAL? NO(YES) **GRAND AUX 2 TOTAL?** NO(YES) AUX 3 TOTAL? NO(YES) GRAND AUX 3 TOTAL? NO(YES) **AUX 4 TOTAL?** NO(YES) GRAND AUX 4 TOTAL? NO(YES) "YES" + ENTER: Parameter is added to the print list "NO" + ENTER: parameter is not printed After the last option the display advances to the next submenu.



	COMMUNICATION		
	COMMONICATION		
PRINT INITIATE	Datalogger and/or printing variables and parameters over the serial RS-232 interface can be initiated at regular intervals (INTERVAL) or daily at a fixed time (TIME OF DAY) or by front key depression.		
	<b>Note:</b> Printing can always be initiated by pressing the PRINT key.		
	Selection:		
	NONE, TIME OF DAY, INTERVAL, ENABLE PRINT KEY		
	Display: TIME OF DAY PRINT INITIATE		
DATALOG ONLY	Select YES or NO for Datalog Only prompt.		
	Selection:  YES - Data is logged but no information is sent on print event.  NO - Data is logged and immediately transmitted.		
	Display: YES DATALOG ONLY		
PRINT INTERVAL	Define a time interval. Variables and parameters will be periodically logged at regular intervals of this value of time. The setting "00:00" deactivates this feature.		
	Input:		
	Time value in hours & minutes (HH:MM).		
	Display: 00:00 PRINT INTERVAL		
PRINT TIME	Define the time of day that variables and parameters will be logged out daily.		
	Input:		
	Time of day in hours & minutes (HH:MM).		
	Display: 00:00 PRINT TIME		
DATALOG FORMAT	Define the Datalog Format.		
	DATABASE - Data sets sent in comma seperated variable format.  PRINTER - Data sets sent in comma seperated variable format. Individual output variables sent with text label and units suitable for printing.		
	Display: PRINTER DATALOG FORMAT		



	COMM	UNICATION
		SMOANON
SEND INC. TOT. ONLY	Select YES or	NO for Send Inc. Tot. Only
		Unit will send Inc. Tot. Only Unit will not send Inc. Tot. Only
	Display:	YES SEND INC. TOT. ONLY
INC ONLY SCALER	Enter multiplyir	ng factor for Inc Only Scaler
	Selection: X1, X1	0, X100, X1000
	Display:	X1 INC ONLY SCALER
CLEAR DATALOG	Select YES or	NO for Clear Datalog
		Unit wil clear datalog contents Unit will not clear datalog contents
	Display:	YES CLEAR DATALOG
MODEM CONTROL	Select YES or NO for Modem Control.	
(Modem)	Selection: YES - NO -	Modem initializationand dialing commands are set during transactions.  Modem initializationand dialing commands are NC sent during transactions.
	Display:	YES MODEM CONTROL
DEVICE MASTER (Modem)	Select YES or	NO for Device Master
(	Selection: YES - NO -	Sets sole master device responsible for initializing modem.  Device will not be used to initialize modem.
	Display:	YES



MODEM AUTO ANSWER	Select YES or	NO for Modem Auto Answer
(Modem)	Selection: YES - NO -	Modem will answer incoming calls.  Modem will not answer incoming calls.
	Display:	YES MODEM AUTO ANSWER
CALL OUT NO (Modem)	Define a Call Caddress to be	Out Number. Enter the telephone number or email called.
	Input:	
	max. 1	6 digit phone number
	Display:	### ### ### ### CALL OUT NO
CALL OUT TIME (Modem)		Out Time. Enter scheduled call out time (24 hr form unit to call out to a remote PC.
	Input:	
	Time of	of day in hours & minutes (HH:MM).
	Display:	00:00 CALL OUT TIME
CALL ON ERROR (Modem)	Select YES or	NO for Call On Error prompt.
(mouton)	Selection: YES -	Unit will call out to remote PC if a designated calle error occurs. Unit will not call out to remote PC if error occurs.
	Display:	YES CALL ON ERROR
NUMBER OF REDIALS (Modem)	Enter the Num communication Input:	ber Of Redials desired in the event of a busy signal on problem.
	max. 2	2 digit number
	Display:	3 NUMBER OF REDIALS



N		СОММ	UNICATION
Ī	HANG UP IF INACTIVE	Select YES or I	NO for Hang Up If Inactive
	(Modem)	Selection: YES - NO -	Unit will hang up if remote PC fails to respond within several minutes after connection is established. Unit will not hang up if remote PC fails to respond after connection is established.
		Display:	YES HANG UP IF INACTIVE



#### COMMUNICATION **ERROR MASK** Select YES or NO for Change Error Mask? prompt (Modem) Selection: YES, NO Display: 00:00 CALL OUT TIME If YES selected, define the conditions that you wish to call out on. The possible conditions are displayed one after another. Store option Change? advance to next **POWER FAILURE** NO(YES) WATCHDOG TIMEOUT NO(YES) NO(YES) NO(YES) COMMUNICATION ERROR **CALIBRATION ERROR** PRINT BUFFER FULL NO(YES) TOTALIZER ERROR NO(YES) NO(YES) WET STEAM ALARM NO(YES) NO(YES) OFF FLUID TABLE FLOW IN OVERRANGE INPUT1 OVERRANGE NO(YES) **INPUT2 OVERRANGE** NO(YES) NO(YES) FLOW LOOP BROKEN LOOP1 BROKEN NO(YES) LOOP2 BROKEN NO(YES) RTD 1 OPEN NO(YES) RTD 1 SHORT NO(YES) RTD 2 OPEN NO(YES) RTD 2 SHORT NO(YES) PULSE OUT OVERRUN NO(YES) lout 1 OUT OF RANGE NO(YES) NO(YES) NO(YES) lout 2 OUT OF RANGE **RELAY 1 HIGH ALARM RELAY 1 LOW ALARM** NO(YES) **RELAY 2 HIGH ALARM** NO(YES) **RELAY 2 LOW ALARM** NO(YES) NO(YES) NO(YES) **RELAY 3 HIGH ALARM** RELAY 3 LOW ALARM TRAP ERROR NO(YES) TRAP BLOWING NO(YES) **INPUT 3 OVERRANGE** NO(YES) **INPUT 3 BROKEN** NO(YES) **INPUT 4 OVERRANGE** NO(YES) INPUT 4 BROKEN NO(YES) 24VDC OUT ERROR NO(YES) PULSE IN ERROR NO(YES) INPUT 1 Vin ERROR NO(YES) INPUT 1 lin ERROR NO(YES) INPUT 2 lin ERROR NO(YES) INPUT 2 RTD ERROR NO(YES) INPUT 3 lin ERROR NO(YES) **INPUT 3 RTD ERROR** NO(YES) PULSE OUT ERROR NO(YES) **lout 1 ERROR** NO(YES) lout 2 ERROR NO(YES) NO(YES) **RELAY 1 ERROR RELAY 2 ERROR** NO(YES) RS-232 ERROR NO(YES) A/D MALFUNCTION NO(YES) PROGRAM ERROR NO(YES) SETUP DATA LOST NO(YES) TIME CLOCK LOST NO(YES) **DISPLAY MALFUNCTION** NO(YES) NO(YES) RAM MALFUNCTION DATALOG LOST NO(YES)



# 6.14 NETWORK CARD

	NETWORK CARD
PROTOCOL	The flow computer can be connected via RS-485 interface to a
	personal computer and communicate via Modbus RTU protocol.  Selection:
	MODBUS RTU
	Display: MODBUS RTU
	PROTOCOL
DEVICE ID	Enter the unique unit I.D. tag number for the flow computer if a number of flow computers are connected to the same interface.
	Selection:
	3 digit number: 1247
	Display: 1  DEVICE ID
BAUD RATE	Enter the baud rate for serial communication between the flow computer and a personal computer.
	Selection:
	19200, 9600, 4800, 2400, 1200, 600, 300
	<b>Display:</b> 9600 BAUD RATE
PARITY	Select the desired parity. The setting selected here must agree with the parity setting for the computer.
	Selection:
	NONE, ODD, EVEN
	Display: NONE PARITY



# 6.15 AUXILIARY TOTALIZERS

(This menu does not appear in the Standard SUPERtrol 2 unit and user manual)

# **AUXILIARY TOTALIZERS**

**TOTAL SELECT** 

The "Total Select" allows you to select which auxiliary totalizer you want to set up. Up to four auxiliary totalizers are available.

Selection:



1, 2, 3 or 4

Display:

TOTAL SELECT

Enter the number of the auxiliary totalizer.

**PULSE SCALER** 

A pulse scaler may be entered to scale the .....

Input:



Non-zero positive number (pulses per unit label created by user)

Display:

1000

PULSE SCALER

**LABEL** 

Each auxiliary totalizer can be assigned a unique label for easy identification

Input:



Alpha-numeric Characters are created sequentially using CLEAR, ^/v keys, and Enter

Display:

TOTAL1

LABEL

**UNITS LABEL** 

Enter text to label the unit of measure (i.e. GAL for Gallons)



Alpha-numeric Characters are created sequentially using CLEAR, ^/v keys, and Enter

Display:

GAL

UNITS LABEL



# 6.15 AUXILIARY TOTALIZERS (Continued)

# **AUXILIARY TOTALIZERS** MAX. DEC. POINT Enter the number of decimal places for totalizer display. Note: • The number of decimal places applies to all totalizers. • The number of decimal places is automatically reduced if there is insufficient space available on the display for large numbers. • The number of decimal places set here does not affect the functions set in the programming setup. Selection: 0, 1, 2, 3 or 4 (decimal places) Display: 3 MAX. DEC. POINT **TOTAL ROLLOVER** Enter the value of which the totalizer will "roll over". LIMIT **INPUT**: CLEAR Positive Number Display: 999999 TOTAL ROLLOVER LIMIT



# 6.16 SERVICE & ANALYSIS

	SERVICE & ANALYSIS	
EXAMINE AUDIT TRAIL	Two counters contain the number of times the calibration and/or configuration parameters have been changed. Changes in important calibration and configuration data are registered and displayed ("electronic stamping"). These counters advance automatically. These counters cannot be reset so that unauthorized changes can be identified.	
	Example:	
	CAL 015 CFG 076	
	<b>Display:</b> CAL 015 CFG 076 EXAMINE AUDIT TRAIL	
ERROR LOG	A list of errors that have occurred can be viewed and cleared.	
	Selection:	
	VIEW? NO VIEW? YES	
	If "YES" is selected the error log can be viewed and errors individually cleared (if editing enabled with Service Code).	
	Display: CLEAR? NO POWER FAILURE	
SOFTWARE VERSION	Display the software version of the flow computer. (Contact local agent for upgrade information)	
	Example:	
	02.00.14	
	Display: 02.00.14 SOFTWARE VERSION	
HARDWARE VERSION	Display the hardware version of the flow computer. (Contact local agent for upgrade information)	
	Example:	
	01.00.01	
	Display: 01.00.01 HARDWARE VERSION	



# **SERVICE & ANALYSIS**

# PERFORM CALIBRATION

This feature allows the calibration of the units inputs and outputs.

## NOTE:

This menu item will only appear if editing is enabled with Service Code.

#### **CAUTION:**

The calibration should only be performed by qualified technicians. The calibration procedure requires the use of precision Voltage & Current sources, a frequency generator, a  $100\Omega$  resistor (± 0.1%), an ammeter, an ohmmeter and a frequency counter. If calibration fails, use the "Restore Factory Calibration" feature.

## Selection:



NO. YES

Display: PERFORM? YES CALIBRATION

# VOLTAGE INPUT CALIBRATION

Connect your voltage source to (+) Pin 2 and (-) Pin 4.

LEARN App

Apply 0.0 Volts. Press enter to learn 0.0 Volts.

0.0 V

(Pin 2) Display: RESULT: 0.000 V

LEARN 0.0 V PIN 2

LEARN 10.0 V Apply 10.0 Volts. Press enter to learn 10.0 Volts.

(Pin 2) Display:

Display: RESULT: 10.000 V

LEARN 10.0 V PIN 2

# CURRENT INPUT CALIBRATION

Connect your current source to (+) Pin 2 and (-) Pin 4.

LEARN

Apply 0.0 mA. Press enter to learn 0.0 mA.

0.0 mA

(Pin 2) Display: RESULT: 0.000 mA

LEARN 0.0 mA PIN 2

LEARN 20.0 mA Apply 20.0 mA. Press enter to learn 20.0 mA.

(Pin 2) Displ

Display: RESULT: 20.000 mA

LEARN 20.0 mA PIN 2

Connect your current source to (+) Pin 3 and (-) Pin 4.

LEARN 0.0 mA Apply 0.0 mA. Press enter to learn 0.0 mA.

(Pin 3) Dis

Display: RESULT:

0.000 mA

20.000 mA

LEARN 0.0 mA PIN 3

LEARN 20.0 mA Apply 20.0 mA. Press enter to learn 20.0 mA.

RESULT:

LEARN 20.0 mA PIN 3

(Pin 3) Display:



	SERVICE & ANALYSIS	
CURRENT INPUT CALIBRATION (continued)	Connect your current source to (+) Pin 7 and (-) Pin 4.	
LEARN 0.0 mA (Pin 7)	Apply 0.0 mA. Press enter to learn 0.0 mA.  Display: RESULT: 0.000 mA  LEARN 0.0 mA PIN 7	
LEARN 20.0 mA (Pin 7)	Apply 20.0 mA. Press enter to learn 20.0 mA.  Display: RESULT: 20.000 mA  LEARN 20.0 mA PIN 7	
LEARN 0.0 mA (Pin 8)	Apply 0.0 mA. Press enter to learn 0.0 mA.  Display: RESULT: 0.000 mA  LEARN 0.0 mA PIN 8	
LEARN 20.0 mA (Pin 8)	Apply 20.0 mA. Press enter to learn 20.0 mA.  Display: RESULT: 20.000 mA  LEARN 20.0 mA PIN 8	
LEARN 0.0 mA (Pin 11)	Connect your current source to (+) Pin 11 and (-) Pin 4.  Apply 0.0 mA. Press enter to learn 0.0 mA.	
LEARN 20.0 mA (Pin 11)	Display: RESULT: 0.000 mA  LEARN 0.0 mA PIN 11  Apply 20.0 mA. Press enter to learn 20.0 mA.	
	Display: RESULT: 20.000 mA LEARN 20.0 mA PIN 11	
RTD INPUT CALIBRATION	Connect a $100\Omega$ resistor between Pins 6 & 7 and place a jumper wire between Pins 5 & 6.	
Temperature Input	Press enter to learn RTD resistance on Pins 5, 6 & 7.	
(Pins 5, 6 & 7)	<b>Display:</b> RESULT: 100.00 ohm LEARN RTD PIN 5-6-7	
	Connect a $100\Omega$ resistor between Pins 10 & 11 and place a jumper wire between Pins 9 & 10.	
Temperature 2 Input	Press enter to learn RTD resistance on Pins 9, 10 & 11.	
(Pins 9, 10 & 11)	<b>Display:</b> RESULT: 100.00 ohm LEARN RTD PIN 9-10-11	



	SERVICE & ANALYSIS		
ANALOG OUTPUT 1 CALIBRATION (Pins 14 & 16)	Connect your Ammeter (current meter) to (+) Pin 14 and (-) Pin 16.		
ADJ 4 mA (Pins 14 & 16)	Observe the reading on the ammeter. Using the numeric keys, enter the actual reading (in mA) and press enter.		
(1 110 14 & 10)	Display: ACTUAL? 4.025 mA ADJ 4mA PIN 14-16		
ADJ Observe the reading on the ammeter. Using the numer the actual reading (in mA) and press enter.  (Pins 14 & 16)			
(1 110 14 & 10)	Display: ACTUAL? 20.017 mA ADJ 20mA PIN 14-16		
ANALOG OUTPUT 2 CALIBRATION (Pins 15 & 16)	Connect your Ammeter (current meter) to (+) Pin 15 and (-) Pin 16.		
ADJ 4 mA (Pins 15 & 16)	Observe the reading on the ammeter. Using the numeric keys, enter the actual reading (in mA) and press enter.		
(1 1113 13 0 10)	Display: ACTUAL? 4.041 mA ADJ 4mA PIN 15-16		
ADJ 20 mA (Pins 15 & 16)	Observe the reading on the ammeter. Using the numeric keys, enter the actual reading (in mA) and press enter.		
(Pins 15 & 16)	Display: ACTUAL? 20.006 mA ADJ 20mA PIN 15–16		
FREQUENCY OUTPUT SIMULATION (Pins 12 & 13)	Connect your frequency meter to (+) Pin 12 and (-) Pin 13. This feature is used to check the pulse output. Calibration is not performed.		
	Selection:		
	OFF, 50 Hz, 10 Hz, 1.0 Hz, 0.1 Hz, 0.0 Hz		
	Display: OFF SIMULATION FREQ.		



	SERVICE & ANALYSIS	
RELAY TEST  RELAY 1	Using the ohmmeter, check continuity between pins (17 & 18) and 18 & 19 while turning ON & OFF Relay 1 using the up/down arrow keys. Press enter when test is completed.	
TEST (Pins 17, 18 & 19)	Display: RELAY 1: OFF TEST RELAY 1	
RELAY 2 TEST (Pins 20, 21 & 22)	Using the ohmmeter, check continuity between pins 20 & 21 and (21 & 22) while turning ON & OFF Relay 2 using the up/down arrow keys. Press enter when test is completed.	
	Display: RELAY 2: OFF TEST RELAY 2	
RELAY 3 TEST (Pins 19 & 20)	Using the ohmmeter, check continuity between pins 19 & 20 while turning ON & OFF Relay 2 using the up/down arrow keys. Press enter when test is completed.	
	Display: RELAY 3: OFF TEST RELAY 3	
PULSE INPUT TEST	Using the frequency generator, apply a frequency to (+) Pin 2 and (-) Pin 4. Compare the displayed frequency with the input frequency.	
FREQUENCY (Pins 2 & 4)	Display: 0.000 Hz INPUT FREQUENCY	
SAVE AS FACTORY CALIBRATION	The calibration procedure is complete. You may now choose to save this calibration as the Factory Calibration.	
	Display: NO SAVE AS FACTORY CAL.	
RESTORE FACTORY CALIBRATION	If you are not satisfied with the calibration results you can restore the last saved Factory Calibration.	
	Display: NO RESTOR FACT. CALIB.	
SET NEXT CALIBRATION DATE	This feature allows you to enter the next date you would like the unit to be calibrated. This is very useful when components must be periodically calibrated. This date is included on Print Maint. and Setup Reports.	
	Display: 10 DEC 1999 NEXT CALIBRATION	
PRINT MAINT. REPORT	This feature allows you to transmit a maintenance report over the RS-232 port for printout. The report includes error messages and calibration information	
	Display: NO PRINT MAINT. REPORT	



	SERVICE & ANALYSIS	
PRINT SYSTEM SETUP	This feature allows the units setup parameters to be printed to a connected printer.	
	Display: NO PRINT SYSTEM SETUP	
SELF CHECK	This feature starts the self-test of the flow computer. A test is internally conducted on the EEPROM, A/D Converter, Time/Date clock, Display and several other hardware circuits.	
	Display: RUN? NO SELF CHECK	
SERVICE TEST  NOTE:	The Service Test requires a special calibration apparatus that connects to the rear terminals of the unit. This is used to determine whether the flow computer or the field wiring is faulty. The calibration apparatus may be purchased from your local distributor.	
This will only appear if editing is enabled with the Service Code.	<b>Display:</b> RUN? NO SERVICE TEST	



# 7. Principle Of Operation

# General Operation

#### 7.1 General:

The ES762-ST2 Flow Computer uses several internal calculations to compute the compensated flow based on specific data input. Several computations are performed to arrive at the uncompensated flow, temperature, pressure, density and viscosity. This information is then used to compute the Mass Flow or Heat Flow.

#### 7.2 Square Law Flowmeter Considerations:

# Square Law Flowmeter Considerations

Head class flowmeters are supplied by the manufacturers with a 4-20 mA output span which is already in flow units. The ES762-ST2 permits the user to enter this flowmeter information directly. However, closely associated with this information is the density that was assumed during flowmeter calibration. This information must also be input if the user is to obtain maximum accuracy.

It is assumed that the user has the printout from a standardized sizing program for the particular device he will be using. Such standardized printouts list all the necessary information which the user will then be prompted for.

Several specialized flow equations are listed that are not intended for the standard unit but to be offered to appropriate OEMs or as special order items. These are designated by a "†".

# **Note concerning Fluid Information**

The user will be prompted for Fluid Information during the setup of the instrument. SeeAppendix A for the properties of several common fluids.

# **Flow Equations**

#### 7.3 Flow Equations:

# 7.3.1 Flow Input Computation

# Flow Input Computation:

#### Linear

Input Flow = [% input span • (flow FS - flow low scale)]+ flow low scale

## Square Law without External SQRT Extractor

delta P = [(% input span) • (flow FS - flow low scale)] + flow low scale

#### Square Law with External SQRT Extractor

delta  $P = [(\% \text{ input span})^2 \cdot (\text{ flow FS - flow low scale})] + \text{flow low scale}]$ 

**NOTE:** For stacked differential pressure option, the appropriate input sensor signal is used in calculations at all times to maximize accuracy.



#### 7.3.2 Pressure Computation

# **Pressure Input:**

# General Case

Pf = [% input span • (Pres full scale - Pres low scale ] + Pres low scale

# Gauge Case

Pf = Pf + Barometric

## Manual Case or In Event of Fault

Pf = Pressure Default Value

## 7.3.3 Temperature Computation

# **Temperature Computation:**

# **General Case**

Tf = [% input span • (Temp full scale - Temp low scale ] + Temp low scale RTD Case

Tf = f ( measured input resistance)

# Manual Case or In Event of Fault

Tf = Temperature Default Value

# Delta Temp Case

Delta Temp = T2 - T1 Flowmeter location = cold
Delta Temp = T1 - T2 Flowmeter location = hot

#### 7.3.4 Density/Viscosity Computation

# **Density Computation:**

#### Water Case

density water = density (Tf)

# Liquid Case

density = reference density • ( 1 - Therm.Exp.Coef. •( Tf -  $T_{ref}$ ))<sup>2</sup>

## Steam Case

density = 1/ specific volume(Tf, Pf)

#### Gas Case

density = reference density • 
$$\frac{Pf}{P_{ref}}$$
 •  $\frac{(T_{ref} + 273.15)}{(Tf + 273.15)}$  •  $\frac{Z_{ref}}{Zf}$ 

**NOTE:** Therm.Exp.Coef is (x 10<sup>-6</sup>)



# 7.3.4 Density/Viscosity Computation (continued)

# Viscosity (cP) Computation:

NOTE:

cP viscosity = A • exp 
$$\frac{B}{(Tf + 459.67)}$$

Viscosity cS =  $\frac{\text{viscosity (in cP)}}{\text{density of water @ 4°C}}$ 

Gas Case

cP viscosity =  $A \cdot (Tf + 459.67)^B$ 

Steam Case

cP viscosity = f(Tf, Pf)

7.3.5 Mass Flow Computation **Mass Flow Computations:** 

mass flow = volume flow • density

7.3.6 Comb. Heat Flow Computation **Combustion Heat Flow Computations:** 

combustion heat flow = mass flow • combustion heating value



#### 7.3.7 Heat Flow Computation

# **Heat Flow Computation:**

# Steam Heat

heat flow = mass flow • total heat steam(Tf, Pf)

# Steam Net Heat

heat flow = mass flow • [total heat steam(Tf, Pf) - heat saturated water(Pf)]

# Steam Delta Heat

heat flow = mass flow • [total heat saturated steam (Pf) - heat water (Tf)]

#### 7.3.8 Sensible Heat Flow Computation

# Sensible Heat Flow:

Special Case for Water

heat flow = mass flow (Tf) • enthalpy (Tf)

# 7.3.9 Liquid Delta Heat Computation

# **Liquid Delta Heat:**

## General Case

heat flow = mass flow • specific heat • ( T2 - Tf )

# Water Case

heat flow = mass flow(Tf) • [enthalpy (T2) - enthalpy (Tf)]

# 7.3.10 Expansion Factor Computation for Square Law Flowmeters

# **Expansion Factor Computation for Square Law Flowmeters:**

In the following Equations, delta P is assumed in (" $H_2O$ ), Pf is in PSIA, 27.7 is a PSIA to (" $H_2O$ ) units conversion.

Gas, Steam Case

## Orifice Case

Y = 1.0 -(0.41 + 0.35•B<sup>4</sup>) • 
$$\frac{\text{delta P}}{\text{isentropic exponent • Pf • 27.7}}$$

V-Cone, Venturi, Flow Nozzle, Wedge Case:

$$R = 1 - \frac{\Delta p}{27.7 \cdot p_f}$$

$$Y = \sqrt{\frac{(1-\beta^4) \cdot \frac{\kappa}{\kappa-1} \cdot R^{2/\kappa} \cdot (1-R^{(\kappa-1)/\kappa})}{[(1-(\beta^4 \cdot R^{2/\kappa})) \cdot (1-R)]}}$$

**NOTE:** An equivalent formula is used by V-Cone flowmeter types. <u>Target, Annubar, Pitot Case:</u>

$$Y = 1.0$$



7.3.10
Expansion Factor
Computation for
Square Law
Flowmeters
(continued)

Verabar Case

$$Y_v \!=\! 1 \!+\! \left(\! 18093 \!-\! .4191 (1\!-\!\beta)^2 \right) \!\cdot\! (\frac{h_w}{27.73 \!\cdot\! P_{fa} \!\cdot\! \Gamma})$$

Where:

$$\beta$$
 = The sensor blockage =  $\frac{4 \cdot P_{w}}{\pi \cdot D}$ 

 $\pi = 3.14159$ 

D = Internal pipe diameter in inches.

 $P_{\scriptscriptstyle W}$  = The sensor's probe width in inches.

 $P_{w} = 0.336$ " for a -05 sensor.

 $P_{w}$  = 0.614" for a -10 sensor.

 $P_{w}$  = 1.043" for a -15 sensor.

 $h_w$  = Verabar differential pressure in inches of H<sub>2</sub>O.

 $P_{\it fa}~$  = Absolute static pressure (high side of the Verabar) in psia.

 $\Gamma$  = k = Isentropic exponent for a real gas or steam.



7.3.10
Expansion Factor
Computation for
Square Law
Flowmeters
(continued)

#### Accelabar Case

For 1 inch Accelabar Body

$$Y_a = .9824 - .5890 \cdot \left( \frac{h_w}{27.73 \cdot P_{fta} \cdot \gamma} \right)$$

For 2 inch Accelabar Body

$$Y_a = .9730 - \left(.5850 \cdot \left(\frac{h_w}{27.73 \cdot P_{fia} \cdot \gamma}\right)\right)$$

Where:

 $Y_a$  = Accelabar gas expansion factor (dimensionless)

h<sub>w</sub> = Differential pressure (inches H<sub>2</sub>O @ 68°F)

 $P_{fa}$  = Flowing Pressure in Accelabar Throat (psia)

= Flowing pressure in psig + atmospheric pressure in psi

 $\gamma$  = Isentropic Exponent for a real gas

For 3 inch to 12 inch Accelabar Body

$$Y_a = 1 - Y_{a-coef} \cdot \left(\frac{h_w}{27.73 \cdot P_{fia} \cdot \Gamma}\right)$$

Where:

 $Y_a$  = General Accelabar gas expansion factor (dimensionless)

 $Y_{a-coef}$  = Accelabar gas expansion factor coefficient (dimensionless)

 $h_w$  = Differential pressure (inches H<sub>2</sub>O @ 68°F)

 $P_{fia}$  = Flowing Accelerator Throat Pressure (psia)

= Flowing throat pressure in psig + atmospheric pressure in psi

 $\Gamma$  = Isentropic Exponent for a real gas or steam

Accelabar Size	$Y_{a-coef}$
3"	0.7432
4"	0.6986
6"	0.6865
8"	0.6407
10"	0.6095
12"	0.5891



#### 7.3.11 **Uncompensated Flow** Computation

# **Uncompensated Flow Computation:**

# Pulse, Linear Case

# Analog, Linear Case

volume flow = 
$$\frac{\text{Measured Input Flow}}{[1 - \text{Meter Exp.Coeff.} \bullet (\text{Tf} - T_{cal})]}$$

# Square Law Case

volume flow = 
$$\frac{\text{DP Factor}}{[1 - \text{Meter Exp.Coeff.} \cdot (\text{Tf - T}_{cal})]} \cdot \text{Y} \cdot \left[ \frac{2 \cdot \text{delta P}}{\text{density}} \right]^{1/2}$$

# Square Law, Target Flowmeter Case

volume flow = input flow • 
$$\frac{\sqrt{\text{density cal.}}}{\sqrt{\text{density flowing}}}$$

# Pulse, Linearization Case

# Analog, Linearization Case

volume flow = 
$$\frac{\text{Input Flow • Correction Factor (Input Flow )}}{[1 - \text{Meter Exp.Coeff. • ( Tf - T}_{cal})]}$$

# Square Law, Linearization Case

$$\frac{\text{Square Law, Linearization Case}}{\text{volume flow}} = \frac{\text{DP Factor(RN)}}{[1 - \text{Meter Exp.Coeff.} \bullet (\text{Tf - Tcal})]} \bullet Y \bullet \boxed{\frac{2 \cdot \text{delta P}}{\text{density}}} \boxed{\frac{2 \cdot \text{delta P}}{\text{density}}}$$

# Pulse, UVC Case

#### Shunt Flow Bypass Flowmeter

volume flow = 
$$\frac{\text{input frequency } \cdot 457 \cdot \text{Epa} \cdot \text{Y}_{\text{m}}}{\sqrt{\text{flowing density } \cdot \text{DC } \cdot \text{bypass calibration favtor}}}$$

#### Gilflo Flowmeter

volume flow at flowing conditions = input flow at design conditions • 
$$\sqrt{\frac{\text{calibration density}}{\text{flowing density}}}$$

NOTE: Therm.Exp.Coef is 10<sup>-6</sup>



7.3.12 ILVA Flow Meter Equations <u>ILVA Flowmeter</u> - This meter type requires an initial linearization using the linearization table. In addition, the following specialized corrections are required.

For Gas/Steam Expansion (imperial)

 $Y = 1 - (115.814 \cdot (dp / p) \cdot 0.0001)$ 

Where:

Y = gas expansion correction (NOTE: Y=1 for liquid) dp = differential pressure - inches water gauge

p = upstream pressure - psia

For Reynolds Number (volumetric calculations for Gas/Steam)

Cre =  $(1 - (n / Qn)^{-1})$ to a maximum value of m

Where:

Cre = Reynolds number correction (NOTE Cre = 1 for liquid)

Qn = nominal water volumetric flowrate (column 6)

m = (see table below) n = (see table below)

Meter Size	n	m
DN50	2.53	1.200
DN80	0.64	1.125
DN100	0.21	1.100
DN150	0.13	1.067
DN200	0.07	1.050

The final gas expansion and Reynolds number correction is:

 $Qc = Qn \cdot Y \cdot Cre$ 

For Volumetric Calculations: (calculate the density corrected volumetric flowrate):

Qd = Qc • (Dn / Da)<sup>0.5</sup>

Where:

Qd = density corrected volumetric flowrate

Qc = nominal water volumetric flowrate (column 6) corrected for

Reynolds Number and gas expansion effects.

Da = actual flowing density of working fluid

Dn = nominal density of water at reference conditions

Once corrected for density a further correction is required to take into account the effect of temperature on the ILVA primary element.

**Temperature Compensation** 

For Volumetric Calculations: Using the value of Qd derived above, the temperature corrected flowrate can be calculated: Qa = ((Ta - Tref) • 0.000189 • Qd) + Qd)

Where: Qa = actual volumetric flowrate

Qd = density corrected volumetric flowrate (from above) Tref = reference temperature in °C (generally 20°C) Ta = actual flowing temperature of working fluid (in °C)

It is possible to convert from a mass flowrate to a volumetric flowrate and vice versa using the following simple formula: **Ma = Qn • Da** 

Where: Da = actual flowing density of working fluid



#### 7.4 Computation of the DP Factor

It is assumed that the user has the printout from a standardized sizing program for the particular device he will be using. Such standardized printouts list all the necessary information which the user will then be prompted for by the instrument or diskette.

It is also important that the user select the flow equation to be used and either select or enter the following items:

Flowmeter Type

The fluid type or the fluid properties applicable to the fluid to be measured Beta, Meter Exp. Coeff., Inlet Pipe Bore

Reference Conditions of temperature, pressure, Z and calibration temperature

The user is prompted for the following:

mass flow or volume flow or corrected volume flow as indicated by the flow equation Differential Pressure

Inlet Pressure

**Temperature** 

Density

Isentropic Exponent

The unit then computes the following results corresponding to the user entry conditions and appropriate methods:

Υ

Finally the DP Factor is computed as follows:

$$\frac{Steam \, Case}{DP \, Factor = } \frac{ \text{mass flow} \cdot [1 - \text{Meter Exp.Coeff.} \cdot (\, \text{Tf} - \text{T}_{cal})] }{ \text{Y} \cdot [\, 2 \cdot \text{delta} \, \text{P} \cdot \text{density}]^{1/2}}$$

$$\frac{Liquid \, Case}{DP \, Factor = } \frac{ \text{volume} \cdot [1 - \text{Meter Exp.Coeff.} \cdot (\, \text{Tf} - \text{T}_{cal})] }{ \left[ \frac{2 \cdot \text{delta} \, \text{P}}{\text{density}} \right]^{1/2}}$$

$$\frac{Gas \, Case}{Std. \text{Vol.Flow} \cdot \text{ref density} \cdot [1 - \text{Meter Exp.Coeff.} \cdot (\, \text{Tf} - \text{T}_{cal})]}$$

## **Application Hint:**

DP Factor =

The user may reenter this DP Factor multiple times to assist him in assembling the table points of DP Factor and Reynold's Number necessary to construct a 16 point table for the meter run.

Y • [ 2 • delta P • density]1/2

**NOTE:** Meter Exp.Coef is (x10<sup>-6</sup>)



#### 8. RS-232 Serial Port

#### 8.1 RS-232 Port Description:

The ES762-ST2 has a general purpose RS-232 Port which may be used for any one of the following purposes:

Transaction Printing, Data Logging, Remote Metering by Modem, Computer Communication Link, Configuration by Computer, Print System Setup, Print Calibration/Malfunction History

# 8.2 Instrument Setup by PC's over Serial Port

A Diskette program is provided with the ES762-ST2 that enables the user to rapidly configure the ES762-ST2 using a Personal Computer. Included on the diskette are common instrument applications which may be used as a starting point for your application. This permits the user to have an excellent starting point and helps speed the user through the instrument setup.

#### 8.3 Operation of Serial Communication Port with Printers

ES762-ST2's RS-232 channel supports a number of operating modes. One of these modes is intended to support operation with a printer in metering applications requiring transaction printing, data logging and/or printing of calibration and maintenance reports.


For transaction printing, the user defines the items to be included in the printed document. The user can also select what initiates the transaction print generated as part of the setup of the instrument. The transaction document may be initiated via a front panel key depression.

In data logging, the user defines the items to be included in each data log as a print list. The user can also select when or how often he wishes a data log to be made. This is done during the setup of the instrument as either a time of day or as a time interval between logging.


The system setup and maintenance report list all the instrument setup parameters and usage for the current instrument configuration. In addition, the Audit trail information is presented as well as a status report listing any observed malfunctions which have not been corrected.

The user initiates the printing of this report at a designated point in the menu by pressing the print key on the front panel.

#### 8.4 ES762-ST2 RS-232 Port Pinout



- 1 Handshake Line (cd in)
- 2 Transmit (tx)
- 3 Receive (rx)
- 4 Do Not Use
- 5 Ground
- 6 Do Not Use
- 7 RTS out
- 8 Do Not Use
- 9 DC Power Out\*

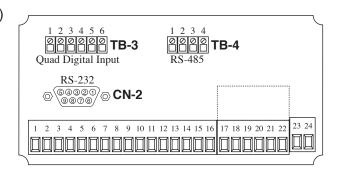

<sup>\* 8</sup> VDC Power supplied on Pin 9 to power modem



# 9. RS-485 Serial Port (optional)

# 9.1 RS-485 Port Description:

The ES762-ST2 has a an optional general purpose RS-485 Port which may be used for any one of the following purposes:

Accessing Process Parameters

Rate, Temperatures, Pressures, Density, Time & Date, Setpoints,

AUX 3, AUX 4, AUX 3 - AUX 4.

Accessing System Alarms

System, Process, Self Test, Service Test Errors

**Accessing Totalizers** 

Heat, Mass, Volume Totalizers and Grand Totalizers,

AUX TOTAL 1, 2, 3, 4

**Executing Various Action Routines** 

Reset Alarms, Reset Totalizers, Print Transaction, Reset Error History,

#### 9.2 General

The optional RS-485 card utilizes Modbus RTU protocol to access a variety of process parameters and totalizers. In addition, action routines can be executed. For further information, contact factory and request RS-485 Protocol manual.

# 9.3 Operation of Serial Communication Port with PC

The flow computer's RS-485 channel supports a number of Modbus RTU commands. Refer to port pinout (below) for wiring details. Modbus RTU drivers are available from third party sources for a variety of Man Machine Interface software for IBM compatible PC's.

The user reads and writes information from/to the RS-485 using the Modbus RTU commands. The ES762-ST2 then responds to these information and command requests.

Process variables and totalizers are read in register pairs in floating point format. Time and date are read as a series of integer register values. Alarms are individually read as coils. Action routines are initiated by writing to coils.



#### 9.4 ES762-ST2 with RS-485 & Modbus RTU Protocol

When the ES762-ST2 is equipped with the RS-485 communication option, the protocol it uses is the Modbus RTU protocol. This protocol defines a message structure that hosts and clients will recognize and use on the RS-485 network over which they communicate. It describes the process a master device (PC compatible) uses to request access to another device (ES762-ST2), how it will respond to requests from the other devices, and how errors will be detected and reported. It establishes a common format for the layout and contents of message fields.

During communications on a Modbus RTU network, the protocol determines how each ES762-ST2 will know its device address, recognize a message addressed to it, determine the kind of action to be taken, and extract any data or other information contained in the message. If a reply is required, the ES762-ST2 will construct the reply message and send it using Modbus RTU protocol.

#### **RTU Mode**

The ES762-ST2 with RS-485 communications option supports the Modbus RTU (Remote Terminal Unit) mode only. The Modbus ASCII mode is not supported. The main advantage of the RTU mode is that its greater character density allows better data throughput than ASCII for the same baud rate. The Modbus RTU uses a Master-Slave Query-Response Cycle in which the ES762-ST2 is the slave device.

#### **Control Functions**

The ES762-ST2 with RS-485 communications option supports the following function codes:

CODE	<u>NAME</u>	<u>DESCRIPTION</u>
01	Read Coil Status	Read a single coil
03	Read Holding Register	Read a range of holding registers
05	Force Single Coil	Forces a single coil (0x reference) to either ON or OFF
06	Preset Single Register	Presets a value into a single holding register (4x reference)
15	Force Multiple Coil	Forces each coil (0x reference) in a sequence of coils to either ON or OFF
16	Preset Multiple Registers	Presets values into a sequence of holding registers (4x reference)



# ES762-ST2 RS-485 Port Pinout (Terminal Block Option)

Terminal Block (TB-4) (optional)


Term Designation
1 COM

2 Terminating Resistor

(Connect to TX+ to terminate line)

3 TX+

4 TX-

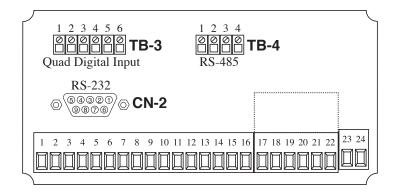

#### **Installation Overview**

A two wire RS-485 may be multidropped up to 4000 ft. and up to 32 units may be chained together. A RS-485 to RS-232 interface adapter is required at the PC. An optically isolated type is recommended. Suitable wiring should be selected based on anticipated electrical interference. Terminators should be used to help improve the quality of electronic signals sent over the RS-485 wires. The RS-485 chain should be terminated at the beginning (RS-485 adaptor) and at the last device in the RS-485 chain and nowhere else. On the ES762-ST2 this is accomplished by connecting a jumper from the terminal labeled TX/RX(+) at the RS-485 port. If lightning protection is required, a suitable surge protector should be used.

For additional information, refer to the technical requirements of EIA-485, interface adaptor user manual and the communication software user manual

## **ES762-ST2 Communication Setup Menu**

The setup menu allows Modbus RTU Protocol communications parameters of: Device ID, Baud Rate, and Parity to be selected to match the parameters of your RS-485 network. Each ES762-ST2 must have it's own Device ID and the same Baud Rate and Parity setting.



# Register & Coil Usage

**Register Usage** (each register is 2 bytes)

**REGISTER USAGE** (each register is 2 bytes)

ES762-ST2 Data	<u>Register</u>	Data Type
Heat Flow	Reg 40001 & 40002	Float
Mass Flow	Reg 40003 & 40004	Float
Aux3 – Aux 4	Reg 40005 & 40006	Float
Volume Flow	Reg 40007 & 40008	Float
Temperature 1	Reg 40009 & 40010	Float
Temperature 2	Reg 40011 & 40012	Float
Delta Temperature	Reg 40013 & 40014	Float
Process Pressure	Reg 40015 & 40016	Float
Diff. Pressure	Reg 40017 & 40018	Float
Density	Reg 40019 & 40020	Float
Specific Enthalpy	Reg 40021 & 40022	Float
Heat Total	Reg 40023 & 40024	Float
Mass Total	Reg 40025 & 40026	Float
Aux Total 1	Reg 40027 & 40028	Float
Volume Total	Reg 40029 & 40030	Float
Heat Grand Total	Reg 40031 & 40032	Float
Mass Grand Total	Reg 40033 & 40034	Float
Aux Grand Total 1	Reg 40035 & 40036	Float
Volume Grand Total	Reg 40037 & 40038	Float
Alarm Point 1	Reg 40039 & 40040	Float
Alarm Point 2	Reg 40041 & 40042	Float
Alarm Point 3	Reg 40043 & 40044	Float
Year	Reg 40045	Integer
Month	Reg 40046	Integer
Day	Reg 40047	Integer
Hours	Reg 40048	Integer
Min	Reg 40049	Integer
Sec	Reg 40050	Integer
Peak Demand	Reg 40051 & 40052	Float
Demand Last	Reg 40053 & 40054	Float
Viscosity	Reg 40055 & 40056	Float
Abs. Viscosity	Reg 40057 & 40058	Float
Aux 4	Reg 40059 & 40060	Float
Power Lost Hour	Reg 40061	Integer
Power Lost Min.	Reg 40062	Integer
Aux 3	Reg 40063 & 40064	Float
Aux 2 Total	Reg 40065 & 40066	Float
Aux 2 Grand Total	Reg 40067 & 40068	Float
Aux 3 Total	Reg 40069 & 40070	Float
Aux 3 Grand Total	Reg 40071 & 40072	Float
Aux 4 Total	Reg 40073 & 40074	Float
Aux 4 Grand Total	Reg 40075 & 40076	Float
Time base	Reg 40077	Integer
Heat Flow Units	Reg 40078	Integer



# Register & Coil Usage (continued)

ES762-ST2 Data  Mass Flow Units Corrected Volume Flow Units Vol. Flow Units Temperature Units Pressure Units Density Units Heat Total Units Mass Total Units Unused Vol. Total Units Barrel Type Units Specific Enthalpy Units Length Units Calibration trail Configuration trail Tag Number Peak Year Peak Month Peak Day Peak Hours Peak Min Unused	Register Reg 40079 Reg 40080 Reg 40081 Reg 40082 Reg 40084 Reg 40085 Reg 40086 Reg 40087 Reg 40089 Reg 40090 Reg 40091 Reg 40092 Reg 40093 Reg 40094 Reg 40095 Reg 40096 Reg 40097 Reg 40098 Reg 40099 Reg 40090 Reg 40101 & 40102 Reg 40100 Reg 40101 & 40102 Reg 40103 & 40104 Reg 40107 & 40108 Reg 40109 & 40110 Reg 40111 & 40112 Reg 40111 & 40112 Reg 40113 & 40114	Integer Intege
Unused Unused	Reg 40107 & 40108 Reg 40109 & 40110	Float Float

COIL USAGE (each coil is 1 bit)

ES762-ST2 Data	Coil	Data Type
System Alarm Power Failure	Coil 00001	bit
System Alarm Watchdog	Coil 00002	bit
System Alarm Communication Error	Coil 00003	bit
System Alarm Calibration Error	Coil 00004	bit
System Alarm Print Buffer Full	Coil 00005	bit
System Alarm Totalizer Error	Coil 00006	bit
Sensor/Process Alarm Wet Steam Alarm	Coil 00007	bit
Sensor/Process Alarm Off Fluid Table	Coil 00008	bit
Sensor/Process Alarm Flow In Over Range	Coil 00009	bit
Sensor/Process Alarm Input 1 Over Range	Coil 00010	bit
Sensor/Process Alarm Input 2 Over Range	Coil 00011	bit
Sensor/Process Alarm Flow Loop Broken	Coil 00012	bit
Sensor/Process Alarm Loop 1 Broken	Coil 00013	bit
Sensor/Process Alarm Loop 2 Broken	Coil 00014	bit
Sensor/Process Alarm RTD 1 Open	Coil 00015	bit



# Register & Coil Usage (continued)

ES762-ST2 Data	Coil	<b>Data Type</b>
Sensor/Process Alarm RTD 1 Short	Coil 00016	bit
Sensor/Process Alarm RTD 2 Open	Coil 00017	bit
Sensor/Process Alarm RTD 2 Short	Coil 00018	bit
Sensor/Process Alarm Pulse Out Overrun	Coil 00019	bit
Sensor/Process Alarm Iout 1 Out Of Range	Coil 00020	bit
Sensor/Process Alarm Iout 2 Out Of Range	Coil 00021	bit
Sensor/Process Alarm Relay 1 Hi Alarm	Coil 00022	bit
Sensor/Process Alarm Relay 1 Lo Alarm	Coil 00023	bit
Sensor/Process Alarm Relay 2 Hi Alarm	Coil 00024	bit
Sensor/Process Alarm Relay 2 Lo Alarm	Coil 00025	bit
Sensor/Process Alarm Relay 3 Hi Alarm	Coil 00026	bit
Sensor/Process Alarm Relay 3 Lo Alarm	Coil 00027	bit
Service Test 24Vdc Out Error	Coil 00028	bit
Service Test Pulse In Error	Coil 00029	bit
Service Test Input 1 Vin Error	Coil 00030	bit
Service Test Input 1 lin Error	Coil 00031	bit
Service Test Input 2 lin Error	Coil 00032	bit
Service Test Input 2 RTD Error	Coil 00033	bit
Service Test Input 3 lin Error	Coil 00034	bit
Service Test Input 3 RTD Error	Coil 00035	bit
Service Test Pulse Out Error	Coil 00036	bit
Service Test lout 1 Error	Coil 00037	bit
Service Test lout 2 Error	Coil 00038	bit
Service Test Relay 1 Error	Coil 00039	bit
Service Test Relay 2 Error	Coil 00040	bit
Service Test RS232 Error	Coil 00041	bit
Self Test A/D Malfunction	Coil 00042	bit
Self Test Program Error	Coil 00043	bit
Self Test Setup Data Lost	Coil 00044	bit
Self Test Time Clock Lost	Coil 00045	bit
Self Test Display Malfunction	Coil 00046	bit
Self Test Ram Malfunction	Coil 00047	bit
Reserved	Coil 00048	bit
Reset Totalizer	Coil 00049	bit bit
Reset All Error Codes Reset Alarm 1	Coil 00050 Coil 00051	
Reset Alarm 2	Coil 00051	bit bit
Reset Alarm 3	Coil 00052	bit
Print Transaction Document	Coil 00053	bit
Reset Peak	Coil 00055	bit
Reset Power	Coil 00055	bit
I/O	Coil 00057	bit
Reset Aux. 1 Total	Coil 00057	bit
Loop 3 Over Range	Coil 00059	bit
Loop 4 Over Range	Coil 00060	bit
Loop 3 Broken	Coil 00061	bit
Loop 4 Broken	Coil 00062	bit
Flowmeter Location	Coil 00063	bit
Unused	Coil 00064	bit
	23.1 0000 1	-510



# 10. Flow Computer Setup Software

The ES762-ST2 setup program provides for configuring, monitoring and controlling a ES762-ST2 unit. Sample applications are stored in disk files. The setup program calls these *Templates*. You can store the setup from the program's memory to either the ES762-ST2 (*Downloading* the file) or to a disk file (*Saving* the file) for later usage. Similarly you can load the setup in program memory from either a disk file (*Opening* a file) or from the ES762-ST2 unit (*Uploading* a file).

The program can monitor outputs from the unit while it is running.

The program can reset alarms and totalizers.

The peak demand may be reset when the option is supplied.

For assistance there are mini-helps at the bottom of each screen in the program. There is also context sensitive help available for each screen accessible by pressing the F1 key.

# 10.1 System Requirements:

IBM PC or compatible with 386 or higher class microprocessor

4 MB RAM

3 MB free disk space

VGA or higher color monitor at 640 x 480

Microsoft® Windows™ 3.1 or 3.11 or Windows 95/98™, XP, VISTA32

Communication Port - RS-232

RS-232 Cable (customer supplied)

# 10.2 Cable and Wiring Requirements:

The serial communication port on your PC is either a 25 pin or 9 pin connector. No cabling is supplied with the setup software. A cable must be purchased separately or made by the user. It is recommended to purchase a serial cable which matches the available communication port on you PC and a 9 pin male connection for the ES762-ST2 serial port.

#### 10.3 Installation for Windows™

The Setup Software includes an installation program which copies the software to your hard drive. Insert Setup Disk 1 in a floppy drive.

In the Program Manager, click File, and then select Run.

NOTE: For Windows 95™ Click the Start button, select Run and proceed as follows:

Type the floppy drive letter followed by a colon (:) and a backslash (\), and the word setup. For Example: a:\setup

Follow the instructions on your screen.

## 10.4 Using the Flow Computer Setup Software

The setup software window consists of several menu "Tabs". Each tab is organized into groups containing various configuration and/or monitoring functions. To view the tab windows, simply click on the tab. The previous tab window will be hidden as the new tab window is brought to the foreground.

**Caution:** It is required that the ES762-ST2 unit which is being configured be kept in the operating mode while using the setup diskette. If not, uncertainty exists as to what information will be retained when the session is concluded.

#### 10.5 File Tab

The File Tab has three sections. Any of the options on this tab can also be accessed from the File submenu

The **Template Section** provides for opening and saving templates. The *Save* and *Save As* buttons provide the standard Windows functionality for dealing with files. The Open button is used to open existing templates.



The *Open* option allows for creating custom templates using the existing template in memory as the starting point. Assign a new name for this template. The template will be saved under this new name.

A typical scenario using the setup program would be the following:

- Open up a predefined template from the supplied list
- Choose 'Save As' to save this to a new file name
- Proceed to customize the template by making any changes that are needed
- Save the template to disk (if you want to reuse this template)
- Download the template to an attached unit.

The **Communications with ES762-ST2 Section** allows the user to upload the setup from the unit or download the program's current template to the unit.

The **Print (report) Section** allows the user to:

- 1. Configure the current Windows printer through the Select Printer option.
- 2. Print a Maintenance Report through the PC's printer using the Print Maintenance option.
- 3. Print the current setup through the PC's printer using Print Setup option.

## 10.6 Setup Tab

The Setup tab is where the majority of the ES762-ST2 instrument setup modifications are done. The Setup tab is divided into five sections.

**System Section:** Parameters, Display, Units

**Input Section:** Flow, Fluid, Compensation Inputs

Output Section: Pulse, Currents

Relay Section: Relays

Other Settings Section: Administration, Communication, Printing

NOTE: Many setup items are enabled or disabled depending on previous setup

selections, It is important to work your way through the above list in the order shown. Be sure to verify your selections when you are through programming to insure that no settings were changed automatically.



## 10.7 View Tab

The View Tab screen allows for viewing selected group items on the PC in a similar format to that shown on the unit display. Data from the following groups can be viewed in the List of Values section:

Process Parameters (i.e. rate, temperature)

Totalizers (i.e. total, grand total)

Input Signals

**Analog Output** 

**Error Status** 

ES762-ST2 Software Version Information

The setup software assumes the current setup has been uploaded from the flow computer into the PC. It is important that the setup program and the ES762-ST2 unit are using the same setup information at all times or the data will be inconsistent. It is best to upload or download the setup before using this feature to synchronize the setups.

## Error Log

Data from the error logger is viewed in a separate Error Log section on the screen.

To start the viewer, first check the boxes of items to view and then click the start button. The data will appear in the appropriate sections and will be continuously updated. The refresh rate is dependent on the number of items that are being viewed and the baud rate of the connection. Data in the List of Values section can be collapsed by clicking on the 'minus' sign in front of the group title. The data can be expanded by clicking on the 'plus' sign in front of the group title. If a group is collapsed and data in the group changes on refresh, the group will automatically expand. Data in the Error Log section does not expand or collapse. Changing the view items requires stopping the current viewing, checking the new selections and then restarting the viewer.

If communication errors occur while reading data from the ES762-ST2 device, the word 'Error' will appear in place of the actual value. If the connection to the ES762-ST2 is lost, the viewer will time out with a message saying the device is not responding.

The viewer will attempt to communicate with the ES762-ST2 device matching the device ID set in the communications screen. If you are having trouble establishing communication, compare settings for the PC and the flow computer. Also verify the connections between the PC and flow computer.

## 10.8 Misc. Tab

This tab has three sections: Tools, Actions and Options.

The tools section contains various system administration activities such as creating/modifying the initial sign-on screen or create print headers.

The Actions section is used to send commands to the ES762-ST2 unit.

Reset Totalizers, Reset Alarms, Simulations, Self Check, Reset Peak Demand (if equipped)

The Options section has the following selections:

**Network Card Configuration** 

Additional capabilities may be provided in the future.



## 11. Glossary of Terms

## **Access Code**

A numeric password which is entered by a user attempting to gain entry to change setup parameters.

#### AGA-3

A empirical flow equation applicable to orifice and several other square law flowmeters.

### AGA-5

A gas flow equation for computing the combustion heat flow from measured volume flow, temperature and pressure as well as stored gas properties.

#### AGA-7

A gas flow equation for pulse producing, volumetric flowmeters which computes the equivalent flow at reference conditions from the measurements made at flowing line conditions.

## **Assign Usage**

A menu selection during the setup of the instrument which selects the intended usage for the input/output.

#### **Barometric Pressure**

An entry of the average, local atmospheric pressure at the altitude or elevation of the installation. (typically 14.696 psia)

#### Beta

A important geometric ratio for a square law flowmeters.

#### Calibration

An order sequence of adjustments which must be performed in order for the equipment to operate properly.

## **Calibration Temperature**

The temperature at which a flow sensor was calibrated on a test fluid.

#### **Combustion Heat**

The energy released by a fluid fuel during combustion .

## Default

A value to be assumed for manual inputs or in the event of a failure in a input sensor.

## **Display Damping**

An averaging filter constant used to smooth out display bounce.

## DP Factor

A scaling constant for a square law flowmeter.

## **Error Log**

A historical record which captures errors which have occurred.

## Flow Equation

A recognized relationship between the process parameters for flow, temperature, pressure and density used in flow measurements.

## **Galvanic Isolation**

Input and or output functions which do not share a conductive ground or common connection between them.

## Gas Cor. Vol Eq.

An equation where the corrected volume flow of gas at STP is computer from measured volume flow, temperature and pressure as well as stored gas properties.

## Gas Comb. Heat Eq.

An equation where the combustion heat flow of gas is computer from measured volume flow, temperature and pressure as well as stored gas properties.

## Gas Mass Eq.

An equation where the mass flow of gas is computer from measured volume flow, temperature and pressure as well as stored gas properties.

## Flowing Z-Factor

The mean Z-Factor under flowing conditions of temperature and pressure for a specific gas.



## 11. Glossary of Terms (Continued)

#### **Full Scale**

The value of the process variable at the full scale or maximum input signal.

## **Inlet Pipe Bore**

The internal pipe diameter upstream of the flow measurement element.

## **Isentropic Exponent**

A property of a gas or vapor utilized in orifice meter calculations.

#### K-Factor

The calibration constant for a pulse producing flowmeter expressed in pulses per unit volume

#### Linear

A flow measurement device where the output signal is proportional to flow.

## Linear 16 Pt.

A mathematical approximation to a nonlinear device where by a correction factor or K-Factor table as a function of input signal is utilized to eliminate flowmeter nonlinearity.

#### **Low Flow Cutoff**

The value of input signal below which flow rate may be assumed to be 0 and at which totalization will cease.

#### Low Scale

The value of the process variable at the zero input signal.

#### Manual

An entry value to be used as a fixed condition in a equation

## Meter Exp. Coef.

A coefficient in an equation which may be used to correct for changes in flowmeter housing dimensioned changes with temperature.

## Protoco

An agreed upon method of information exchange.

## **Print Initiate**

A user specified condition which must be satisfied for a transaction document to be printed.

## **Pulse Type**

A menu selectable equivalent pulse output stage.

## **Pulse Value**

An output scaling factor defining the equivalent amount of flow total represented by 1 output pulse.

## Ref. Z-Factor

The Z-Factor for a gas at reference conditions of temperature and pressure.

## Ref. Density

The density of a fluid at reference conditions of temperature and pressure.

## **Relay Function**

The assigned usage for a relay output.

## **Relay Mode**

The user's desired operating mode for the relay. Examples: follow, latch, timed pulse, above setpoint, below setpoint

## Safe State

The state of an instrument's outputs which will occur during a power down state. The state the instrument assumes when the computations are paused.

## **Scroll List**

The user's desired display list which can be presented on the two list display on Line 1 and/or L2 when the SCROLL key is depressed.

## **Self Check**

A diagnostic sequence of steps a unit performs to verify it's operational readiness to perform it's intended function.



## 11. Glossary of Terms (Continued)

#### **Service Test**

A diagnostic sequence requiring specialized test apparatus to function to verify system readiness.

## Setpoint

An alarm trip point.

#### Simulation

A special operating mode for an output feature which enables a service personnel to manually exercise the output during installation or trouble shooting operations.

## **Square Law Flowmeters**

Types of measurement devices which measure differential pressure across a known geometry to make a flow measurement.

## SQR LAW (Square Law w/o SQRT)

A square law flow measurement device equipped with a pressure transmitter with out a integral square root extractor.

## SQR LAW-LIN (Square Law w/ SQRT)

A square law flow measurement device equipped with a pressure transmitter with integral square root extraction.

## **SQR Law 16PT (Square Law 16pt)**

A mathematical approximation to a square law device where the discharge coefficient is represented as a table of DP Factor vs Reynold's Number.

### **Steam Delta Heat**

A computation of the net heat of saturated steam equal to the total heat of steam minus the heat of water at the measured actual temperature.

## **Steam Heat**

A computation of the total heat of steam.

## **Steam Net Heat**

A computation of the net heat of steam equal to the total heat of steam minus the heat of water at the same saturated temperature.

## **STP Reference**

The user's desired pressure and/or temperature to be considered as the reference condition in the computation of fluid properties or corrected volume conditions.

## **TAG**

An alphanumeric designation for a particular instrument.

## **Time Constant**

An averaging filter constant used to reduce bounce on the analog output. The high the number the slower the response, the greater filtering.

## **UVC**

Universal Viscosity Curve is a representation of the calibration factor for a turbine flowmeter. It is expressed as a table of K-Factor as a function of Hz/CSTKS.

## **Viscosity Coef**

A parameter in an equation which is used to estimate the viscosity as a function of temperature.



## 12. Diagnosis and Troubleshooting

## 12.1 Response of ES762-ST2 on Error or Alarm:


Error indications which occur during operation are indicated alternately with the measured values. The ES762-ST2 Flow Computer has four types of error:

TYPE OF ERROR	DESCRIPTION
System Alarms	Errors detected due to system failure
Sensor/Process Alarms	Errors detected due to sensor failure or process alarm conditions
Service Test Errors	Errors detected due to problems found during service test. (Service test can only be performed by qualified Factory service technicians because service code and special equipment are needed)
Self Test Errors	Errors detected during self test. (Each time the unit is powered, it runs a self test)

## 12.2 Diagnosis Flow Chart and Troubleshooting

All instruments undergo various stages of quality control during production. The last of these stages is a complete calibration carried out on state-of-the-art calibration rigs.

A summary of possible causes is given below to help you identify faults.

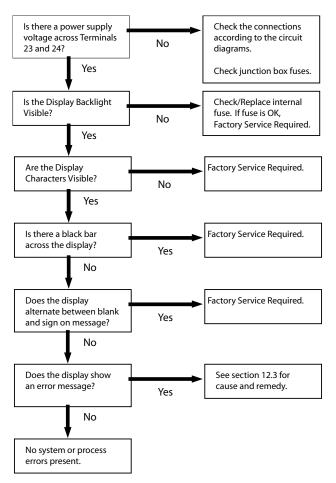



## 12.3 Error Messages:

**NOTE:** The 24 VDC output has a self resetting fuse.

Error Message	Cause	Remedy		
POWER FAILURE	Power has been interrupted	Acknowledge Error Remedy not required		
WATCHDOG TIMEOUT	Possible transient	Acknowledge Error Remedy not required		
COMMUNICATION ERROR	Possible Improper wiring or usage Message Transmission failure.	Check wiring and communication settings / protocol		
CALIBRATION ERROR	Operator Error	Repeat Calibration		
PRINT BUFFER FULL	Print buffer full, Data may be lost	Check paper and printer connections		
WET STEAM ALARM	Temperature or pressure input has gone below the saturated steam range of the internal steam tables	Check application, Insure that all sensors are working properly		
OFF FLUID TABLE	Temperature or pressure input has gone below or exceeded the range of the internal steam tables	Check application, Insure that all sensors are working properly		
FLOW IN OVERRANGE	Flow input has exceeded input range (if stacked, may be lo or hi transmitter)	Check sensor calibration		
INPUT 1 OVERRANGE	Input 1 signal from sensor has exceeded input range	Check sensor calibration		
INPUT 2 OVERRANGE	Input 2 signal from sensor has exceeded input range	Check sensor calibration		
INPUT 3 OVERRANGE	Input 3 signal from sensor has exceeded input range	Check sensor calibration		
INPUT 4 OVERRANGE	Input 4 signal from sensor has exceeded input range	Check sensor calibration		
FLOW LOOP BROKEN	Open circuit detected on flow input (if stacked, may be lo or hi transmitter)	Check wiring and sensor		
LOOP 1 BROKEN	Open circuit detected on input 1	Check wiring and sensor		
LOOP 2 BROKEN	Open circuit detected on input 2	Check wiring and sensor		
LOOP 3 BROKEN	Open circuit detected on input 3	Check wiring and sensor		
LOOP 4 BROKEN	Open circuit detected on input 4	Check wiring and sensor		
RTD 1 OPEN	Open circuit detected on RTD 1 input	Check wiring and RTD		
RTD 1 SHORT	Short circuit detected on RTD 1 input	Check wiring and RTD		



## 12.3 Error Messages: (Continued)

Error Message	Cause	Remedy			
RTD 2 OPEN	Open circuit detected on RTD 2 input	Check wiring and RTD			
RTD 2 SHORT	Short circuit detected on RTD 2 input	Check wiring and RTD			
PULSE OUT OVERRUN	Pulse output has exceeded the internal buffer	Adjust pulse value or pulse width			
Iout 1 OUT OF RANGE	Current output 1 is below or above specified range	Adjust the "0"/ "Full Scale" values or increase/ lower flowrate			
lout 2 OUT OF RANGE	Current output 1 is below or above specified range	Adjust the "0"/ "Full Scale" values or increase/ lower flowrate			
TOTALIZER ERROR					
RELAY 1 HI ALARM	Relay 1 is active due to high alarm condition	Not required			
RELAY 1 LO ALARM	Relay 1 is active due to low alarm condition	Not required			
RELAY 2 HI ALARM	Relay 2 is active due to high alarm condition	Not required			
RELAY 2 LO ALARM	Relay 2 is active due to low alarm condition	Not required			
RELAY 3 HI ALARM	Relay 3 is active due to high alarm condition	Not required			
RELAY 3 LO ALARM	Relay 3 is active due to low alarm condition	Not required			
24VDC OUT ERROR	24V output error detected during service test run	By Factory Service			
PULSE IN ERROR	Pulse input error detected during service test run	By Factory Service			
INPUT 1 Vin ERROR	Error detected on input 1 voltage input during service test run	By Factory Service			
INPUT 1 lin ERROR	Error detected on input 1 current input during service test run	By Factory Service			
INPUT 2 lin/RTD ERROR	Error detected on input 2 during service test run	By Factory Service			
INPUT 3 lin/RTD ERROR	Error detected on input 3 during service test run	By Factory Service			



Error Message	Cause	Remedy
PULSE OUT ERROR	Pulse output error detected	By Factory Service
	during service test run	
lout 1 ERROR	Current output 1 error detected during service test run	By Factory Service
lout 2 ERROR	Current output 2 error detected during service test run	By Factory Service
RELAY 1 ERROR	Relay 1 error detected during service test run	By Factory Service
RELAY 2 ERROR	Relay 2 error detected during service test run	By Factory Service
RS-232 ERROR	RS-232 error detected during service test run	By Factory Service
A/D MALFUNCTION	Error detected in A/D converter during self test	By Factory Service
PROGRAM ERROR	Error on access to the program memory	By Factory Service
SETUP DATA LOST	All or part of the EEPROM data for setup is damaged or has been overwritten	Re-Enter setup data, If problem persists, Fac- tory service required
TIME CLOCK LOST	The real time clock data was lost during extended power outage	Re-Enter time and date
DISPLAY MALFUNCTION	A display malfunction has been detected.	By Factory Service
RAM MALFUNCTION	Part or all of the internal RAM is damaged	By Factory Service
TRAP ERROR	Steam trap malfunction	Service steam trap
TRAP BLOWING	Steam trap malfunction	Change error delay
DATALOG LOST	Contents of datalog were corrupt and lost	Clear datalog, Clear errors



## **Appendix A - Fluid Properties Table**

## Fluid Properties Table

## LIQUID

FLUID	REF. DENSITY (lb./ft³)	REF. TEMP. (°F)	COEFF. OF EXPANSION	COMBUSTION HEAT (Btu/lb) LIQUID H <sub>2</sub> 0 and CO <sub>2</sub>	SPECIFIC HEAT (Btu/lb °F)	LIQ.VISC. ANDREDE'S EQUATION COEFF. "A"	VISCOSITY BY ANDREDE'S EQUATION COEFF. "B"
AIR	54.56	-317.8	0.0016262	0	0.45	0.172	0
AMMONIA	42.63	-28.2	0.0005704	0	1.05	0.00157	2228.25
ARGON	86.89	-302.6	0.0014861	0	0.45	0.011291	511.34
CO2	65.333	-10.0	0.0012609	0	0.45	0.000001	5305.44
METHANE	26.48	-258.7	0.0010523	23920	0.80	0.006819	526.08
NATURAL GAS	26.48	-258.7	0.0010523	23920	0.80	0.006819	526.08
NITROGEN	50.44	-320.4	0.0014917	0	0.55	0.006524	434.94
OXYGEN	71.21	-297.4	0.0013458	0	0.41	0.019773	340.29
PROPANE	31.671	60	0.0007178	21690	0.6	0.009969	1267.35
Nx-19	26.48	-258.7	0.0010523	23920	0.80	0.006819	526.08
GASOLINE	46.8	60	0.0003703	20400	0.5	0.045617	1432.26
KEROSENE	51.79	60	0.0002681	18400	0.45	0.004378	3245.78
No. 2 FUEL	58.97	60	0.0000885	17970	0.42	0.000453	4946.15
WATER	62.37	60	0.0001015	0	1	0.001969	3315.61
HYDROGEN	4.41874	-432.2	0.0007259	60620.5	2.336	0.003537	48.5432
ETHYLENE	34.085	-127.5	0.00068257	22292	1	0.000238	26665.90
HELIUM	9.14157	-452.1	0.00011477	0	1	0.0033	0

## GAS


<u> </u>	_	_							
FLUID	REF. DENSITY (lb./ft³)	REF. TEMP. (°F)	REF. Z FACTOR (14.696 PSIA)	Z FACTOR AT 100 PSIA and 60°F	SPECIFIC HEAT (Btu/lb °F)	COMBUSTION HEAT (Btu/lb) LIQUID H <sub>2</sub> O and CO <sub>2</sub>	ISENTROPIC EXPONENT	VISCOSITY BY ANDREDE'S EQUATION COEFF. "A"	VISCOSITY BY ANDREDE'S EQUATION COEFF. "B"
AIR	0.076	60	1	0.997	0.24	0	1.4	0.000138	0.775522
AMMONIA	0.045	60	1	0.955	0.52	0	1.31	0.000013	1.05951
ARGON	0.105	60	1	0.995	0.125	0	1.67	0.00021	0.750757
CO2	0.116	60	1	0.954	0.21	0	1.32	0.000049	0.91136
METHANE	0.042	60	1	0.970	0.55	23920	1.31	0.000018	1.015892
NAT. GAS	0.0456	60	1	0.970	0.55	23920	1.31	0.000018	1.015892
NITROGEN	0.074	60	1	0.998	0.25	0	1.41	0.000202	0.7128734
OXYGEN	0.084	60	1	0.995	0.22	0	1.41	0.000169	0.761811
PROPANE	0.116	60	1	0.870	0.4	21690	1.14	0.00002	0.952092
Nx-19	0.0456	60	1	0.97	0.55	23920	1.31	0.000018	1.015892
HYDROGEN	0.00532	60	1	1.0042	3.42	60620.5	1.405	0.000151	0.647667
ETHYLENE	0.074717	60	1	0.994	0.386	22292	1.244	0.0093	0
HELIUM	0.01055	60	1	1	1.25	0	1.630	0.000209	0.721975



## **Appendix B - Setup Menus**

IUIX D	- Set	up w	enus										
EZ SETUP ACCESS CODE FLOW EQUA- ENTER DATE DAYLIGHT ENTERTIME PRIVATE TAG# ORDER CODE SERIAL# SENSOR SE- TION RIAL#	SCROLL LIST DISPLAY MAX DEC. TOTAL  SCROLL LIST DISPLAY MAX DEC. TOTAL  LIMIT  LIMIT	TIME BASE HEAT FLOW HEAT TOTAL MASS FLOW MASS TOTAL ONLY UNIT FLOW UNIT FLOW UNIT FLOW UNIT FLOW UNIT FLOW UNIT TOTAL UNIT FOR	FLUID TYPE REF. DENSITY THERM, EXP. COMBUSTION SPECIFIC FLOW Z. REF. Z. ISENTROPIC VISCOSITY COEF. B.  COE	FLOWMETER SOURE LAW ILVA SIZE ACCELEBAR INPUT SIGNAL LOW SCALE FULL SCALE HIGH RANGE HIG	1 INPUT SIGNAL LOW SCALE FULL SCALE VALUE CHEALIT STP REFER. CALIBRATION LOW DELTAT VIEW INPUT TRAP ERROR TRAP BROWING  2 INPUT SIGNAL LOW SCALE VALUE NALUE	INPUT SIGNAL LOW SCALE FULL SCALE VALUE VALUE VALUE	PULSE PULSE TYPE PULSE VALUE PULSE WIDTH SIMULATION OUT	ASSIGN CUR. CURRENT LOW SCALE FULL SCALE TIME CON- ASSIGN CUR. CURRENT OUT SELECT OUTPUT ASSIGN CUR. CURRENT ASSIGN CUR. CURRENT SELECT OUTPUT ASSIGN CUR. CURRENT ASSIGN CUR. CURRENT TAMORE TOW SCALE STANT OUTPUT ASSIGN CUR. CURRENT TOW SCALE STANT OUTPUT TOW SCALE STANT OUT	SELECT RELAY FUNC. RELAY MODE UMIT SET. PULSE VALUE PULSE WIDTH HYSTERESIS RELAY SIMULA- RESET ALARM 1, 2 1, 2	RS232 USAGE DEVICEID BAUD RATE PARITY HANDSHAKE PRINT LIST PRINT INTERVAL ONLY INTERVAL FORMAT CONTROL MASTER TOTONLY SCALER DATALOG	PROTOCOL DEVICEID BAUD RATE PARITY MODEMAUTO CALL OUT NO CALL OUT CALL ON NUMBER OF HANGUP FERROR MASK ANSWER	TOTAL SELECT PULSE SCALER LABEL UNITS LABEL MAX, DEC. TOTAL POINT ROLLOVER LIMIT	EXAMINE ERRORLOG SOFTWARE PRINT SYSTEM SELF CHECK AUDITTRAIL (DISPLAY) (DISPLAY) (DISPLAY)
SYSTEM PARAMETER	DISPLAY	SYSTEM UNITS	FLUID DATA	FLOW INPUT	ОТНЕВ	╛	PULSEOUTPUT	CURRENT	RELAYS	COMMUNICATION	NETWORK CARD	AUXILIARY TOTALIZERS	SERVICE & ANALYSIS
	EZ SETUP ACCESS CODE FLOW EQUA- ENTER DATE DAVIGHT ENTERTIME PRIVATE TAG# ORDER CODE SERIAL# SENSOR SE- TION SAVINGS CODE TO BRIVATE TAG# ORDER CODE SERIAL# RIAL# RIAL#	EZ SETUP ACCESS CODE FLOW EQUA. FINER DATE SAVINGS SOURCE TION MAX. DEC. TOTAL BOILT LIST DISPLAY MAX. DEC. TOTAL LINT LINT LIMIT	EZ SETUP ACCESS CODE FLOW EQUA- ENTER DATE SAVINGS CODE TION SCROLL LIST DISPLAY MAX. DEC. TOTAL DAMPING POINT LIMITE BASE HEAT FLOW HEAT TOTAL UNIT UNIT BASE FLOW UNIT TOTAL UNIT UNIT BASE HEAT FLOW UNIT TOTAL UNIT UNIT BASE FLOW UNIT TOTAL UNIT BASE FLOW UNIT FLOW UNIT TOTAL UNIT BASE FLOW UNIT FLOW UNIT FLOW UNIT TOTAL UNIT BASE FLOW UNIT	SCROLL LIST DISPLAY MAX. DEC. ROLLORE RATE OR LOW EQUA. TIME BASE UNIT TIME BASE HEAT FLOW UNIT COE. OR SCROLL STAND THEM. EXP. CORE SERVIL # SENSOR SE.  SCROLL LIST DISPLAY MAX. DEC. TOTAL LINIT LOW UNIT FLOW UNIT FLOW UNIT FOR UNIT FOR SECTION SPECIFIC FACTOR TOTAL UNIT FACTOR F	SCROLL LIST DISPLAY MAX DEC. TOTAL  SAMINGS SCROLL LIST DISPLAY MAX DEC. TOTAL  TIME BASE HEATFLOW HEATFLOW HEATFLOW HEATFLOW HEAT CORP. TOTAL UNIT HEAL SKY COEF. HEAT FLOWNHETER SCHOLL IS THE BASE HIGH RANGE	SCHOLLIST DISPLAY MAX DEC. TOTAL  TIME BASE HEATROW HEATTON HEATTON HEATTON LONG SELOW MAX DEC. HOW STOTAL HOUSE HOUSE HOUSE HEAT FLOW WITH THE BASE HOW WALE HOUSE HOUS	SCROLL LET DISPLAY MASS FORM LOW SOLVE FILL SCROLL LET DISPLAY WALE FOR THE PART SOLVE LAW CONSIDER WALE FALL SCALE FOR THE PART SOLVE LAW CONSIDER WALE WALE WALE WALE WALE WALE WALE WALE	SYSTEM  SYSTEM	SYSTEM DISPLAY  SYSTEM UNITS  THE MAIN TOWN THE MAIN THE	DISPLAY   STORT OF THE BACK   STORT OF THE B	SYSTEM   CHARLER   CHARLE   CHARLE	SYSTEM UNITS	SYSTEM UNITS   STATE   STATE



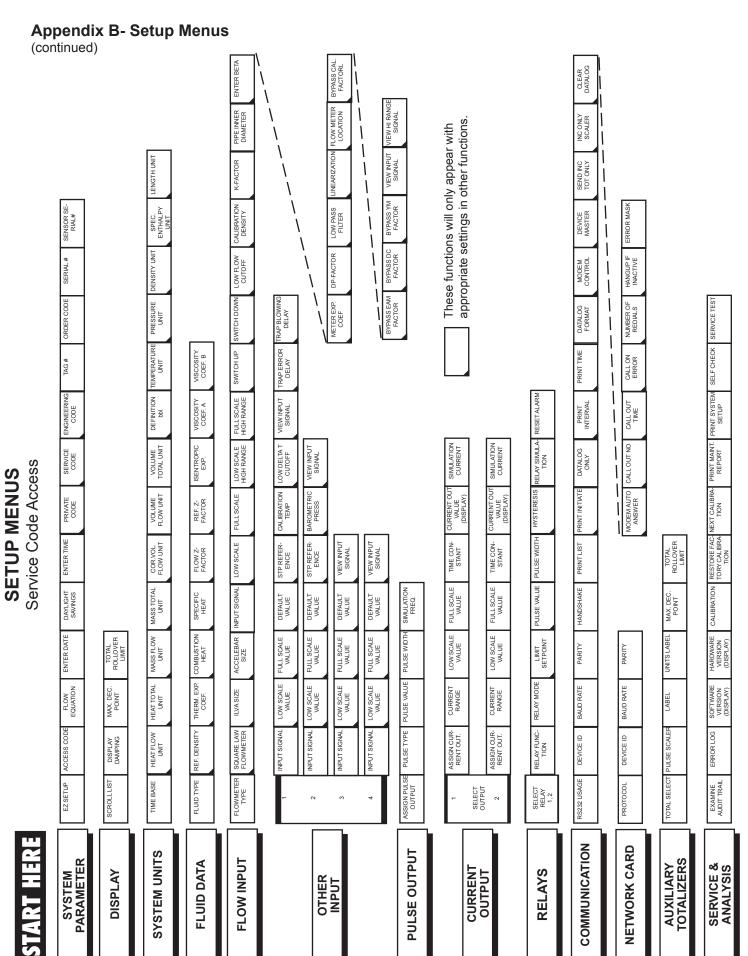



# WARRANTY This product is warranted against defects in materials and workmanship for a period of two (2) years from the date of shipment to Buyer. The Warranty is limited to repair or replacement of the defective unit at the option of the manufacturer. This warranty is void if the product has been altered, misused, dismantled, or otherwise abused. ALL OTHER WARRANTIES, EX-PRESSED OR IMPLIED, ARE EX-CLUDED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WAR-RANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICU-LAR PURPOSE.

DECODING PART NUMBER
Ex: ES762ST2 L 1 1 P 13TB
Series:
ES762ST2 = Utility Metering Flow Computer
Display Type:
L= LCD
V= VFD
Input Type:
1= 85 to 276 VAC
3= 24 VDC (16 to 48 VDC)
Network Card:
1= RS485/Modbus (standard)
Mounting:
P= Panel Mount
*N= NEMA 4 Wall Mount (see MS811)
*W= NEMA 12/13 Wall Mount w/ Clear Cover
Options:
13 = Superchip; 2 relay, Positive heat only (standard)
TB= RS485 Terminal Block standard for
Panel Mount (P) and NEMA4 Wall (N) Mounting Styles
Accessories:
ST2 SETUP PRO - Advanced setup software for ST2 family KEPS-KEP1-32
KEP RS232 for SUPERtrol 1, SUPERtrol 1LE,
SUPERtrol 2 and LEVELtrol 2 • 32 Bit DDE Server
KEPS-MBS32
Supports RS485 for ST1, ST1LE, ST2, LT2, MRT, DRT & MB2 (Modbus RTU)
Modem Available, see MPP-56KN, MPP-2400 and MPP-2400N
Serial printer available, see P1000, P295
Ethernet Port Server available, see IEPS
RS-422/485 to RS-232 Communication Adaptor available, see CA285 RS232 Extender Cable: P/N=13220- <length in="" inches=""></length>
Remote metering and data collection software available, see TROLlink

## Kessler-Ellis Products

10 Industrial Way East Eatontown, NJ 07724

Toll Free: 800-631-2165 Phone: (732) 935-1320 Fax: (732) 935-9344

http://www.kep.com